


**Step 2a.**

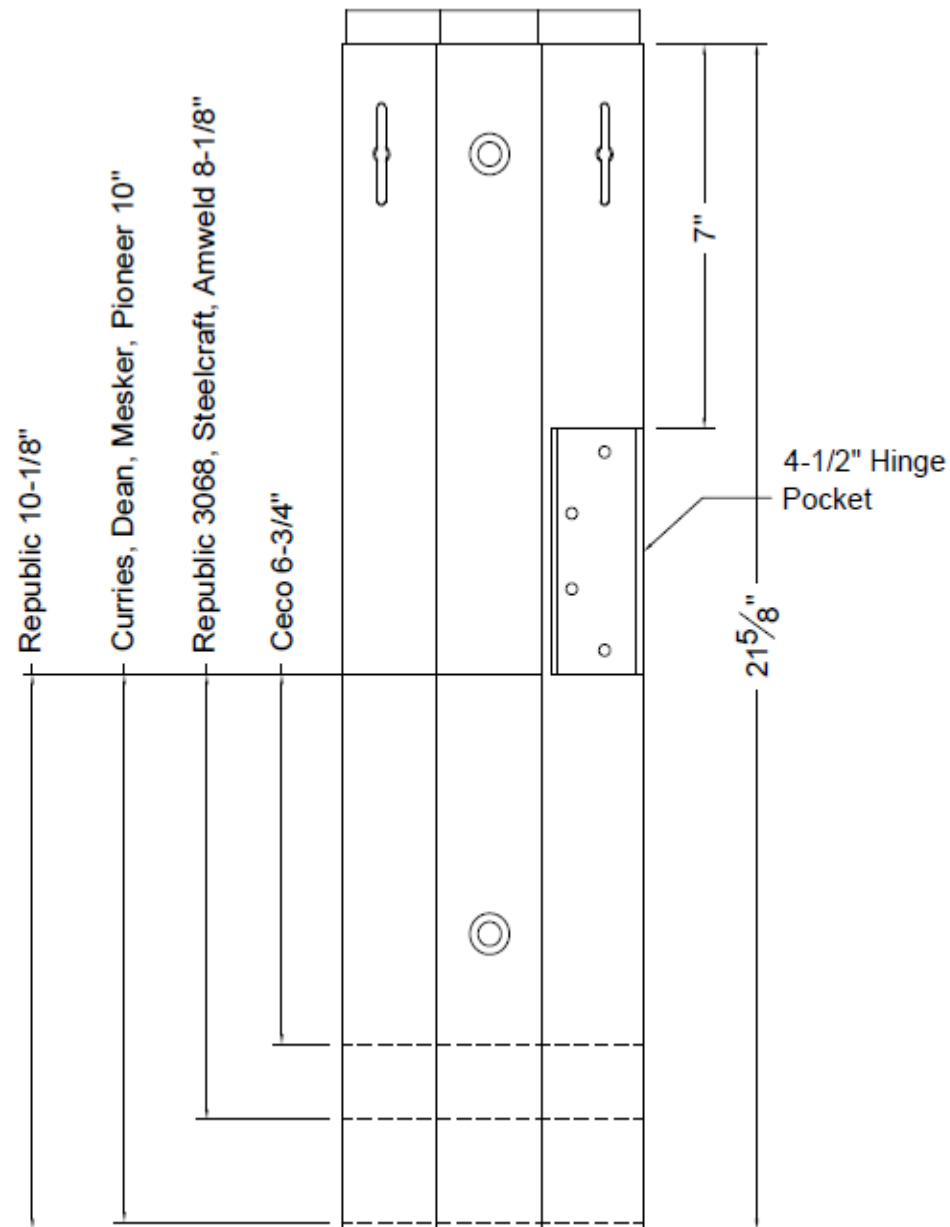

Depending on the manufacturer of the frame, an adjustment may be required to the length of the Jamb Patch. The adjustment is made at the end opposite the sleeve (figure above).

**Note: The dimensions listed by manufacturer are for reference only. Attention should be given to insure the hinge pocket aligns with the hinge located on the door.**



**Note: If its necessary to cut the bottom of the Jamb Patch, a coat of primer paint should be applied to the cut area.**

**Note: If the Jamb Patch must be shortened, cut this end only.**

Return to Step 3 of the standard instructions.

For additional information or to view our other innovative products visit us at:

[www.doorinnovation.com](http://www.doorinnovation.com)



**Hinge Jamb Patch Supplemental Instructions**



US Patent Number 9,284,739 B2

Made In The USA

# Hinge Jamb Patch Cut Line Instruction Sheet

**Note: You will need to remove the door for this repair.**

When installing a hinge side Jamb Patch it is important to make sure the hinge pocket is in the proper location. Substitute step 2 in the standard instructions with the steps in this supplemental instruction.

## Step 2

Starting at the top of the existing bottom hinge pocket measure up 7" and draw a line. See Figures 1 and 2

**Note: Before cutting the existing frame, verify the handing of the Hinge Jamb Patch matches the frame handing.**

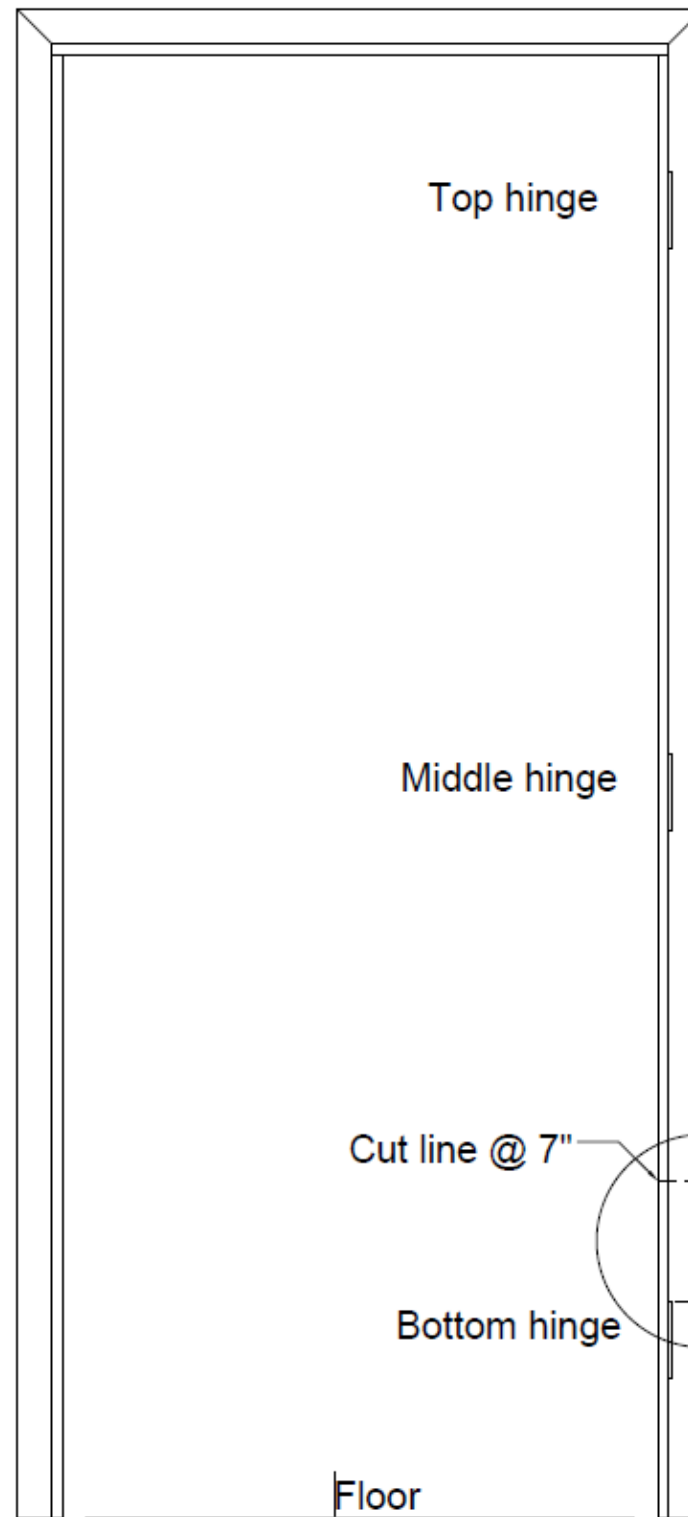
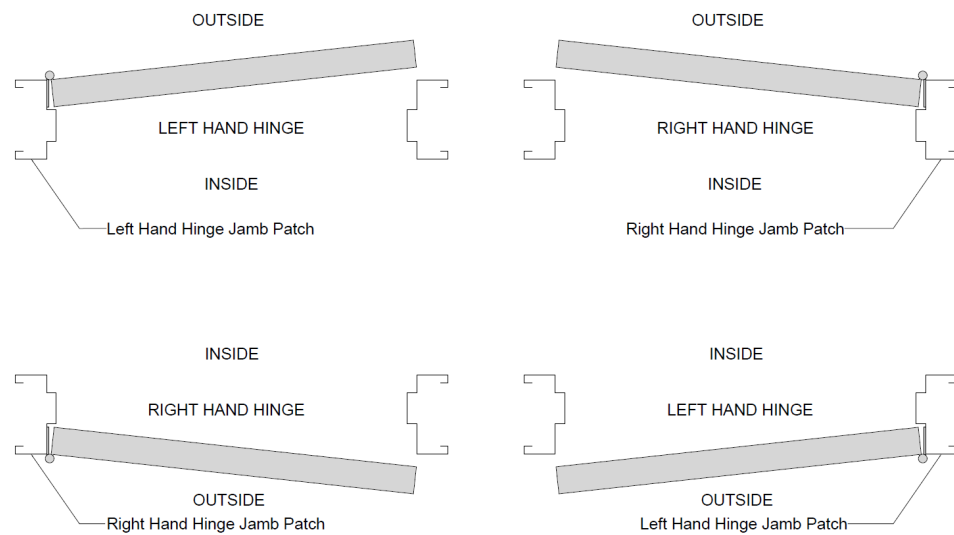


Figure 1

**Note: If a cut dimension other than 7" is made, shimming of the Jamb Patch will be required to properly position the hinge pocket.**

**WARNING: BEFORE SECURING THE PATCH TO THE WALL, MAKE SURE THE HINGE POCKET IS IN THE PROPER POSITION RELATIVE TO THE DOOR HINGE.**

**Note: If the Jamb Patch is too tall for the repair area, go to step 2a.**

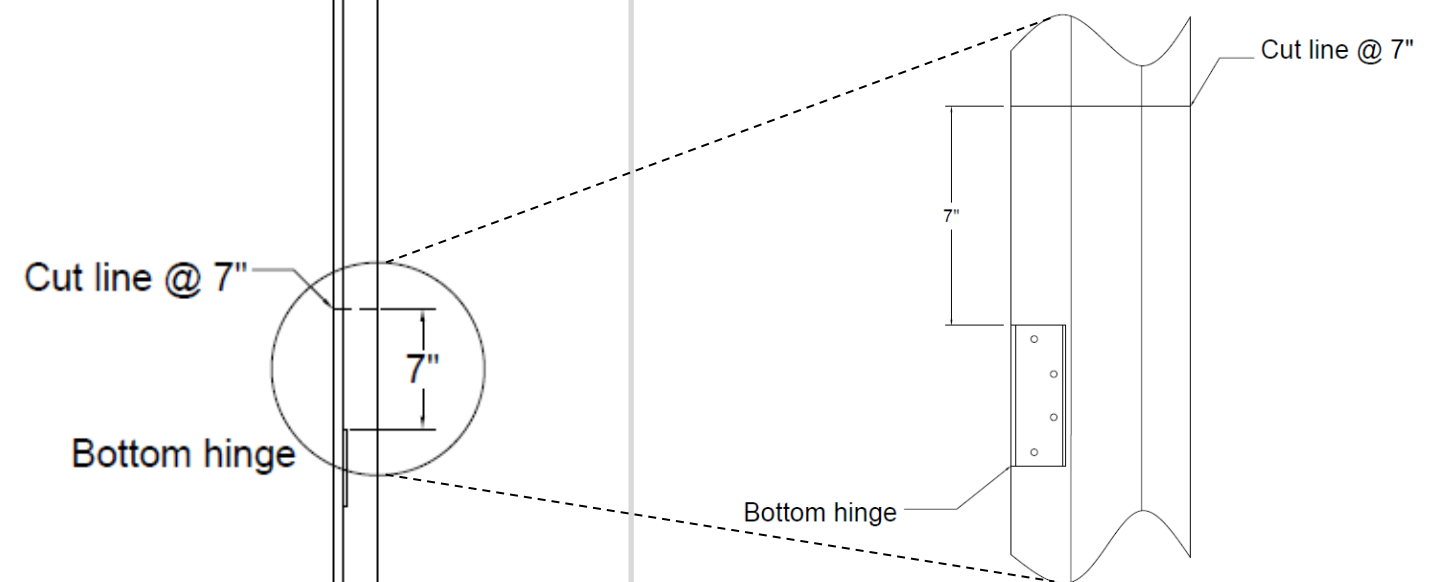


Figure 2