


# How to finish your Wall Cladding Installation guide

When creating your wall cladding project there are lots of options for creating a high end finish from corner trims. This simple guide will show you how to install those options.




## CORNER TRIMS

Corner trims are an L shape angle piece which can be used on the edges of your composite cladding area. You can use a matching colour to compliment the cladding. Each composite corner trim is available in the same 8 colours as the wall cladding.

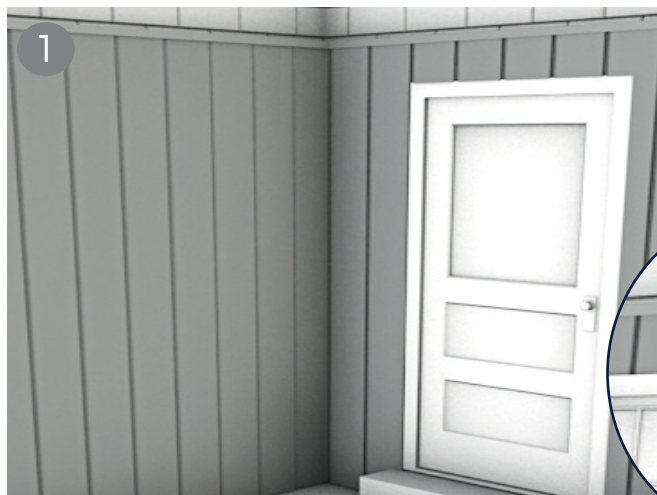

1 Installing the corner trims is the last phase of the project, install the composite wall cladding as above right up to any windows or doors.

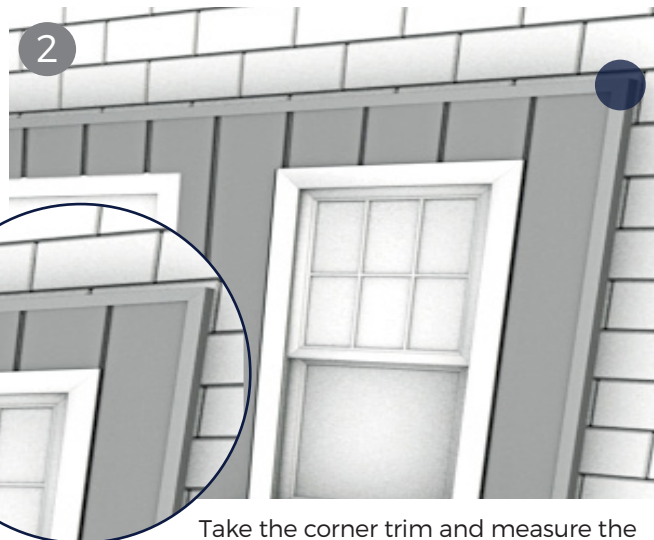

2 Take the corner trim and measure the length of the area its going to be fitted on for example the width and height of a door or window. Corner trims can be cut to length and worked just like timber. If placing two trims side by side, these can either be mitered to create a neat angle, or cut to fit.



3 Once the corner trim is cut to size, you can use sumogrip adhesive along one or both sides of the corner trim to attach to the edge of the cladding.



4 To allow for expansion you may wish to only glue the top edge. Once installed, you can then cut and place the second piece of trim along the edge until you have the desired finished look.



Order online at [www.cladcodecking.co.uk](http://www.cladcodecking.co.uk)  
Call us on 01837 659901

Please always consult a professional before installing Cladco Products

**CLADCO**  
DECKING