
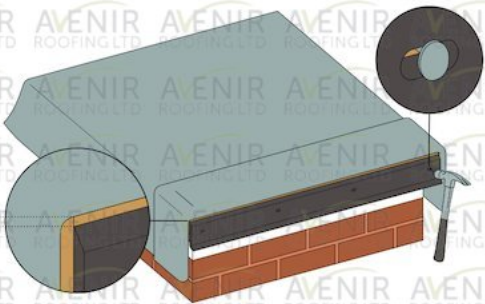

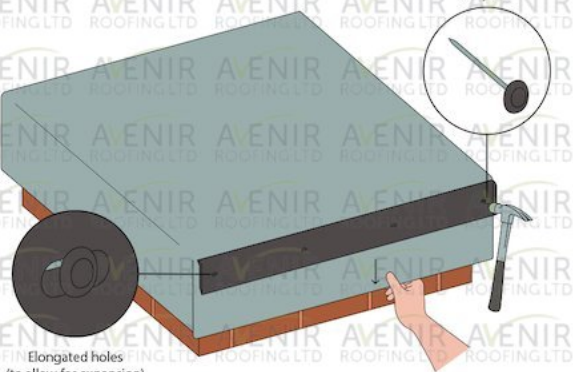


Gutter Trim

A how-to guide to installing gutter trims to a Firestone RubberCover EPDM flat roof.

	<p>Step 1 Install a 2" x 1" batten to the roof perimeter , level with roof deck.</p>
	<p>Step 2 Install the base plate as shown, 5mm below the deck using plain nails.</p>
	<p>Step 3 Adhere membrane and dress over the base plate.</p>
	<p>Step 4 Pull rubber taut and install top plate as shown, secured with polynails. Please allow a 5mm gap between trims for expansion and contraction.</p>



Step 5

Trim any excess rubber with a sharp blade.