


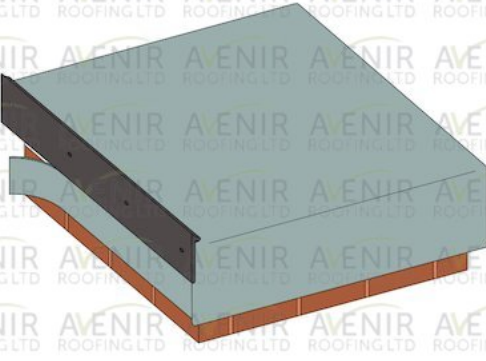
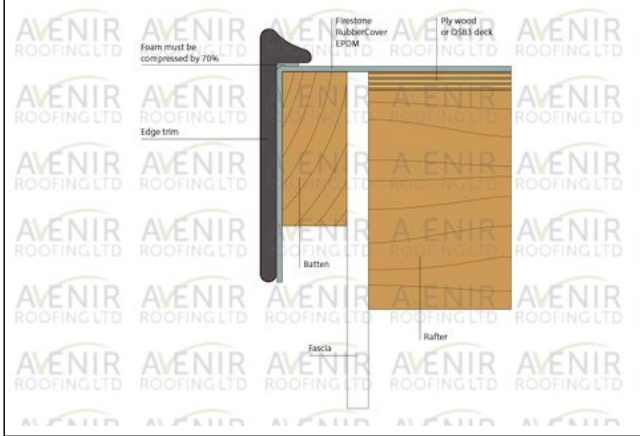


Edge Trim

A how-to guide to installing edge trims to a Firestone RubberCover EPDM flat roof.

	<p>Step 1 Install a 2" x 1" batten to the roof perimeter, level with roof deck.</p>
	<p>Step 2 Once the membrane is installed, push down on the edge trim.</p>
 <p>Polynail</p>	<p>Step 3 Fix in place using the supplied polypins.</p>
	<p>Step 4 Trim any excess rubber with a sharp blade.</p>



Step 5

Please allow 5mm gap between trims for expansion and contraction.