



Endurance Beds: Mesh Base

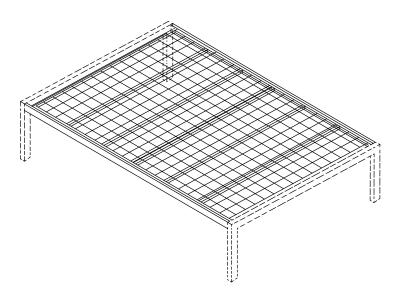

Email us at sales@endurancebeds.co.uk for more information.


## Assembly Instructions: Bedbase (4'0 + 4'6 + 5'0 +6'0)



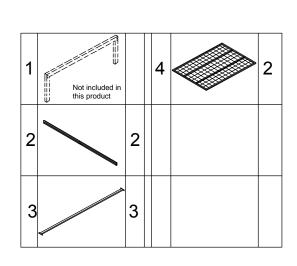


Α	(a)	M8X25mm	8
В	(a)	M6X16mm	12
С	•	M6	8
D	<u></u>	M6X45m	8
Е			2



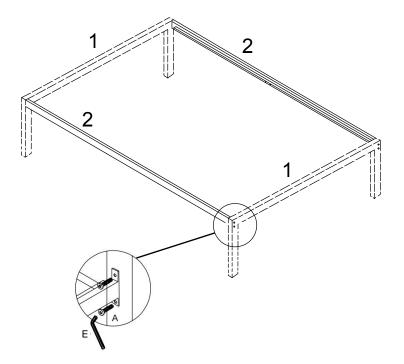


CODE	HARDWARE	QTY
Α	⊚ M8X25	8
Е		1




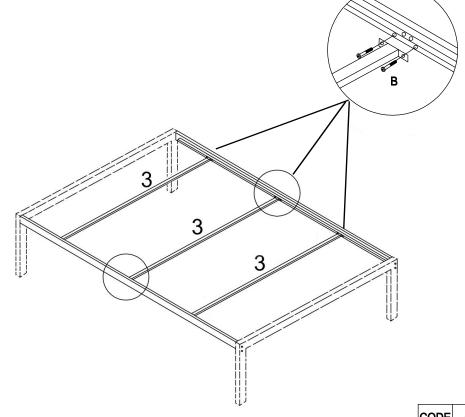


CODE HARDWARE		QTY
В	® M6X16	12

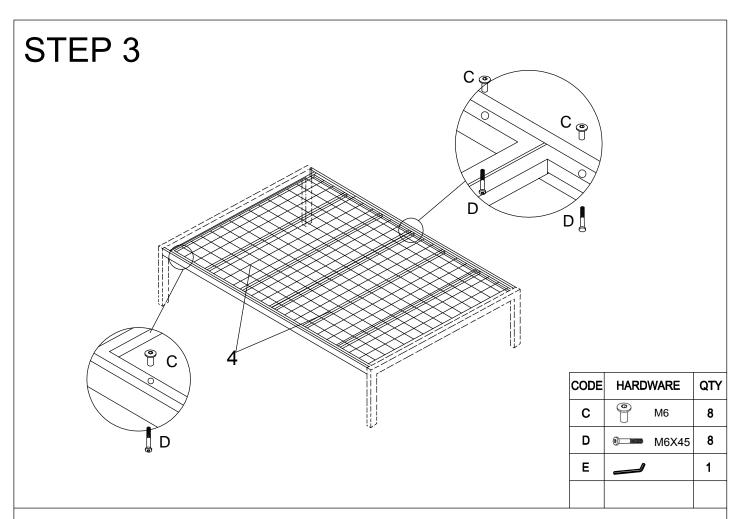

## STEP 4

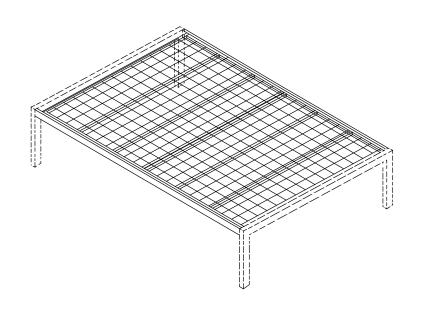

# IF YOU ARE ASSEMBLING THE WROXHAM BED WITH HEADBOARD BRACKETS, PLEASE NOTE:

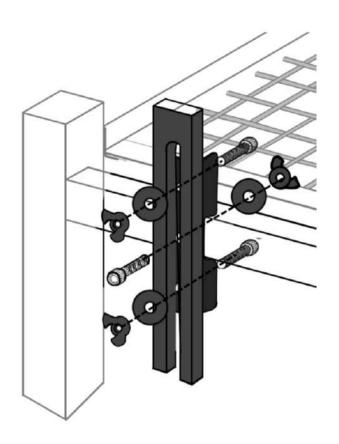

## FIXINGS NEEDED FOR HEADBOARD BRACKETS:

6 x M8 \* 40mm Bolts

6 x Oversized Washers

6 x M8 Wing Nuts

1 x Allen Key

### TOP AND BOTTOM HOLES IN ORDER FROM FRONT TO BACK

- 1. Bolt
- 2. Metal Headboard Bracket
- 3. Cross Section of Bed Headend
- 4. Wooden Strut of Headboard
- 5. Washer
- 6. Wing Nut

#### MIDDLE HOLES IN ORDER FROM FRONT TO BACK

- 1. Wing Nut
- 2. Washer
- 3. Cross Section of Bed Headend
- 4. Metal Headboard Bracket
- 5. Bolt