


Fixing Instructions for installing mdf panels (slotted or unslotted) into modular shelving system using hook strips

If not already done, attach base legs to the columns as shown. Use a mallet to tap home as they will be a tight fit.

Obviously wall bays will have 1 base leg per column, gondolas will have 2, one on each side

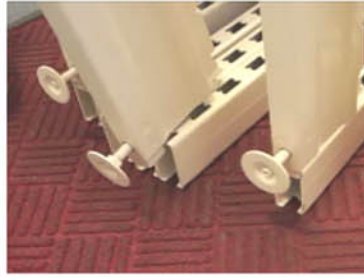

Step 1 - lay panel face down

take care not to scratch the front face or edges - use a dust sheet or stack on other panels



Step 2 - Align hook strip on panel

Hook strips are in left and right pairs - one hook strip for each side of the panel. Make sure teeth on both sides are pointing towards the bottom edge of the panel and are in-line with each other.



Step 3 - screw strips to panel

using 3.5 x 16mm screws (not supplied). Make sure the strip is tight to the edge of the panel



Step 4 - install panel between the columns



The panel is now ready to hook into the columns. This is a 2 person task. For wall bays get the the panel standing against the wall with columns close by. Tilt the panel sideways on one corner and bring the column and panel together as shown. When one side is fitted and hooks have fully dropped into the column do the other edge. Panel and columns should then be plumb.

Fix column to wall using wall fix bracket near top as usual, and repeat process for any additional bays.