


DWELLER COLLECTION

Ottoman

- ⚠ Do NOT use a drill while assembling
- Assemble all parts on a soft surface

- 1 Connect Legs to Base and fasten with six 40mm Hex Bolts.
- 2 Add cushion.


6x 40mm Bolt

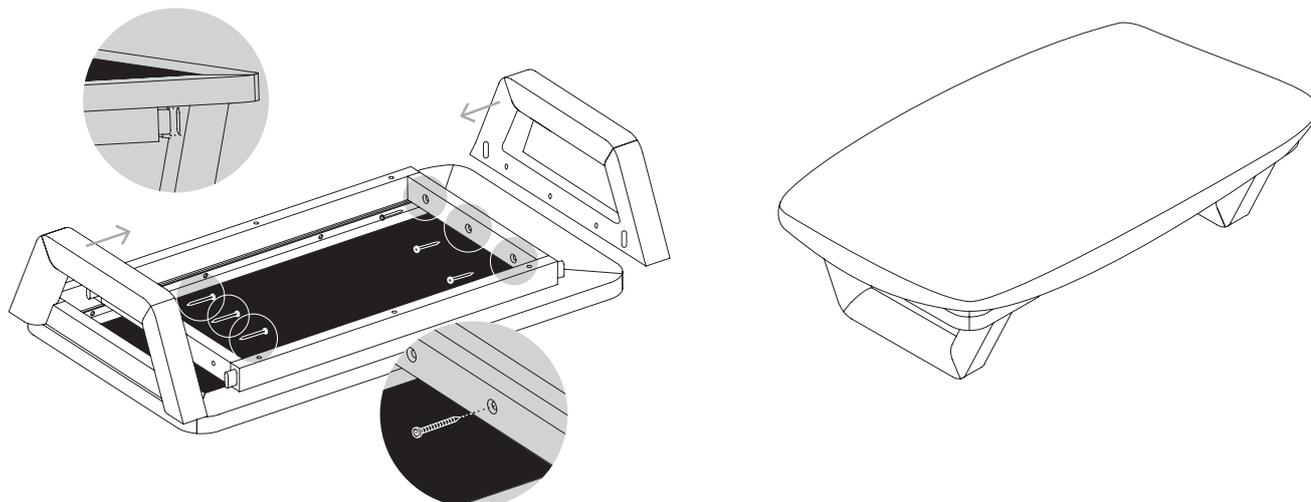

Parts



1x Base



2x Legs

Cushions



1x Base Cushion

Hardware



6x 40mm Hex Bolt



1x Allen Wrench