



6x Crossnut

REEL COLLECTION




· Do NOT use a drill while assembling · Assemble all parts on a soft surface

1 Attach Right and Left Arm to Back Rest and Base Support. Place the Crossnut in the underside of crossbar with the

hole facing towards the Arm. 6x 80mm Bolt


Attach Seat Base with twelve 25mm Bolts, inserting them in the metal brackets.


12x **25mm Bolt**

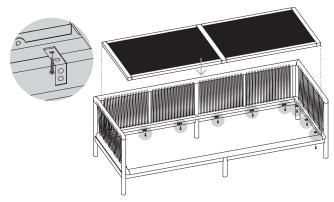

Secure base to frame with twelve 70mm Bolts.

Add cushions.

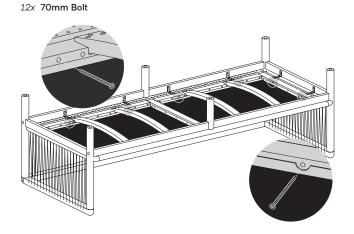


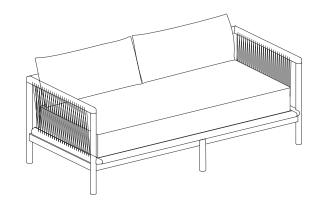





1x Seat Base







1x Seat Cushion



1x Backrest

1x Left Arm

1x Right Arm

2x Back Cushion

Hardware



6x Crossnut 6x 80mm Hex Bolt

1x Allen Wrench



Flathead Screwdriver *Not included