


# QUICK START ASSEMBLY

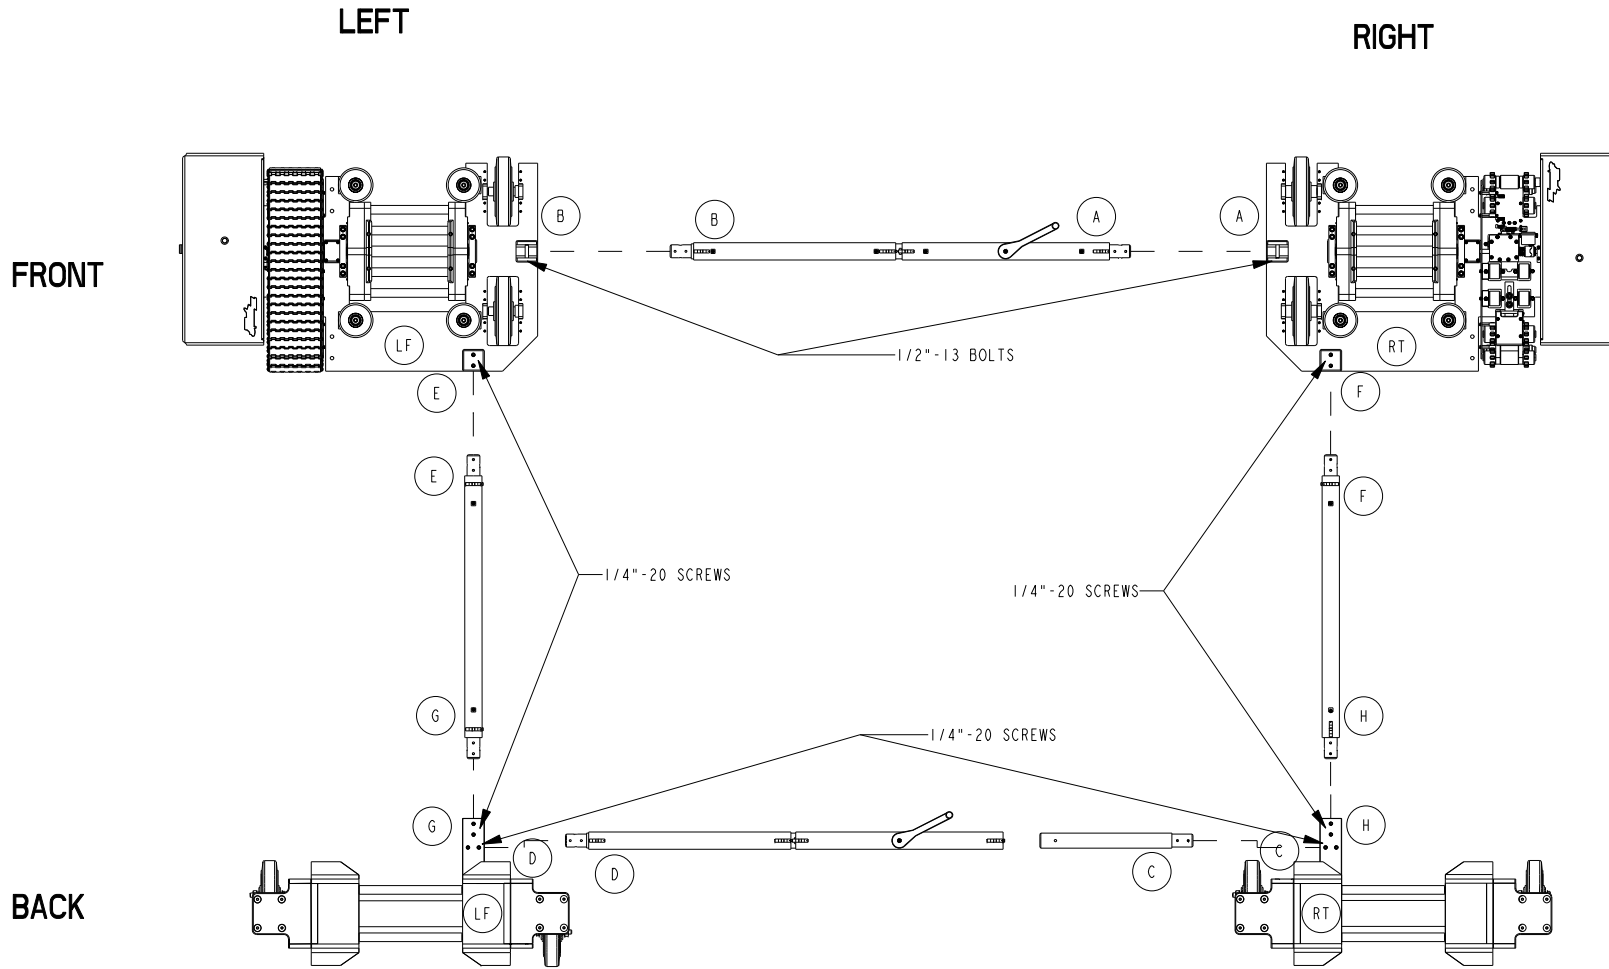

NOTE: USE 3/8" ALLEN WRENCH FOR 1/2"-13 BOLTS  
 USE 3/16" ALLEN WRENCH FOR 1/4"-20 SCREWS