



PLEASE FIND THIS INSTRUCTION VIDEO
ON OUR YOUTUBE CHANNEL:
youtube.com/cleanstarau



T1 BACKPACK INSTRUCTIONS


POSITIONING AND SECURING THE POWER CABLE



1 Loop Power Cable



2 Feed Power Cable through the inside left hand side and hook loop around the tooth, ensure plug sits in the middle when hanging

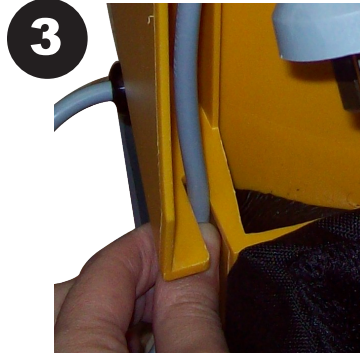

3 Secure Power Cable into Groove on Left Hand Side



4 Connect Extension Lead to Power Cable



5 Secure Extension Lead Firmly into Groove on Left Hand Side



6 Loop Extension Lead



7 Feed Extension Lead through inside left hand side and hook loop around the tooth



8 Final Product should look like this.



Power Cable is now Properly Restrained and Ready to Use



ATTENTION: DO NOT LEAVE POWER CABLE HANGING FREELY.

THIS WILL VOID YOUR WARRANTY!!!