


PUMA 2020 BONNET STRUT KIT






REMOVE THE TWO 10MM WING BOLTS THEN PLACE A SUPPLIED WASHER OVER EACH HOLE. FIT CORRECT BRACKET OVER THE TOP OF WASHERS. FIT NEW BOLT AND WASHER THROUGH EACH BRACKET HOLE TO SECURE TO WING

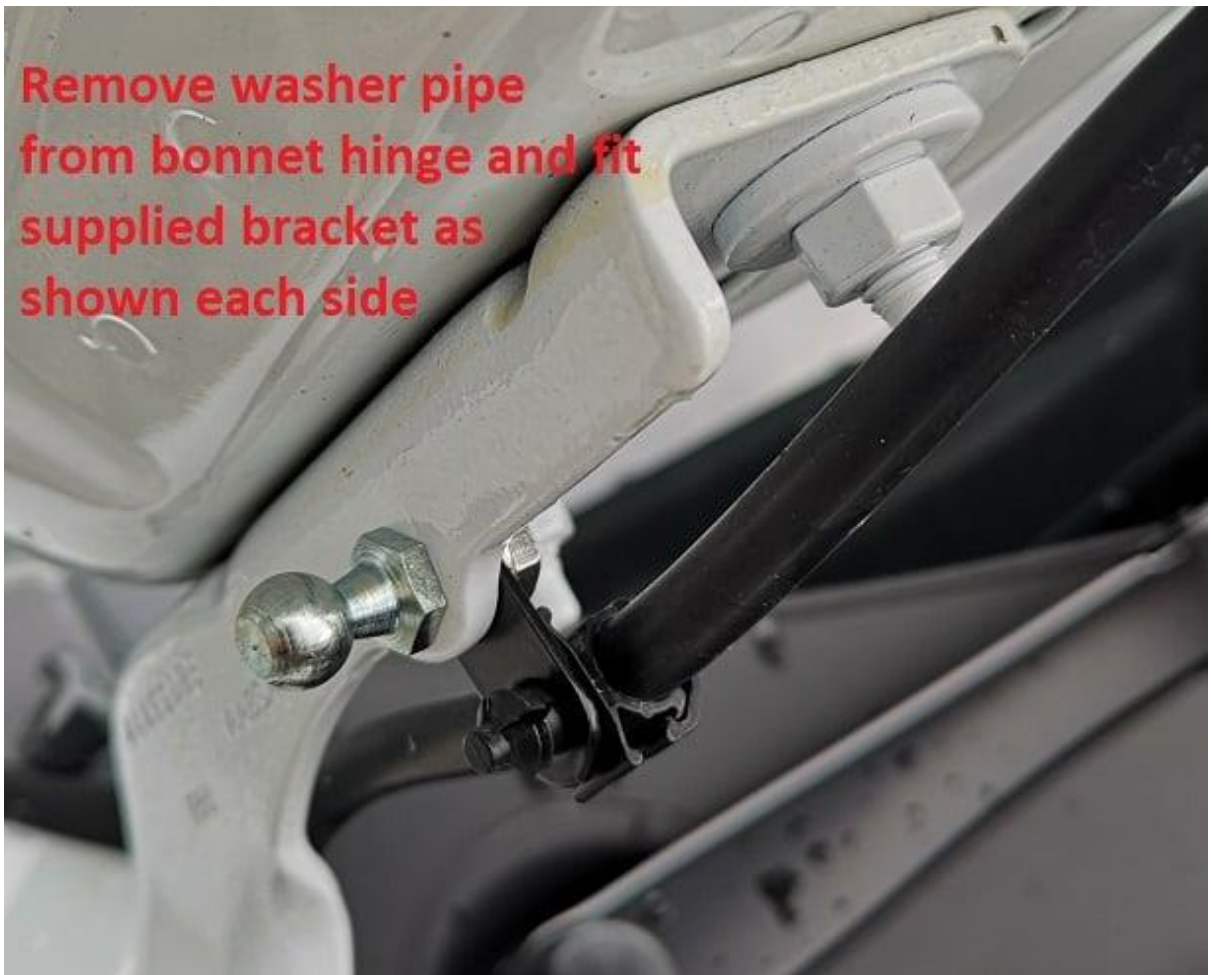

Remove washer pipe from bonnet hinge and fit supplied bracket as shown each side

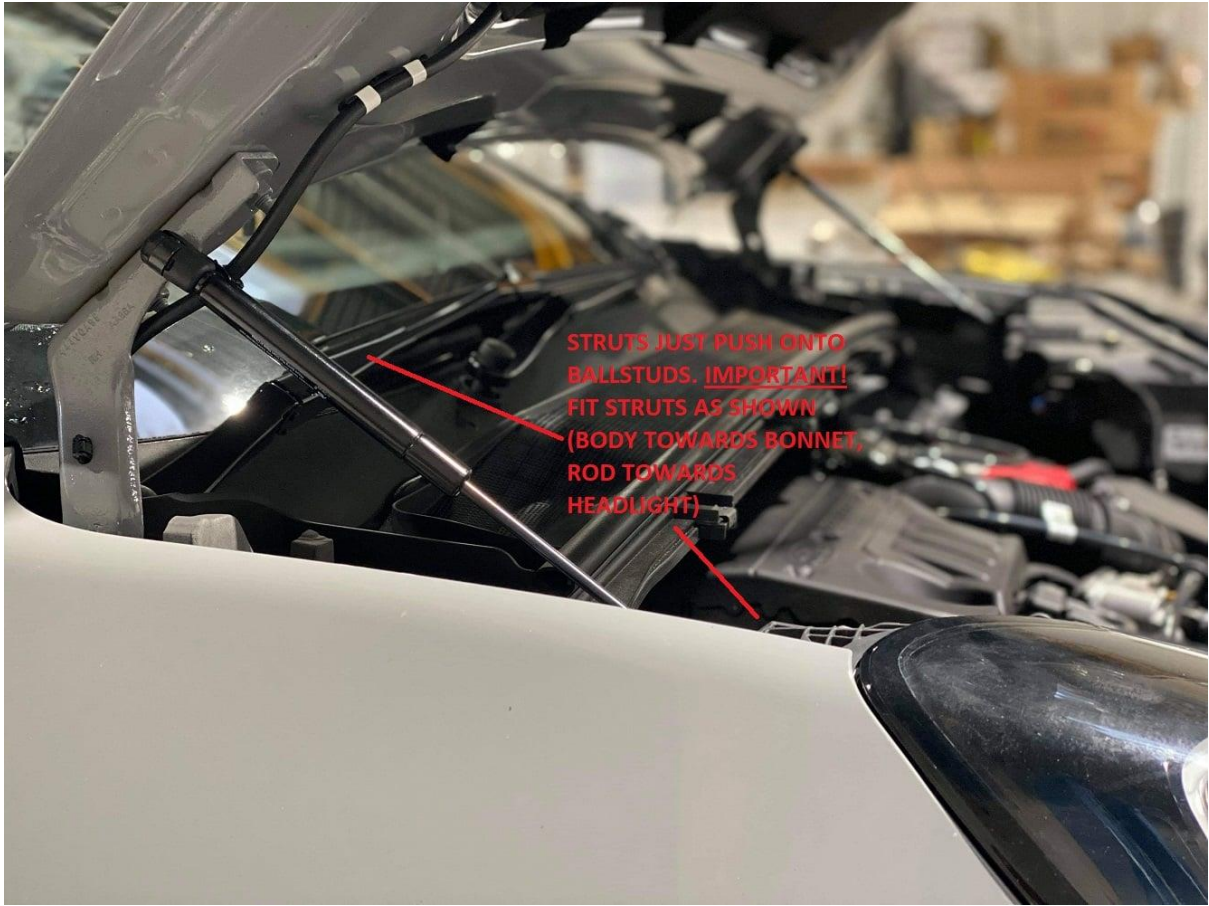

STRUTS JUST PUSH ONTO
BALLSTUDS. IMPORTANT!
FIT STRUTS AS SHOWN
(BODY TOWARDS BONNET,
ROD TOWARDS
HEADLIGHT)