

JBA

PERFORMANCE EXHAUST

A PerTronix Performance Brand ~ www.pertronixbrands.com ~ 909 599-5955

Installation Instructions & warranty Information

30-3057 ~ 2021 Chevy Silverado/GMC Sierra 6.2L Z71 ONLY
with rectangular Tips under the rear bumper
Cat Back Exhaust



4

This product is considered a Replacement part per CARB and EPA regulations for emissions compliance and is legal for sale and use on all vehicles in all 50 states when installed according to the Manufacturer's Application Guide and Installation Instructions.

WARNING:

This product can expose you to chemicals including Lead, Nickel, Cadmium and Chromium which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

REV. 2 1-18-21 DSL

PLEASE READ BEFORE PROCEEDING

PerTronix® thanks you for choosing a JBA Performance Exhaust Product. To realize the potential of JBA's engineering and excellent fit, Please Read and Understand these instructions completely prior to starting the installation.

Check that you received all the parts listed on the parts list, if you have any concerns, please contact PerTronix before continuing.

Work Smart – Work Safe! Most Exhaust Installations are best performed on a lift. If a lift is not available, raise the vehicle and support on quality Jack Stands on level ground. Do not rely on a jack!


Before starting, allow the vehicle to cool, disconnect the battery, and spray penetrating oil on all hardware and fittings that will need to be removed. Silicone spray on rubber hangers will make them easier to remove and install.

NOTE: This exhaust system requires cutting your stock exhaust before bolting in the new system!


Removal;

1. Remove the stock muffler by cutting the front pipe 9 1/2" from the weld on the flex joint (see picture 1).

Then cut the rear pipe 4 1/2" from bend where it goes over the axle, as seen in picture 2

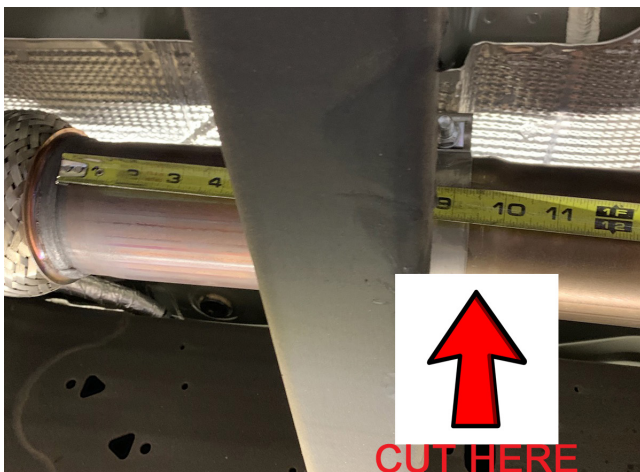

Picture 1

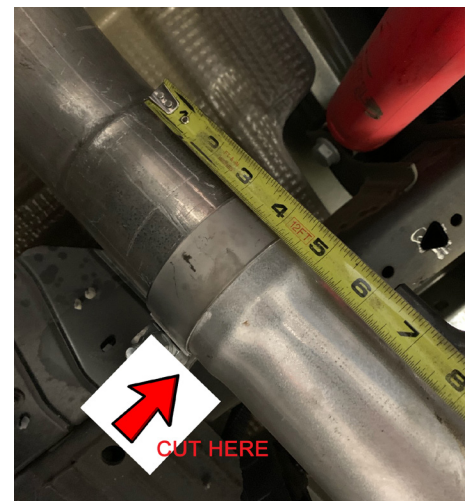

Picture 2

2. Disconnect the stock hangers from the Rubber insulators. The rubber insulators will be re-used, leave them hanging on the truck.

Installation;

1. Slip the Rear pipe over the front cut section with one of the supplied clamps and install the original rubber isolators over the hangers.
2. Slip the muffler over the Rear pipe with one of the supplied clamps.
3. Slip the intermediate Pipe into the muffler and over the cut front pipe with two of the supplied clamps.
4. Adjust all three pieces so that they are straight and not binding and tighten the clamps.

Visit www.pertronixbrands.com to see more products for your truck, including JBA Performance Headers

Parts List

Qty.

- | | |
|---|------------------------------|
| 1 | JBA 304SS Muffler |
| 1 | Straight Intermediate pipe |
| 1 | Muffler to rear section pipe |
| 4 | 2 1/2" Exhaust Clamps |

JBA LIMITED WARRANTY

All JBA Headers and Exhaust products are guaranteed, to the original purchaser, to be free of defects in materials and workmanship for one year. This warranty covers the replacement or repair of the product only and does not cover the cost of removal and installation, customer applied aftermarket coatings or any discoloration or corrosion of finished surfaces.

Damage or product failure resulting from collision, improper installation, off-road use, road hazards, the use of exhaust insulating wrap or like products or rust occurring after installation, is not covered by the warranty. The warranty extends only to the original purchaser.

Should a part become defective it should be returned to the original selling retailer and must be accompanied with the sales receipt. If there is no retailer in your area, call the factory for a return authorization and return your part prepaid to the factory for inspection. PerTronix reserves the rights to replace or repair the alleged defective part and return the part freight collect.