

STEPMATE[®]

Step to a new level...

Installation Guide



STEP-MATE 1:


Note: Appropriate hand tools required for installation

- **Remove the tow ball, nut, and washer from your towbar tongue.**



STEP-MATE 2:

- Under your Stepmate, loosen off (Do not remove) the 2 locking bolts so they are clear from the slot opening then position your Stepmate hole with the hole on your tow tongue and re-fit your tow ball securing your Stepmate to your tow tongue.

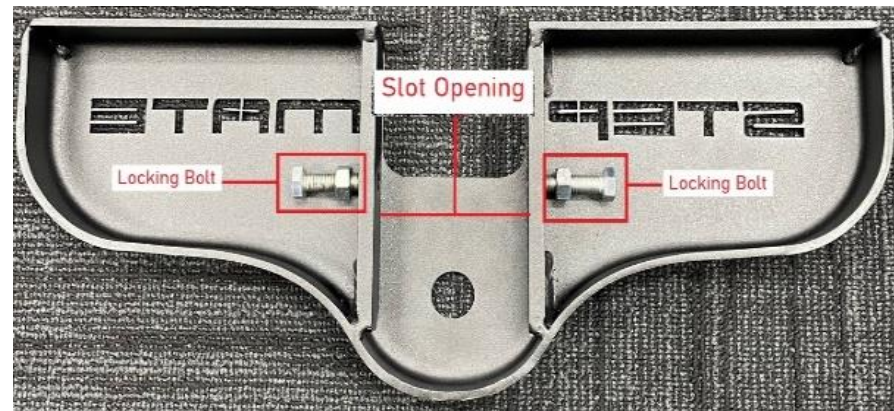

STEP-MATE 3:

- **Tighten up your tow ball first then complete your installation by tightening up the Stepmate locking bolts on both sides evenly to prevent your Stepmate moving side to side. Once locking bolts are positioned securely tighten the secondary nut on both sides to prevent the locking bolts coming loose.**



STEPMATE®

Step to a new level...

