


Parts needed for assembly using method #606

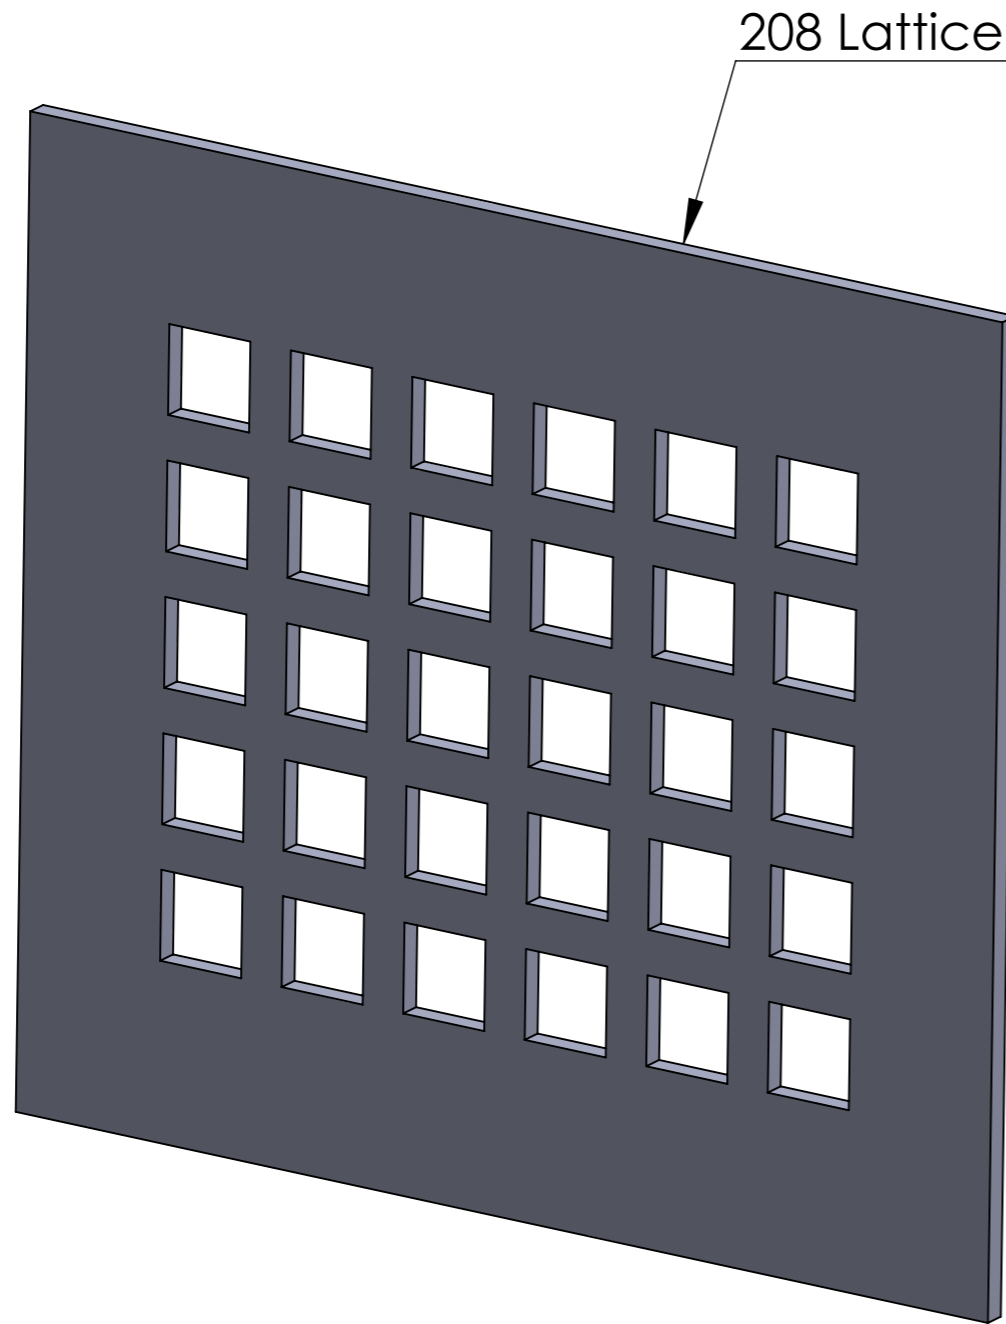


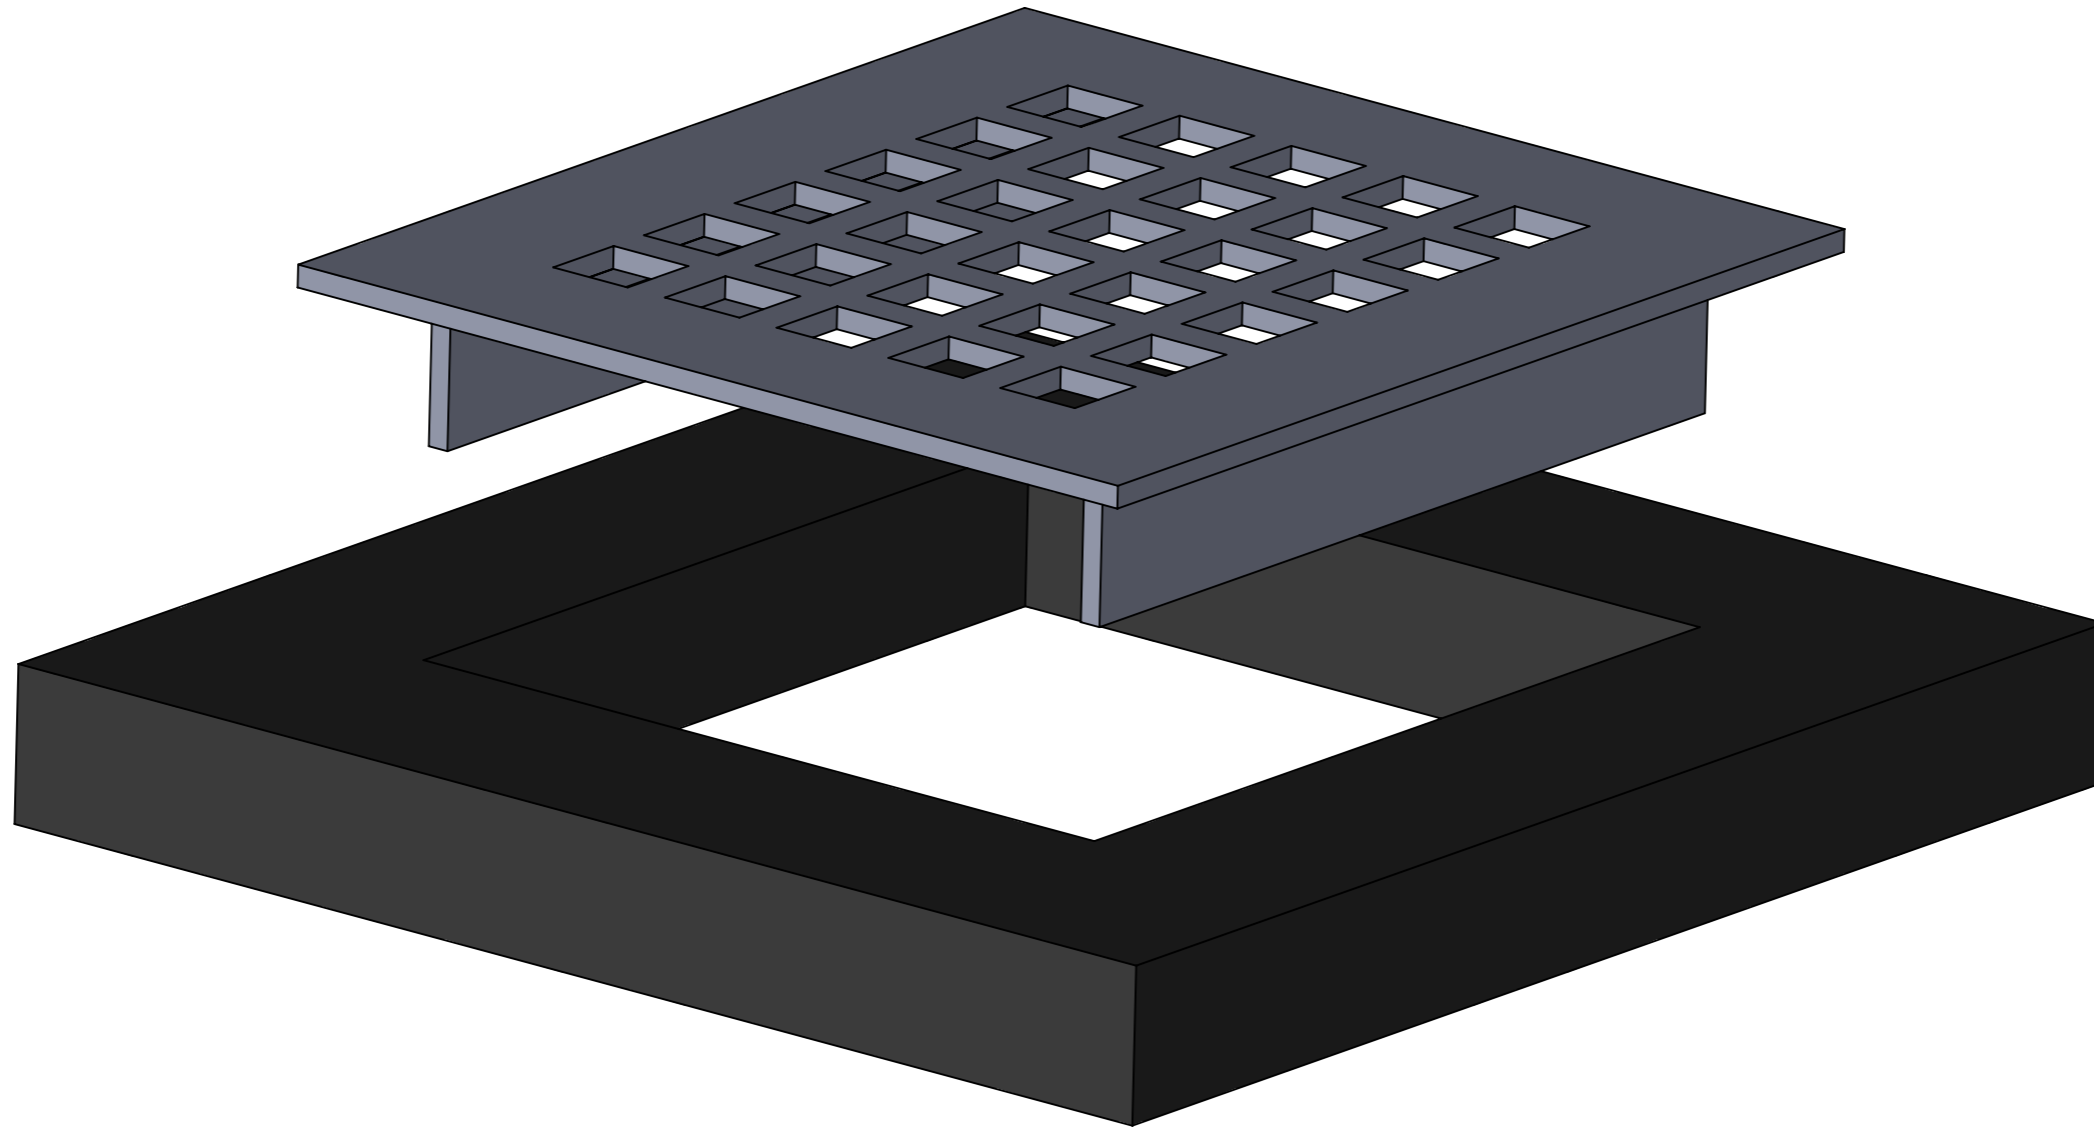
208 Lattice perforated grille



Stiffener angle


Disclaimer:
This step by step layout is one of the many ways someone can install their custom grille using method #606

	ARCHITECTURAL GRILLE				
	42 SECOND AVENUE BROOKLYN, NY 11215 WWW.ARCHGRILLE.COM				
CUSTOMER			Drawn by Heg	SIZE A3	REV -
DESCRIPTION #606 Method of fastening			SCALE 1"=1"	SHEET DMS.606.1	



STEP 1:
Place the welded 208 lattice perforated grille
and the stiffener angles into the floor opening.

	ARCHITECTURAL GRILLE				
	42 SECOND AVENUE BROOKLYN, NY 11215 WWW.ARCHGRILLE.COM				
CUSTOMER			Drawn by Heg	SIZE A3	REV -
DESCRIPTION #606 Method of fastening			SCALE 1"=1"	SHEET DMS.606.2	

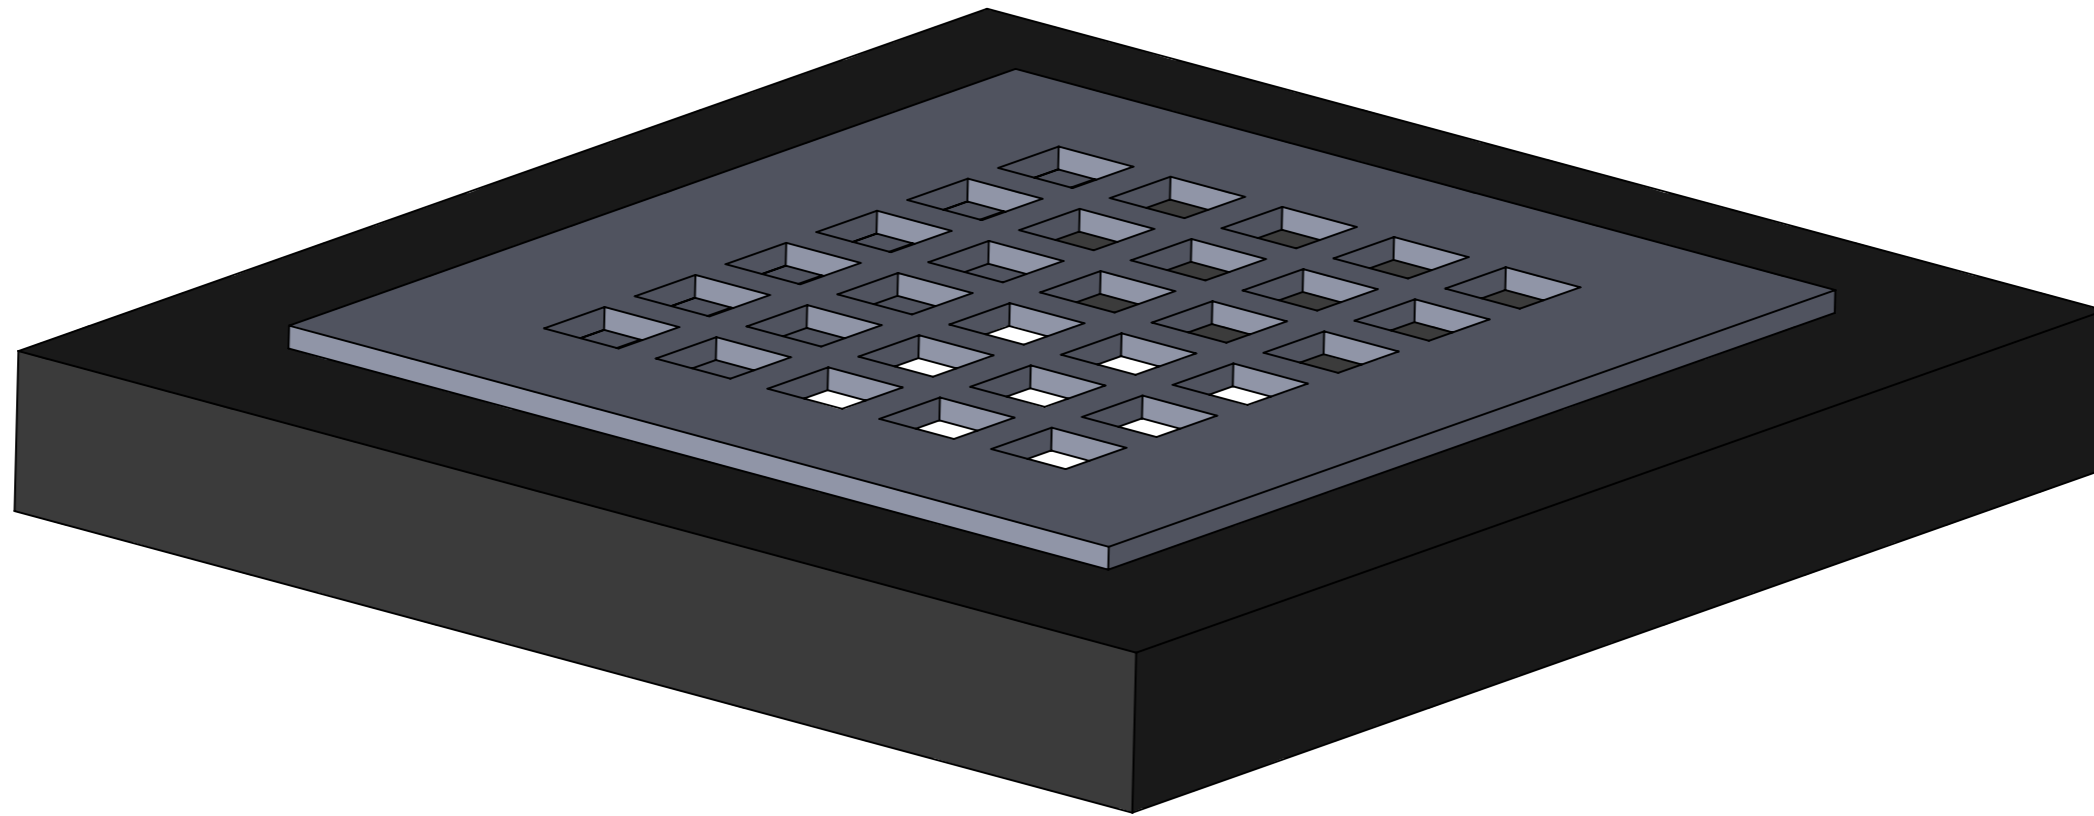

STEP 2:
 The welded 208 lattice perforated grille and the stiffener angles placed into the floor Opening.

Installation complete.

	ARCHITECTURAL GRILLE				
	42 SECOND AVENUE BROOKLYN, NY 11215 WWW.ARCHGRILLE.COM				
CUSTOMER			Drawn by Heg	SIZE A3	REV -
DESCRIPTION #606 Method of fastening			SCALE 1"=1"	SHEET DMS.606.3	