HONDA VTX BAGGER KIT INSTALLATION MANUAL

Read your motorcycle's owners manual on how to remove and Re-Install the rear fender. Then follow the steps below*












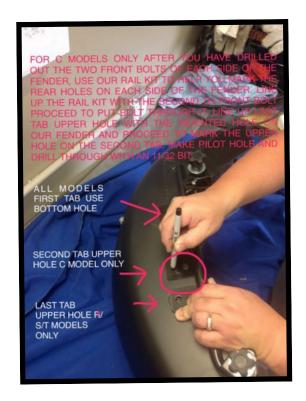


After drilling the final rear hole. You can proceed with the installation of the fender onto your bike, using your stock bolts and lock nuts (not included). If you wish to use your stock fender support bracket continue to next steps.










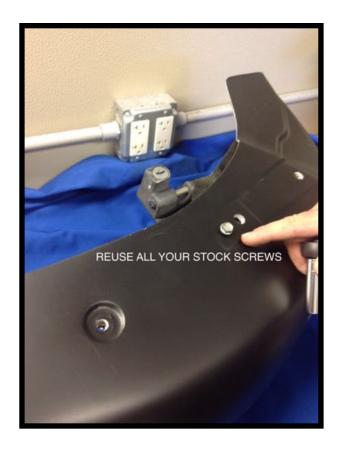


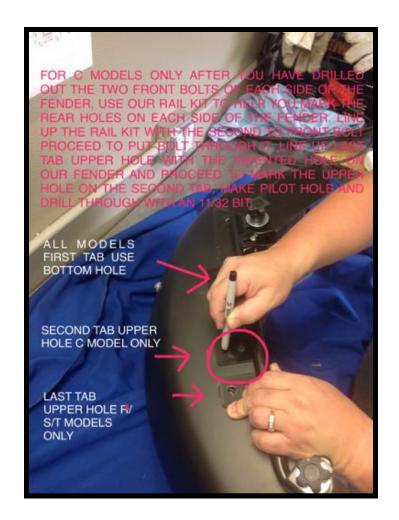



"FOR THE 1800 MODELS ONLY"

Please place the provided spacers in between the fender struts and fiberglass fender as shown in this picture.

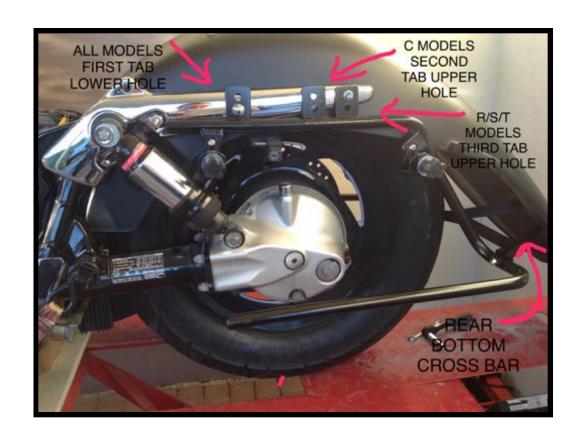
















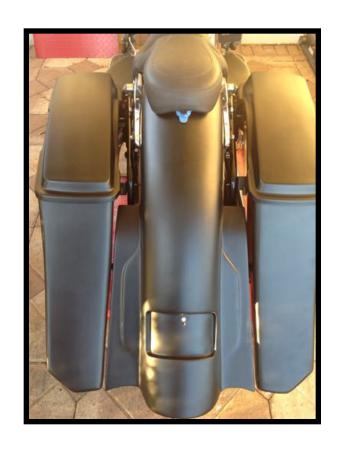

Once everything is all tighten up and properly mocked up on your new VTX BAGGER it should look like the pictures above. Make sure you have drilled out every hole or notches needed before sending it out to paint

Once You get everything back from paint and you're ready to do the final Install apply Blue Lock Tight to all the bolts for poper instalation.

Thank You For Choosing Backyard Air Suspension & Innovations, LLC

Don't forget to please send us pictures of your bike once it's all done and we will feature it on our website and/or Facebook page.

ENJOY YOUR NEW METRIC BAGGER AND RIDE SAFE!

Backyard Air Suspension & Innovations, LLC Fort Lauderdale, FL. https://www.facebook.com/Backyard.Air.Suspension/www.backyardairsuspension.com backyard.air.suspension@gmail.com 954-951-8072