


WALL MOUNTED SHELVES A1(01) Assembly Instructions

These shelves may be mounted singly (using 2/3 brackets), or, by bolting them together, as one long shelf (using 3, 4 or 5 brackets depending on the spacing of your glazing bars).

COMPONENTS PER PAIR

	34"	58"
Bracket A	4	6
Bracket B	4	6
Bolts C	6	12
Cropped Bolts D	8	12
Nuts	14	24
Trays 34"	2	-
Trays 29"	-	4

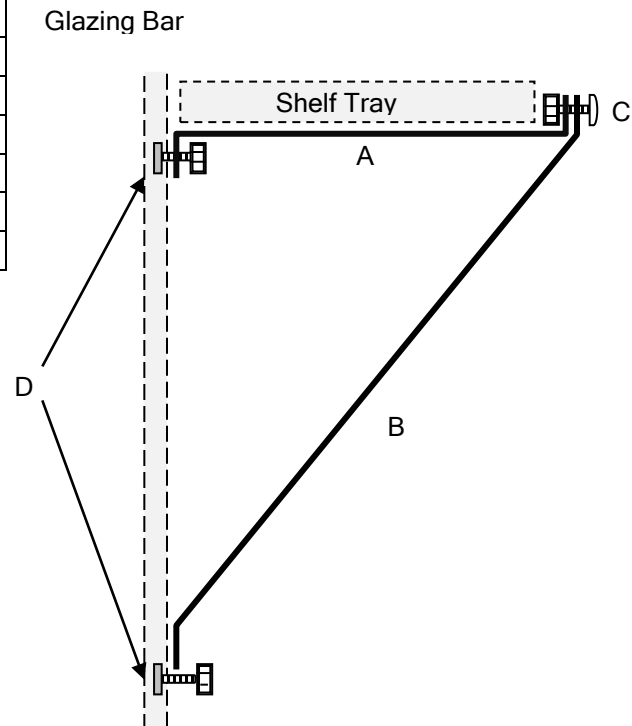

FIXING INSTRUCTIONS

BRACKETS

Attach A to B using pan headed bolt C and nut. Loosely attach the cropped bolts D with nuts to the other end of A and B. Insert the bolt head into the greenhouse glazing channel and twist to lock. Check A is level and tighten the nuts.

TRAYS

Rest the aluminium trays on the brackets either way up - to give you gravel trays or a flat surface.

Long Term Care of Aluminium

Prolonged exposure and contact with chemicals containing metal compounds can have a corrosive effect on aluminium. Typical of these are modern fertilizers that can contain Potassium and Potassium Chloride or more traditional such as Cheshunt Compound and Bordeaux Mixture both of which contain Copper. All of these, when mixed with water, create Ionic Salts which can attack the surface and cause pitting, eventually leading to small holes appearing in the aluminium.

When using any metal based chemicals it is best to line any aluminium surface with polythene or to wash down thoroughly after each application. When using an unlined bench as a capillary bed with sand or matting, apply the chemicals away from the bed and drain well before replacing.

If you're in any doubt please check the manufacturers label as this will include a list of the contents.