


WALL MOUNTED SHELF BRACKETS A3(01)

Assembly Instructions



COMPONENTS PER PAIR

Bracket A	2
Bracket B	2
Bolts C	2
Bolts D	4
Nuts	6

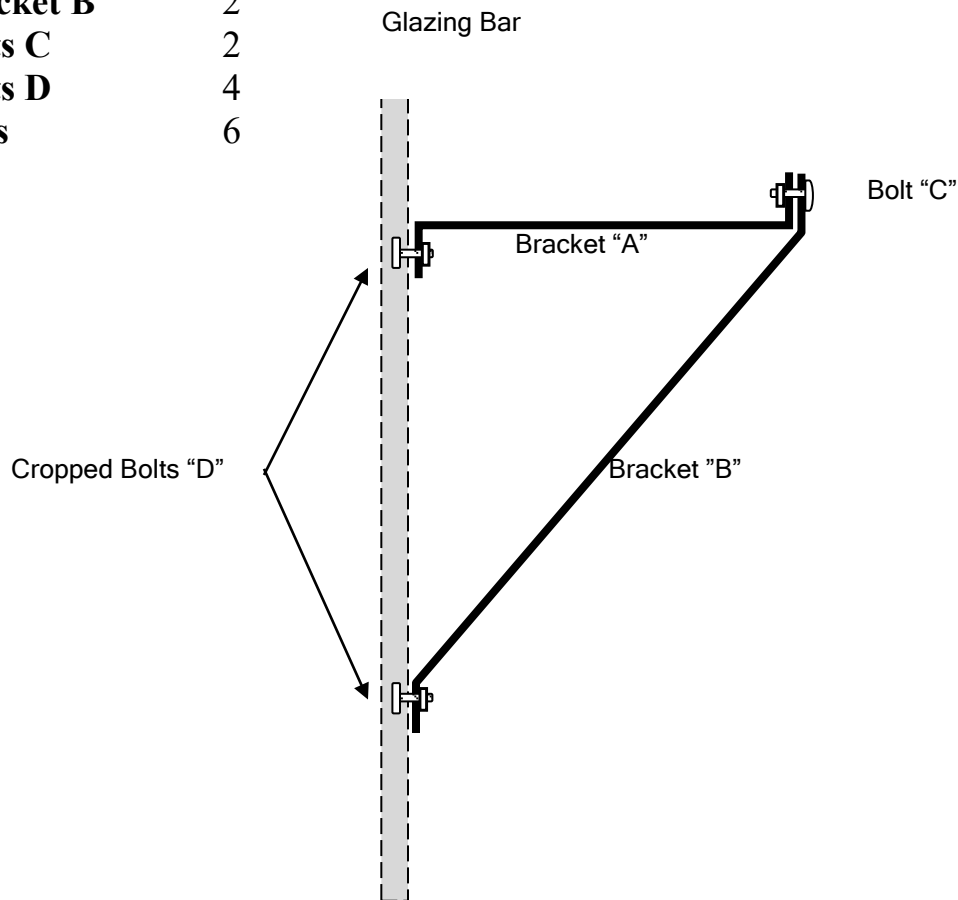

FIXING INSTRUCTIONS

1. Attach A to B using pan headed bolt C and nut. Loosely attach the special bolts D with nuts to the other end of A and B.
2. Insert the bolt head into the greenhouse glazing channel and twist to lock.
3. Check A is level and tighten the nuts.

TWO WESTS & ELLIOTT LTD

4, Carrwood Road, Chesterfield, Derbyshire, S41 9RH. Tel: (01246) 451077