


Wall Mounted Modular Shelves

Assembly Instructions



Components	Single Shelf		Pack of 3	
	With slats	With tray	With slats	With tray
Angle Fixing Bracket	2	2	6	6
Bracket Plate (left & right)	1/1	1/1	3/3	3/3
Cropped Head Bolts	4	4	12	12
Round Head Bolts	4	6	12	18
Nuts	8	10	24	30
Wood Screws	8	-	24	-
Timber Slats	4	-	12	-
Aluminium Tray	-	1	-	3
Retaining Clip	-	2	-	6

1. Using the round headed bolts and nuts, attach the Bracket Plates to the inside of the Fixing Brackets so that you have an equal number of left and right.

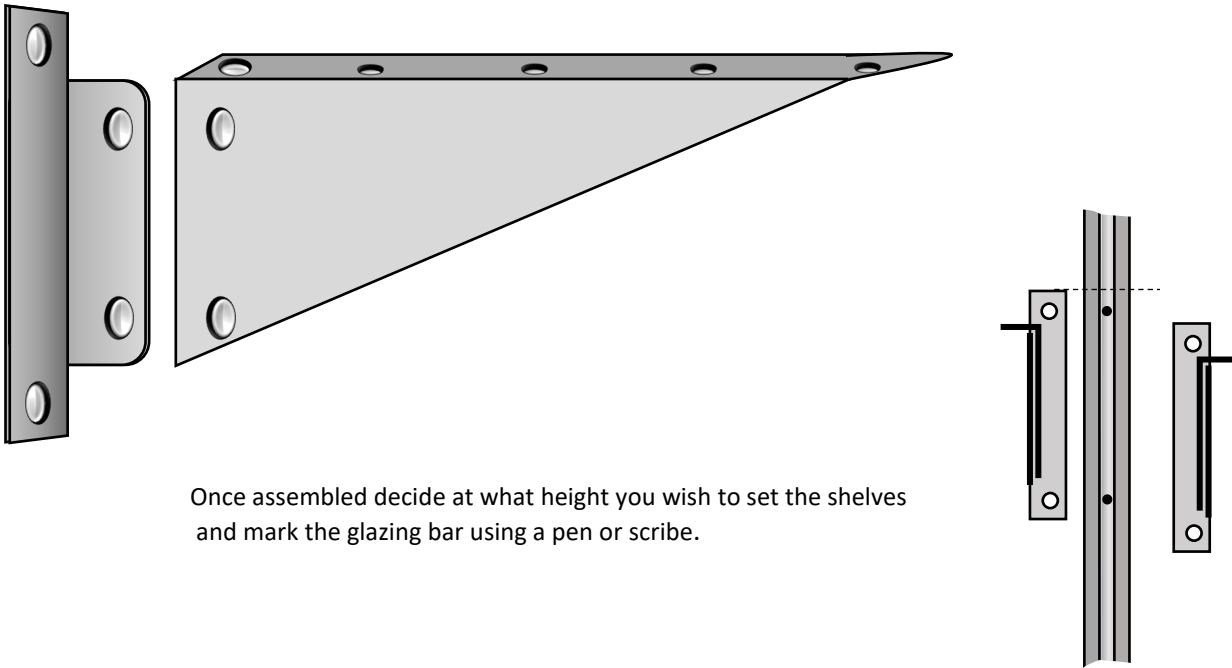

Once assembled decide at what height you wish to set the shelves and mark the glazing bar using a pen or scribe.

Insert two of the cropped bolts into the fixing bracket and offer up to the glazing bar of the greenhouse, level with your mark, and secure with two nuts.

If you are fitting multiple shelves to run side by side, place a second bracket over the first before securing with the nuts.

Once in position, the timber slats can be attached to the top of the brackets using the front four holes and the wood screws supplied.

If the aluminium shelf tray is to be fitted, fix the securing clip to the back hole on top of the bracket using a bolt and nut finger tight only.

Slide the shelf tray onto the bracket and locate its back edge under the clip. Tighten the nut & bolt to clamp the tray in position.

