## **COMMERCIAL BENCHING TWO TIER 10' - 16'** C5(03)


## Assembly Instructions

Wide Long CROSS

**COMPONENTS** 


**MODEL:** 

COMPONENTS		LENGTH OF BENCH			
HORIZONTAL FRAME	COMPONENT LENGTH	10'	12'	14'	16'
A Width Piece	24" / 32" / 36" / 48"	4	4	4	4
B Length Piece	24" Single Mitre	4		4	-
B1 Length Piece	48" Single Mitre	4	8	4	8
B2 Length Piece	48" No Mitre	4	4	8	8
C Corner Leg	30"	4	4	4	4
D Mid Leg	30"	4	4	6	6
E Cross piece	22" / 30" / 34" / 46"	8	10	12	14
F Cross Bracket	2"	8	12	12	16
Bolts & Nuts	1/2"	192	224	256	288
Panel	2' x 24" / 32" / 36" / 48"	10	12	14	16
Panel Support (see 6)	24" (for 32", 36" / 48" Wide only)	10	12	14	16
Or Slats	24" / 32" / 36" / 48"	60	72	84	96

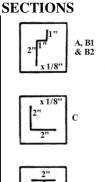


PLEASE NOTE: Assemble the whole unit with the bolts and nuts fingertight only. When complete square up and tighten.

- 1. Please check the components.
- 2. Bolt the corner legs to width pieces 'A'.
- 3. The legs are spaced at 4ft intervals except for the end section on 14' long bench (2' space). Bolt the mid legs to cross pieces 'E'.
- 4. Bolt on all the horizontal frame length pieces 'B'.
- 5. Attach the intermediate cross pieces to the horizontal frame using the 2" cross piece bracket
- 6. Panel supports are supplied for 32", 36" and 48" wide benches. These 24" long 1" x 1" angle pieces should be positioned lengthways down the bench centrally between the cross pieces E and at either end between width piece A and cross piece E.

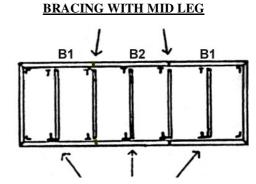

## **BRACING WITH 2" BRACKET**

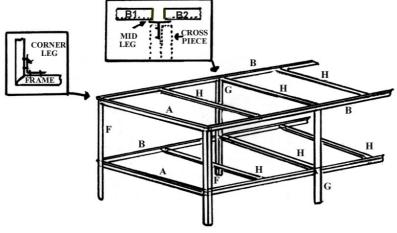

## Long Term Care of Aluminium Benches & Shelves.

Prolonged contact with chemicals containing metal compounds can cause aluminium to corrode (an electrolytic reaction occurs). Typical of these are Cheshunt Compound and Bordeaux mixture both of which contain copper. All chemicals should list their contents and most are metal free.

When using these metallic chemicals it is best to line any aluminium surface with polythene, if not wash down well after the application. When growing on a capillary bed (sand, gravel or matting) which is not lined with polythene, apply chemicals to plants away from the bed and drain thoroughly before replacing.