

## 5 Shelf Seed Tray Rack D3 (19) Assembly Instructions



Components	
Corner Upright	4 x 915mm 4 x 609mm
Bracing Bars 50mm	8
Long Square Bolts & Nuts	16
Horizontal "A" 981mm	10
Horizontal "B" 399mm	10
Short Square Bolts & Nuts	80
Seed Trays	20

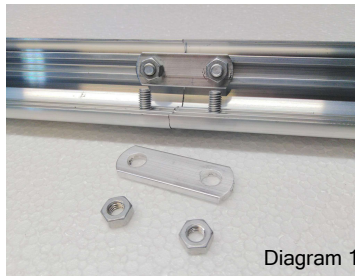


Diagram 1

### Check all components.

Each leg of the shelf unit is made up of two pieces of corner extrusion, one at 609mm and one at 915mm. Before assembly join each leg set by bolting two, 2" brace bars to the inside channels of each leg (dia, 1).

Decide at what level you wish to set the shelves. Mark \* the inside of each upright with these levels so that you know where to attach the horizontals.

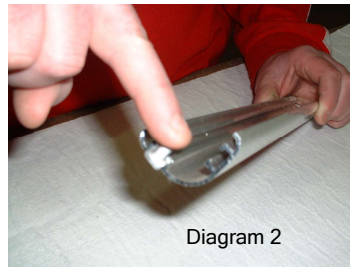


Diagram 2


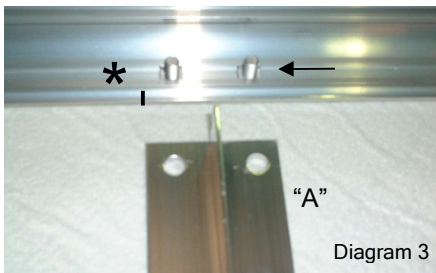


Diagram 3

Side Section



Slide bolts down each channel of the corner uprights, 2 bolts per shelf (dia. 2) roughly in the location of each mark.

Position the horizontals "A" against the marks and adjust the bolts to match up with the holes in the horizontals (dia. 3).

Locate the horizontals over the bolt stems and fasten them with the nuts. Square up and tighten. This will give you one side section as shown. Repeat to make the opposite side section.

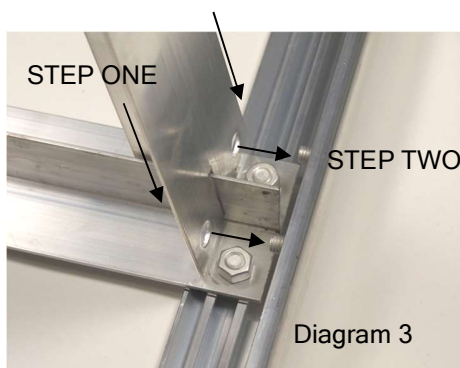


Diagram 3

Join the two side sections using the horizontals "B"  
Step one; position the slot in "B" over the central fin on "A"  
Step two: Slide "B" onto the bolt stems as in diagram 3.

Check the seed trays are a snug fit before tightening the framework fully.

**Please note** that if watertight gravel trays have been supplied with the frame, additional angle supports have been supplied to sit under the trays to avoid any sagging.