

**SEEDLING AND PLANT SHELVING D6(01)**  
*Assembly Instructions*




**COMPONENTS**

Code	Description	Size	Qty
A	Horizontal Tubes	30"	6
B	Horizontal Tubes	8 1/2"	6
C	Upright Tubes	5 5/8"	8
D	Upright Tubes	10 1/4"	8
	Black Joints	4 Way	12
	Black Caps		8
	Seed Trays	With Holes	6
	Drip Trays	Without Holes	6
	Polythene Cover		1

1. Please check the components.
2. Using a wooden or rubber mallet, assemble the two upright end sections as illustrated.
3. Join the end sections using the Horizontal Tubes A to form the completed structure.
4. Position the Drip Trays – 2 per level.

**N B**

The joints fit tightly into the aluminium tubes, knock the tubes securely onto the joints using a mallet. This is easier to do if working on a firm surface.

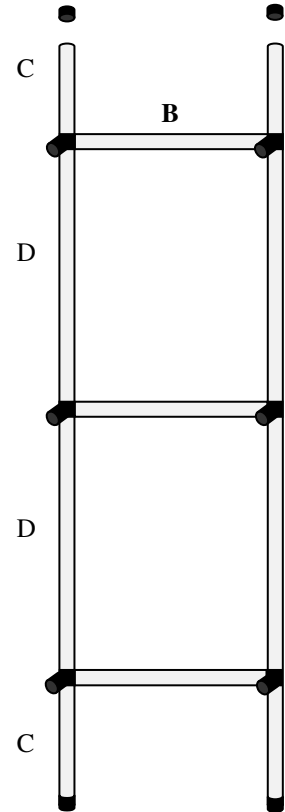

End Sections ( x 2)

