


# Drawer Runners D9a (11)




## Components Required Per Drawer Level.

Runner	x 2
Back Stop Bar	x 1
R1 Cropped Bolts & Nuts	x 6
Drawer Tray	X 1

1. Insert cropped head bolts at the level the drawer is to be attached and turn through 90°. This is best achieved with the frame laying horizontally on the ground.

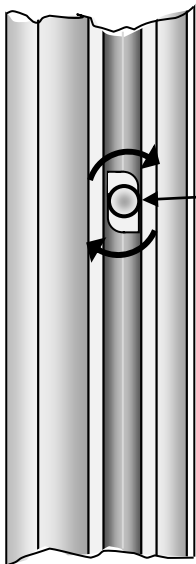

Offer the Drawer Runner over the bolts and secure with a nut.

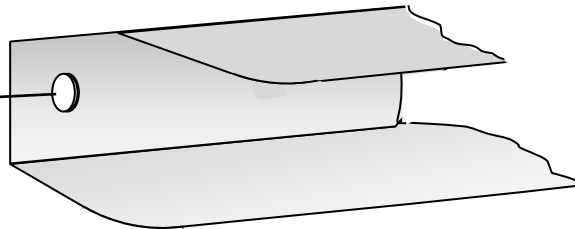

2. Repeat for the remaining Drawer Runners.

3. At the same level of each pair of Drawer Runners, insert a further two cropped bolts into the channel that will be at the back of the unit.

4. Attach a Back Stop Bar across the back of the unit at each drawer level.

