

**WINDOW SILL SHELVING** F14(01)  
**Assembly Instructions**



**TUBE COLOUR:**                    **PLAIN**                    **WHITE**                    **BLACK**


**COMPONENTS**

**Tube**

A 29" (740mm) Horizontal	6
B 6" (155mm) Horizontal	6
C 10¼" (260mm) Vertical	8
D 2" (50mm) Vertical	4

**Joints**

3 way	4
4 way	8
Caps	4
Trays	3
White Base Plate	2
Anti Slip Strip	8"

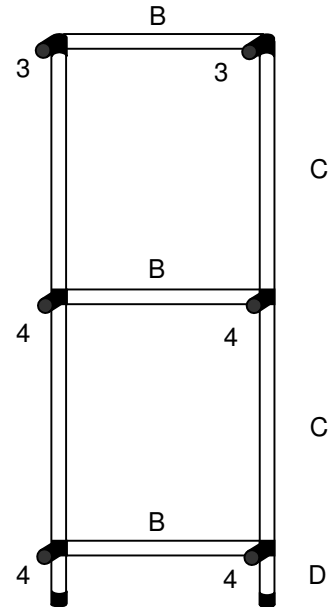

X 2

1. Please check the components.
2. Assemble 2 End sections as per the diagram. The joints are a tight fit into the tube so use a rubber or wooden mallet and assemble on a firm floor.
3. Join the two end sections using the remaining tubes A.
4. The base plates are supplied to add stability in case your window sill is not quite 8" deep. Cut the adhesive backed rubber anti slip strip into pieces approx' 1" long. Stick to either end of the plates inside and on the bottom.

