


## OVERHEAD SPRAY KIT 20' x 15' J10 (15)

### Installation Instruction

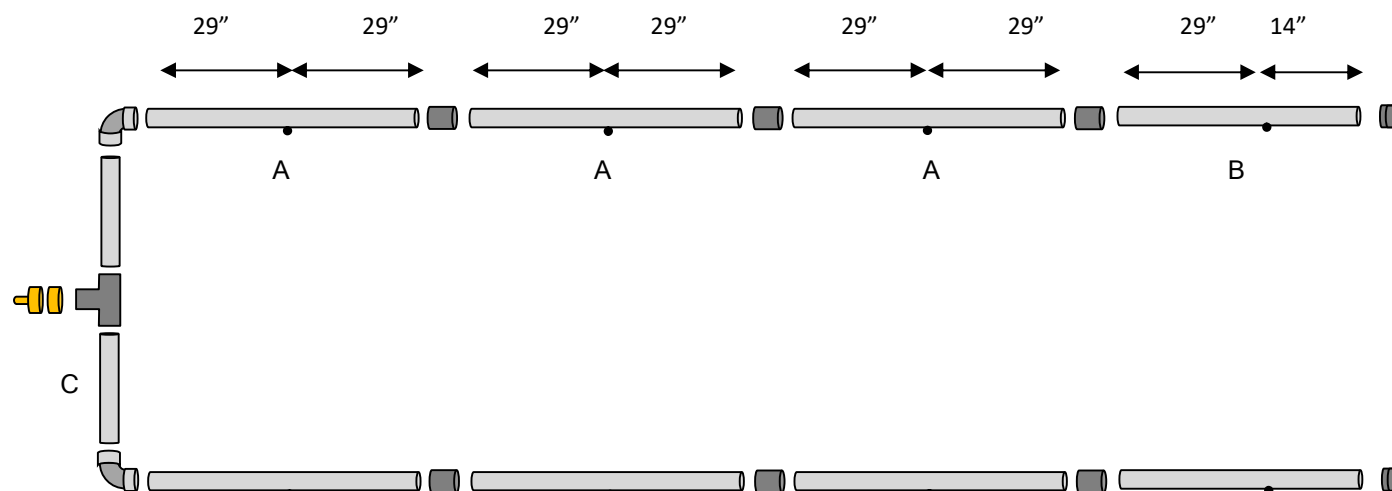

#### Components

Tube A 58" (147cm)	x6
Tube B 43" (110cm)	x2
Tube C 45" (114cm)	x2
Brass fitting to Pipe	x1
Brass fitting to Hose	x1
Threaded Tee	x1
Plain Elbow	x2
Pipe Socket	x6
Pipe End	x2
Spray Nozzle & Adaptor	x8
Suspension hooks and fittings	x18
Adhesive	x1

1. Before assembly please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards along with the elbow connector.  
**PLEASE NOTE:** the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, as near the ridge as possible, and equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the black adaptors into the holes in the pipe work being careful not to over tighten.
6. Push the blue coloured spray heads firmly into the adaptors.
7. Connect a hose from your mains water supply to the brass coupling connector.

#### N.B.:

This system is also ideal for use outdoors in vegetable or soft fruit areas.

**TWO WESTS & ELLIOTT LTD**

**4, Carrwood Road, Chesterfield, Derbyshire, S41 9RH. Tel: (01246) 451077**