


OVERHEAD SPRAY KIT 34' x 15' J13a (15)

Installation Instruction

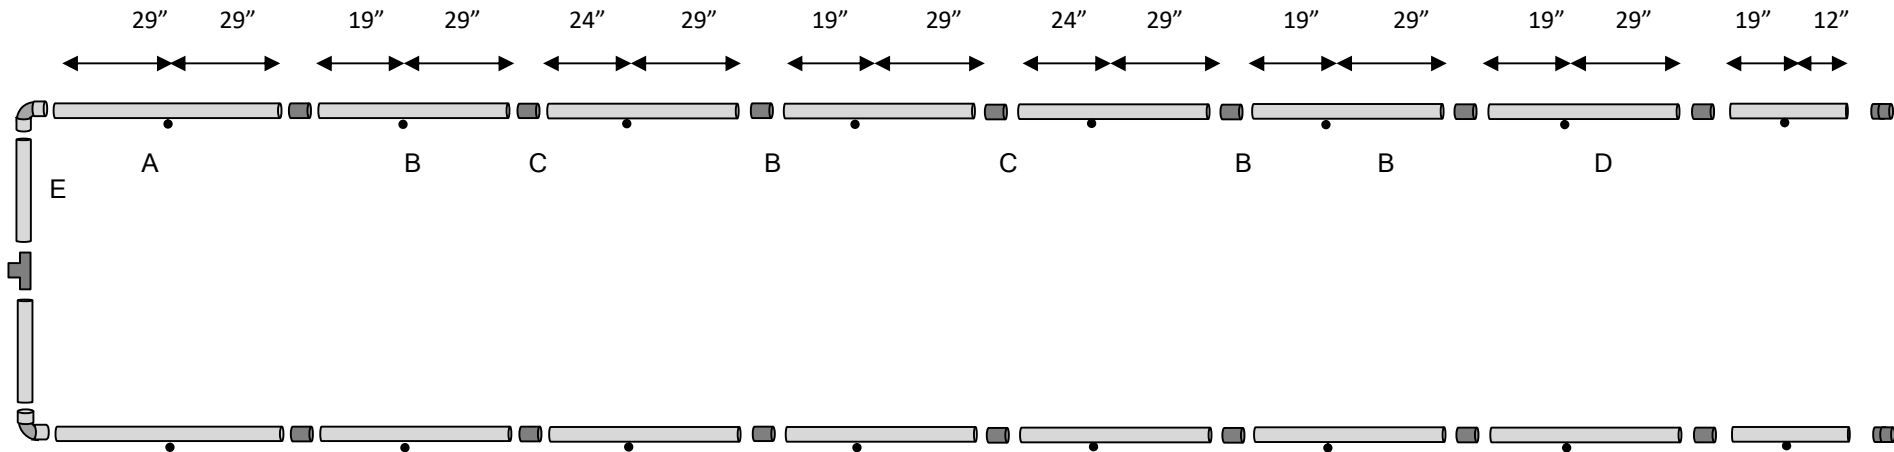

Components

Tube A	58" (147cm)	x2
Tube B	48" (120cm)	x8
Tube C	53" (134cm)	x4
Tube D	31 (78cm)	x2
Tube E	45" (114cm)	x2
Brass fitting to Pipe		x1
Brass fitting to Hose		x1
Plain Elbow		x2
Threaded Tee		x1
Pipe Socket		x14
Pipe End		x2
Spray Nozzle		x16
Suspension hooks and fittings		x32
Adhesive		x1

1. Before assembly please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards along with the elbow connector.
PLEASE NOTE: the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, as near the ridge as possible, and equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the spray nozzles into the holes in the pipe work being careful not to over tighten.
6. Connect a hose from your mains water supply to the brass coupling connector.

N.B.:

This system is also ideal for use outdoors in vegetable or soft fruit areas.

TWO WESTS & ELLIOTT LTD

4, Carrwood Road, Chesterfield, Derbyshire, S41 9RH. Tel: (01246) 451077