


**DELUXE MISTING KIT** J1(03)  
Assembly Instructions



**COMPONENTS**

Component	Kit Size		
	4' x 4'	7' x 4'	10' x 4'
A Mist Jet	1	2	3
B Socket	2	3	4
C ½ Metre Tube	2	3	4
D Elbow	1	1	1
E 1 Metre tube	--	1	2
F 'T' Connector	--	1	2
G Hose Inlet	1	1	1
Tape	1	1	1

1. Please check the components.

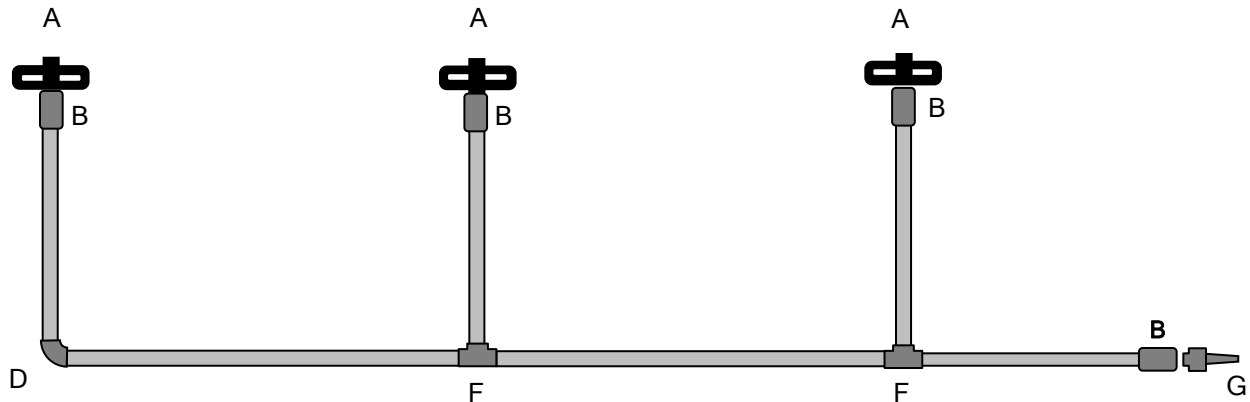

2. Assemble your kit as shown in the diagram using a small amount of the tape on the threaded end of each tube. This facilitates assembly and ensures a watertight joint.
3. If incorporating a solenoid valve, install it between the end socket joint "B" and hose inlet "G".

**AUTOMATIC MISTING**

This system may be made to operate automatically by introducing an Electronic Leaf Controller.