


**OVERHEAD SPRAY KIT 22' x 10' J5 (21)**  
**Installation Instruction**

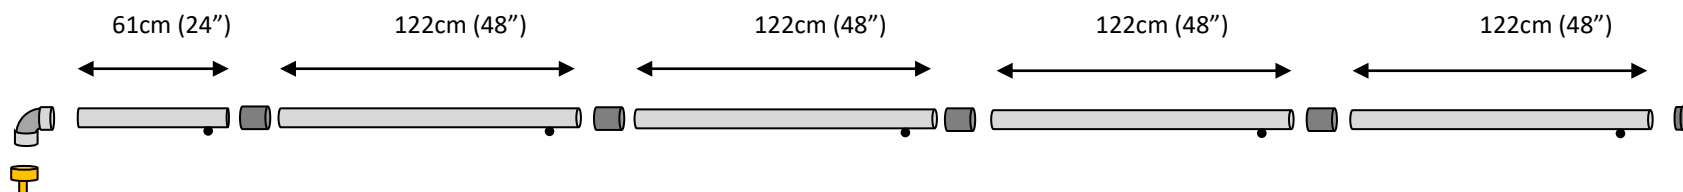

**Components**

Tube A 24" (61cm)	x1
Tube B 48" (122cm)	x4

Brass fitting to Pipe	x1
Brass fitting to Hose	x1
Threaded Elbow	x1
Pipe Socket	x4
Pipe End	x1
Spray Nozzle	x5
Suspension hooks and fittings	x9
Adhesive	x1

1. Before assembly, please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards along with the elbow connector.  
PLEASE NOTE: the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, as near the ridge as possible, and equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the spray nozzles into the holes in the pipe work being careful not to over tighten.  
If the 180\* nozzles are being used check the direction is correct before connecting to the water supply.
6. Connect a hose from your mains water supply to the brass coupling connector.

N.B.:

This system is also ideal for use outdoors in vegetable or soft fruit areas.