


**OVERHEAD SPRAY KIT 28' x 10' J6a (21)**

**Installation Instruction**

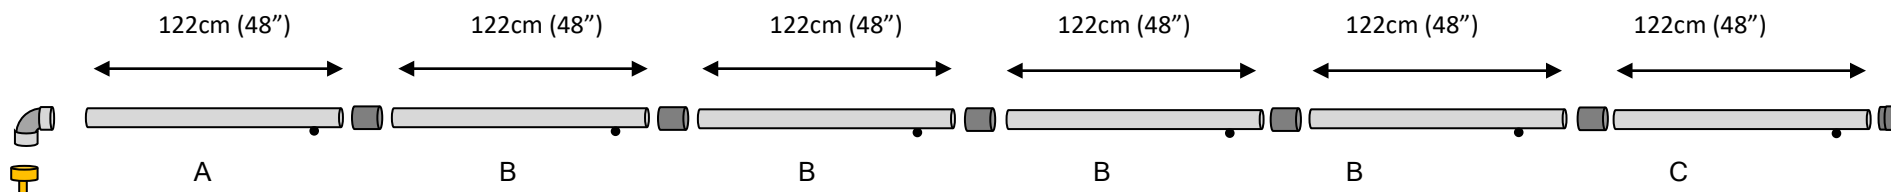

**Components**

Tube A 48" (122cm) x6

Brass fitting to Pipe x1

Brass fitting to Hose x1

Threaded Elbow x1

Pipe Socket x5

Pipe End x1

Spray Nozzle x6

Suspension hooks and fittings x12

Adhesive x1

1. Before assembly, please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards along with the elbow connector.  
**PLEASE NOTE:** the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, as near the ridge as possible, and equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the spray nozzles into the holes in the pipe work being careful not to over tighten.  
If the 180\* nozzles are being used check the direction is correct before connecting to the water supply.
6. Connect a hose from your mains water supply to the brass coupling connector.

**N.B.:**

This system is also ideal for use outdoors in vegetable or soft fruit areas.