


## OVERHEAD SPRAY KIT 30' x 10' J7 (21)

### Installation Instruction

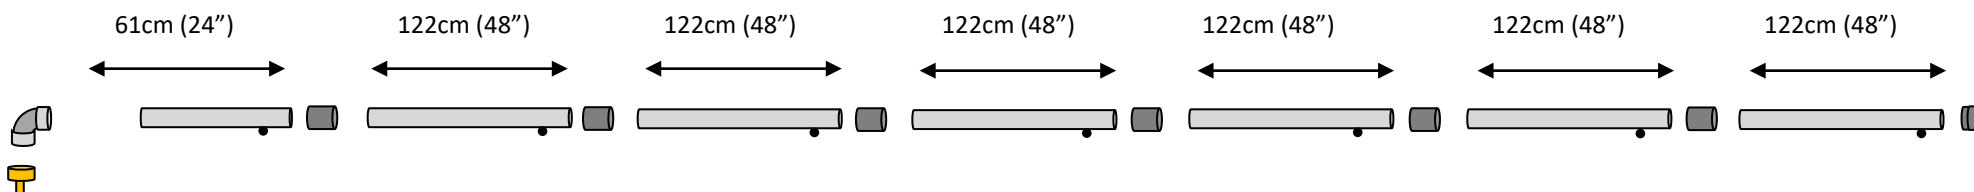

#### Components

Tube A	48" (122cm)	x6
Tube B	24" (61cm)	1
Brass fitting to Pipe		x1
Brass fitting to Hose		x1
Threaded Elbow		x1
Pipe Socket		x6
Pipe End		x1
Spray Nozzle & Adaptors		x7
Suspension hooks and fittings		x13
Adhesive		x1

1. Before assembly, please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards along with the elbow connector.  
PLEASE NOTE: the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, as near the ridge as possible, and equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the black adaptors into the holes in the pipe work being careful not to over tighten.
6. Push the blue coloured spray heads firmly into the adaptors.
7. Connect a hose from your mains water supply to the brass coupling connector.

#### N.B.:

This system is also ideal for use outdoors in vegetable or soft fruit areas.