


**OVERHEAD SPRAY KIT 16' x 15' J9 (22)**  
**Installation Instruction**

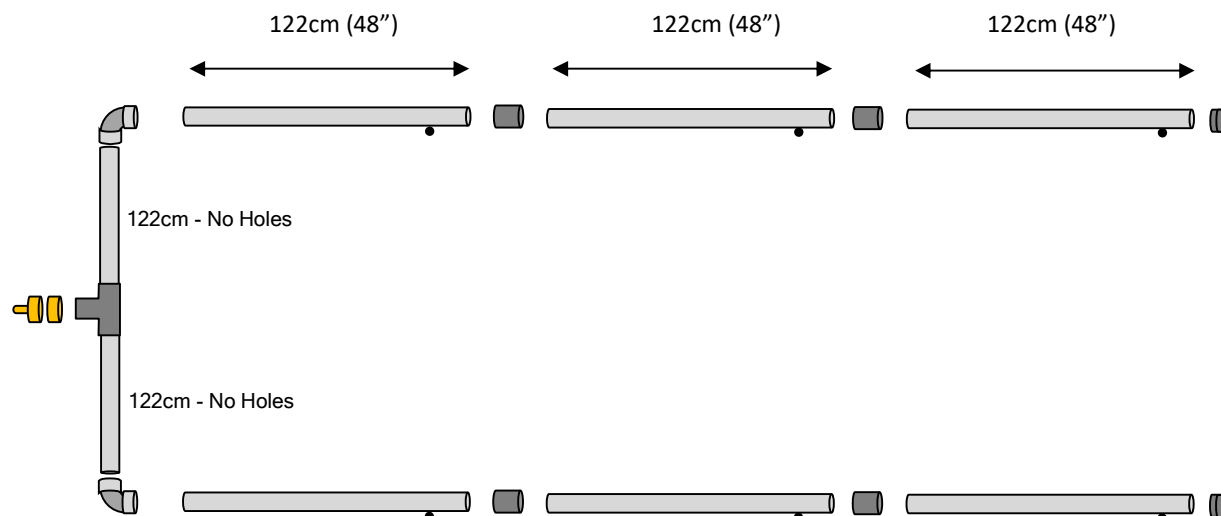

**Components**

Tube A	48" (122cm)	x6
Tube B	48" (122cm) No Holes	x2
Brass fitting to Pipe		x1
Brass fitting to Hose		x1
Threaded Tee		x1
Elbows		x2
Pipe Socket		x4
Pipe End		x2
Spray Nozzle & Adaptor		x6
Suspension hooks and fittings		x12
Adhesive		x1

1. Before assembly, please check that all the pipe and fittings are dry and free from any dirt or dust.
2. Glue the kit together as shown above, ensuring that all the holes are facing downwards, 90\* to the elbow connector.  
**PLEASE NOTE:** the solvent adhesive sets very quickly but allow a minimum of two hours before using the spray kit.
3. Fasten the brackets in the roof glazing bars, equally spaced. Clip on the suspension hooks.
4. Rest the pipe work onto the hooks. The pipe should be as level as possible so adjust the hooks and fittings if necessary.
5. Screw the black adaptors into the holes in the pipe work being careful not to over tighten.
6. Push the blue coloured spray heads firmly into the adaptors.
7. Connect a hose from your mains water supply to the brass coupling connector. **N.B.** This system is also ideal for use outdoors in vegetable or soft fruit areas.