


ROOTRAINER RACK K3 (01)
Assembly Instructions





Components		Number Of Levels		
		1	2	3
Corner Uprights	15cm	4	--	--
Corner Uprights	61cm	--	4	--
Corner Uprights	107cm	--	--	4
A Horizontals	877mm	2	4	6
B Horizontals	377mm	2	4	6
Nuts & Bolts		16	32	48

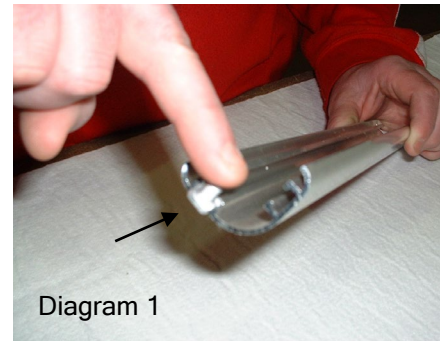

PLEASE NOTE:

Fasten all nuts & bolts finger tight only.
Once the unit is complete tighten them all up.

1. Please check all the components.
2. Decide at what height you require the levels (with the single level unit this wants to be at the top). On the 2 and 3 level units position the first level about 6" from the ground.
3. Mark the positions.
4. Take two of the corner uprights and slide two bolts per level required down the inside channel as (dia.1).
5. Line up the horizontals with the marks you have made (dia.2). Adjust the bolts to match up with the holes in the horizontals and locate them over the bolt stems and fasten them with the nuts.
6. Repeat this to complete two side sections.
7. Lay one side section flat on the floor and slide sufficient bolts down the empty channels. Position the slot in part "B" over the central flat of part "A", locate onto the bolt stems and secure with the nuts (dia. 3).
8. Position the second side section onto the opposite ends of "B" and attach in the same fashion.
9. Check that the Rootainers are a snug fit then square up the structure and tighten fully.

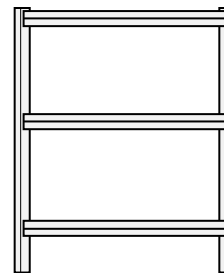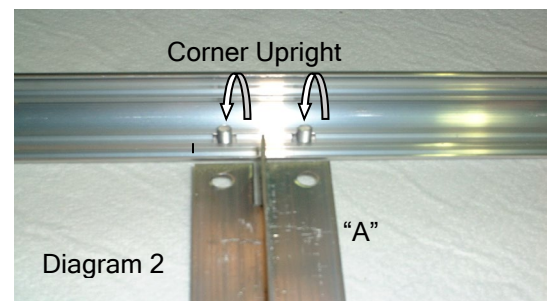

3 Level Side Section

