Easy Hook™ Earth Anchors Assembly Instructions



DESCRIPTION	MODEL #
Easy Hook™ Earth Anchors 6pc.	10035
Easy Hook™ Earth Anchors 4pc.	10036
Easy Hook™ Earth Anchors 8pc.	10038

RECOMMENDED TOOLS







Please read instructions **COMPLETELY** before assembly.

Before you start: 1+ individual recommended for assembly, approximate time 30 min.



150 Callender Road Watertown, CT 06795 www.shelterlogic.com 1-800-524-9970 Canada: 1-800-559-6175

ATTENTION:

This shelter product is manufactured with quality materials. It is designed to fit the **ShelterLogic®**, **LLC** custom fabric cover included. **ShelterLogic®**, **LLC** Shelters offer storage and protection from damage caused by sun, light rain, tree sap, animal - bird excrement and light snow. Please anchor this **ShelterLogic®**, **LLC** structure properly. See manual for more anchoring details. Proper anchoring, keeping cover tight and free of snow and debris is the responsibility of the consumer. Please read and understand the installation detail, warnings and cautions prior to beginning installation. If you have any questions call the customer service number listed below. Please refer to the warranty card inside this package.

DANGER:

Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. Choose the location of your shelter carefully. **DANGER:** *Keep away from electrical wires.* Check for overhead utility lines, tree branches or other structures. Check for underground pipes or wires before you dig. DO NOT install near roof lines or other structures that could shed snow, ice or excessive run off onto your shelter. DO NOT hang objects from the roof or support cables.





WARNING:

Risk of fire. DO NOT smoke or use open flame devices (including grills, fire pits, deep fryers, smokers or lanterns) in or around the shelter. DO NOT store flammable liquids (gasoline, kerosene, propane, etc.) in or around your shelter. Do not expose top or sides of the shelter to open fire or other flame source.





CAUTION:

Use **CAUTION** when erecting the frame. Use safety goggles during installation. Secure and bolt together overhead poles during assembly. Beware of pole ends.

PROPER ANCHORING AND INSTALLATION OF FRAME:

PROPER ANCHORING OF THE FRAME IS THE RESPONSIBILITY OF THE CONSUMER.

ShelterLogic®, **LLC** is not responsible for damage to the unit or the contents from acts of nature. Any shelter that is not anchored securely has the potential to fly away causing damage, and is not covered under the warranty. Periodically check the anchors to ensure stability of shelter. **ShelterLogic®**, **LLC** cannot be responsible for any shelter that blows away. **NOTE:** Your shelter's cover can be quickly removed and stored prior to severe weather conditions. If strong winds or severe weather is forecast in your area, we recommend removal of cover.

REPLACEMENT PARTS, ASSEMBLY, SPECIAL ORDERS:

Genuine **ShelterLogic®**, **LLC** replacement parts and accessories are available from the factory, including anchoring kits for nearly any application, replacement covers, wall and enclosure kits, vent and light kits, frame parts, zippered doors and other accessories. All items are shipped factory direct to your door.

QUESTIONS - CLAIMS - SPECIAL ORDERS? CALL OUR CUSTOMER SERVICE HOTLINE:


U.S. CUSTOMER SERVICE: 1-800-524-9970 INTERNATIONAL CUSTOMER SERVICE: 001-860-945-6442 CANADA CUSTOMER SERVICE: 1-800-559-6175 HOURS OF OPERATION: MON-FRI 8:30AM-8:00PM EST, SAT-SUN 8:30AM-5:00PM EST.

Easy-Hook Earth Anchors

10036 - (4 Pcs.) 10035 - (6 Pcs.)

10038 - (8 Pcs.)

Please Read Instructions Completely Before Installation

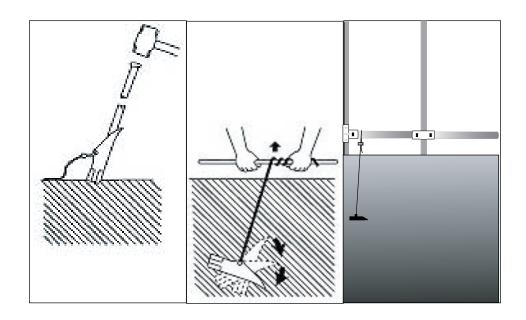

Installing Earth Grabber Anchors

Using the provided steel driving rod and a sledge hammer (an electric rotary hammer may also be used) drive each anchor into the ground leaving approximately 8 inches of cable exposed above the surface. The anchors should be located at the four corners and the remaining should be spaced evenly on both sides. Remove the driving rod; insert it through the loop in the cable and pull up on the cable to set the anchor. After the anchors are firmly set, wrap the cable around the cover rail and clamp with the provided clamps. Be sure to take all the slack from the cable.