


HEAVY DUTY FRUIT CAGE DOOR T12(01)


Assembly Instructions



COMPONENTS:

Description		Qty
A. Door Horizontals	28"	2
B. Door Diagonal	18"	1
C. Door Verticals	80"	2
D. Door Side Vertical	95"	1
E. Door Locking Pin		1
Pack of Net Ties		1
F. 45° Socket Joints		2
G. Tee Socket Joints		5
H. Eye Joints		4
I. Pin Joints		2
Tube caps		4

1. Please check the components
Assemble the door frame and the door side vertical as in the diagram below with the tube caps into each end of "A".
2. Decide where the door is to be positioned in the main fruit cage frame. The door frame needs to close up to or be hung on an existing frame upright.
3. Push the door side vertical into the ground to a depth of approximately 12" and attach to the existing frame horizontal using the last joint.
4. The door can then be hung on the hinges. These may need slight adjustments so that each hinge takes an equal load
The two eye joints are attached to the door upright and the frame upright so when closed, enables you to lock the door with the pin provided.

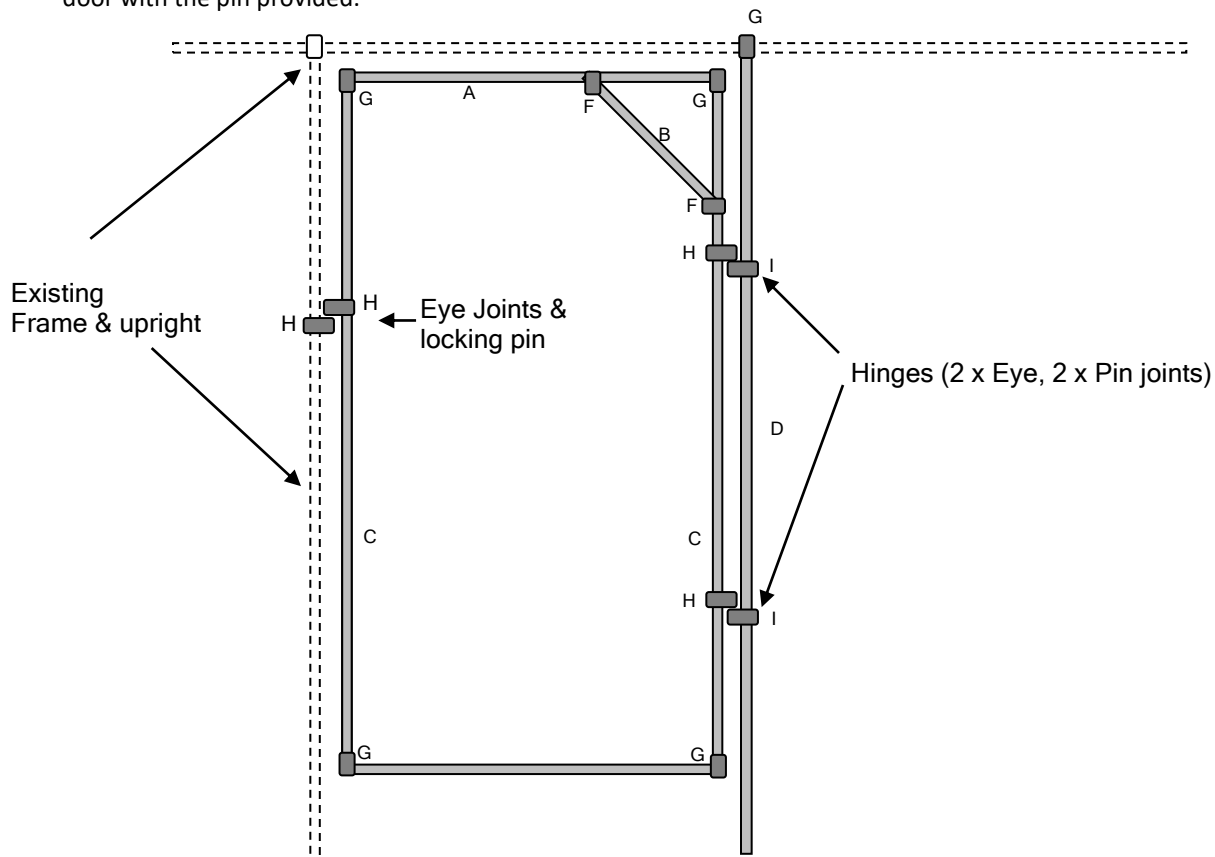

TWO WESTS & ELLIOTT LTD

4, Carrwood Road, Chesterfield, Derbyshire, S41 9RH. Tel: (01246) 451077