


12' CLOCHE HOOP T14 (06)
Assembly Instructions



COMPONENTS:

Components	
Hoop	5
Horizontal Tube	8
Tube Clips	16
Spikes	10

1. Please check the components.
2. Insert a Spike into the bottom of each Hoop leg.
3. Push Tube Clip into each end of the Horizontal Tubes and knock in fully using a Wooden or Rubber mallet.

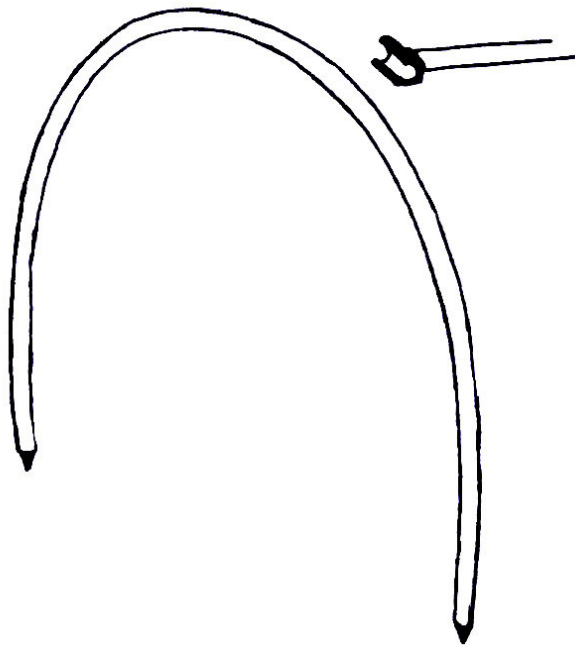

4. Push the verticals into the ground to a depth of approx. 3"- 4"