

FRUIT CAGE T3(01)
MODEL: 6ft HIGH x 6ft WIDE
Assembly Instructions




COMPONENTS:

Components	Length						
	6'	12'	18'	24'	30'	36'	42'
A Tube 7' Corner Leg	4	4	4	4	4	4	4
B Tube 7' Side Leg	--	2	4	6	8	10	12
C Tube 6' Horizontal	4	7	10	13	16	19	22
Netting 2m wide	10m	16m	22m	28m	34m	40m	46
3 Way Corner Joint	4	4	4	4	4	4	4
4 Way Side Joint	-	2	4	6	8	10	12
Spike	4	6	8	10	12	14	16
Netting Ties	50	50	50	100	100	100	150
Ground Pegs	10	15	20	25	30	35	40


1. Please check the components.

Assemble the framework as shown in the diagram using a rubber or wooden mallet to knock the tubes onto the joints, until the tube is up against the shoulder of the joint.

UPRIGHTS

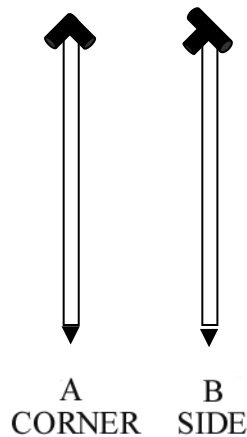

LAYOUT

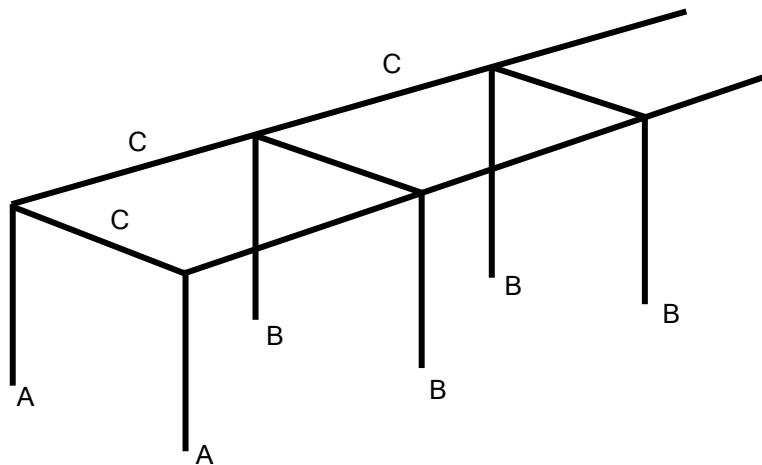

2. Push the verticals into the ground to a depth of approx. 12"
3. Put the netting on in as long lengths as possible to avoid too many overlaps. If you start at one corner and go around the whole frame back to where you started. Wrap the net around the top horizontals and then fasten the net back on to itself using the ties provided.
4. Place the remainder of the net on to the roof and attach it to the side netting using the ties.

PLEASE NOTE:

To prevent snow damage during the winter months, remove the roof netting completely or replace it with pigeon netting.