

FRUIT CAGE T4(01)
MODEL: 6ft HIGH x 12ft WIDE
Assembly Instructions




COMPONENTS:

Components	Length					
	12'	18'	24'	30'	36'	42'
A Tube 7' Corner Upright	4	4	4	4	4	4
B Tube 7' Side Upright	4	6	8	10	12	14
C Tube 7' Centre Upright	1	2	3	4	5	6
D Tube 6' Horizontal	12	17	22	27	32	37
3 Way Corner Joint	4	4	4	4	4	4
4 Way Side Joint	4	6	8	10	12	14
5 Way Centre Joint	1	2	3	4	5	6
Spike	9	12	15	18	21	24
Netting 2m wide	24m	32m	40m	48m	56m	64m
Netting Ties	100	100	100	150	150	200
Netting Pegs	20	25	30	35	40	45

1. Please check the components.

Assemble the framework as shown in the diagram using a rubber or wooden mallet to knock the tubes onto the joints, until the tube is up against the shoulder of the joint.

Push the uprights into the ground to a depth of approximately 12"

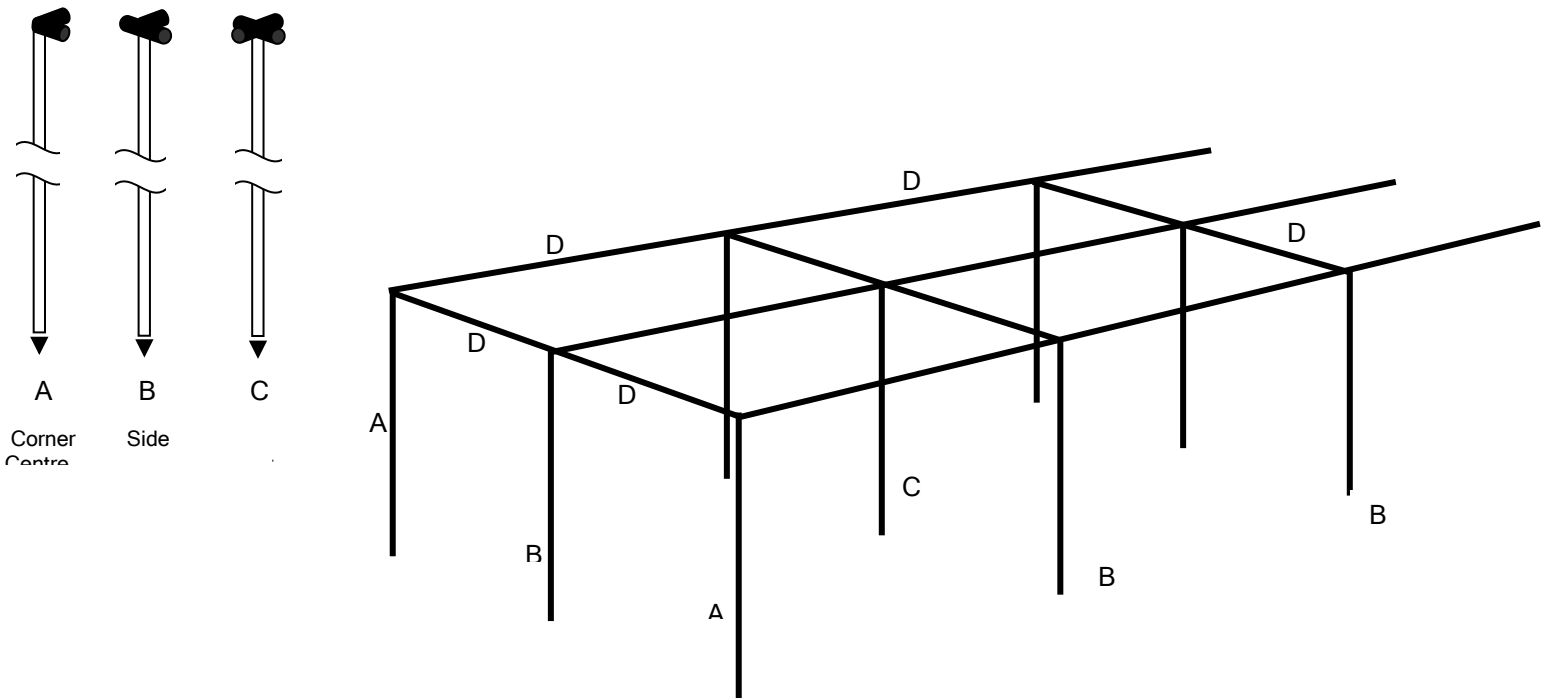

- Put the netting on in as long lengths as possible to avoid too many overlaps. If you start at one corner and go around the whole frame back to where you started. Wrap the net around the top horizontals and then fasten the net back on to itself using the ties provided.
- Place the remainder of the net on to the roof and attach it to the side netting using the ties. This will allow you to detach the roof net without removing the side net.

PLEASE NOTE:

To prevent snow damage during the winter months, remove the roof netting completely or replace it with pigeon netting.