

**FRUIT CAGE** T5(01)  
**MODEL: 6ft HIGH x 18ft WIDE**  
Assembly Instructions





**COMPONENTS:**

Components	Length					
	18'	24'	30'	36'	42'	48'
A Tube 7' Corner Leg	4	4	4	4	4	4
B Tube 7' Side Leg	8	10	12	14	16	18
C Tube 7' Centre Leg	4	6	8	10	12	14
D Tube 6' Horizontal	24	31	38	45	52	59
3 Way Corner Joint	4	4	4	4	4	4
4 Way Side Joint	8	10	12	14	16	18
5 Way Centre Joint	4	6	8	10	12	14
Spike	16	20	24	28	32	36
Netting 2m wide	42m	52m	62m	72m	82m	92m
Netting Ties	100	150	150	200	200	250
Ground Pegs	30	35	40	45	50	55

1. Please check the components.
2. Assemble the framework as shown in the diagram using a rubber or wooden mallet to knock the tubes onto the joints, until the tube is up against the shoulder of the joint.

**UPRIGHTS**

**LAYOUT**

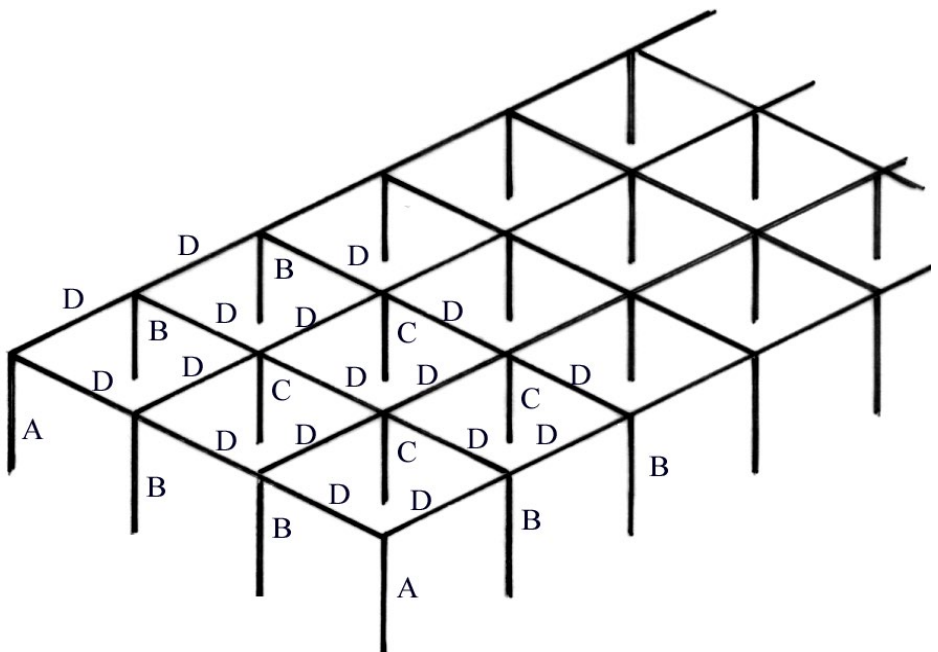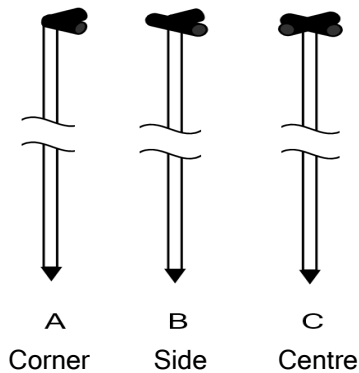

3. Push the verticals into the ground to a depth of approx 12"
4. Put the netting on in as long lengths as possible to avoid too many overlaps. If you start at one corner and go around the whole frame back to where you started. Wrap the net around the top horizontals and then fasten the net back on to itself using the ties provided.
5. Place the remainder of the net on to the roof and attach it to the side netting using the ties. This will allow you to detach the roof net without removing the side net.

**PLEASE NOTE:**

**To prevent snow damage during the winter months, remove the roof netting completely or replace it with pigeon netting.**