

**FRUIT CAGE T6(01)**  
**MODEL: 6ft HIGH x 24ft WIDE**

**Assembly Instructions**




**COMPONENTS:**

Components	24'	30'	36'	42'	48'	54'
A Tube 84" Corner Leg	4	4	4	4	4	4
B Tube 84" Side Leg	12	14	16	18	20	22
C Tube 84" Centre Leg	9	12	15	18	21	24
D Tube 72" Horizontal	40	49	58	67	76	85
3 Way Corner Joint	4	4	4	4	4	4
4 Way Side Joint	12	14	16	18	20	22
5 Way Centre Joint	9	12	15	18	21	24
Spike	25	30	35	40	45	50
Netting 2m wide	64m	76m	88m	100m	112m	124m
Netting Ties	200	200	250	250	300	300
Ground Pegs	40	45	50	55	60	65


Please check the components.

- Assemble the framework as shown in the diagram by pushing the tips of the joints into the tubes by hand then use a rubber or wooden mallet to knock the tubes onto the joints, until the tube is up against the shoulder of the joint.

**UPRIGHTS**

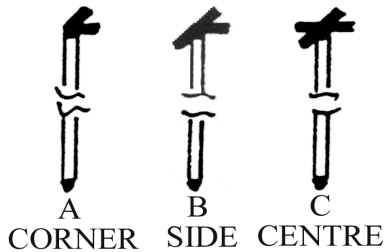

**LAYOUT**

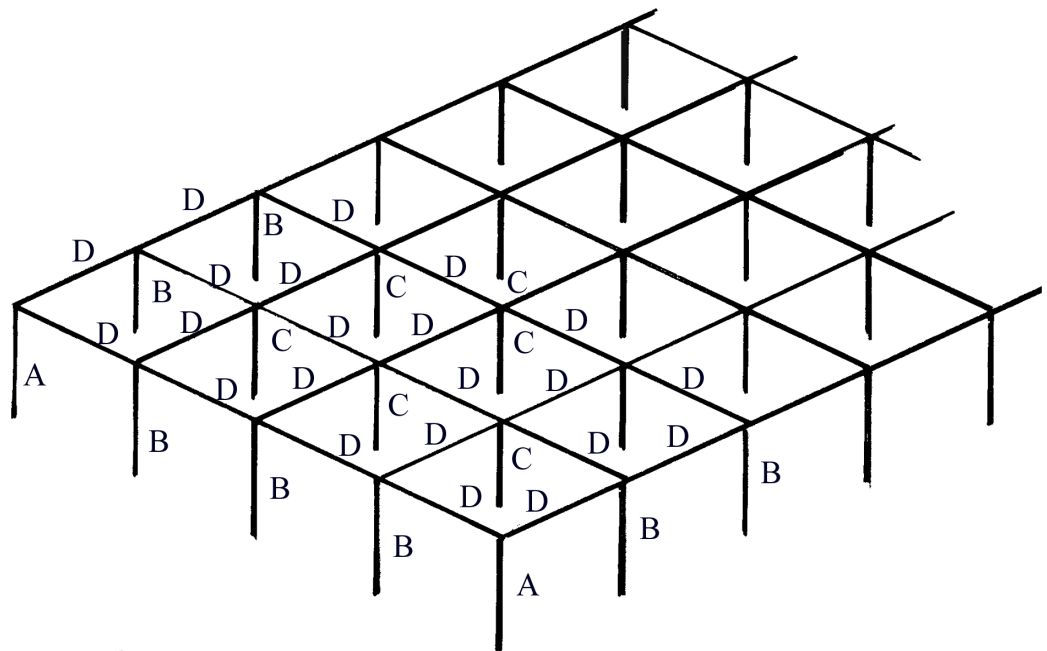

- Push the verticals into the ground to a depth of approx 12"
- Put the netting on in as long lengths as possible to avoid too many overlaps. If you start at one corner and go around the whole frame back to where you started. Wrap the net around the top horizontals and then fasten the net back on to itself using the ties provided.
- Place the remainder of the net on to the roof and attach it to the side netting using the ties. This will allow you to detach the roof net without removing the side net.

**PLEASE NOTE:**

To prevent snow damage during the winter months, remove the roof netting completely or replace it with pigeon netting.