

Standard & Deluxe Cage Doors^{T7 (09)}



Assembly Instructions

Components

A	7' Tube Upright (Inc' Clip & Spike)	1
B	70" Tube Door Vertical	2
C	34 1/2" Tube Door Horizontal	2
D	2 Way Corner Joint	4
E	Hinge Clip	2
F	Double Tube Clip	1
	Netting Ties (pack of 50)	1
	Netting*	1m



*If purchased with a Fruit Cage, this will be included in the main roll

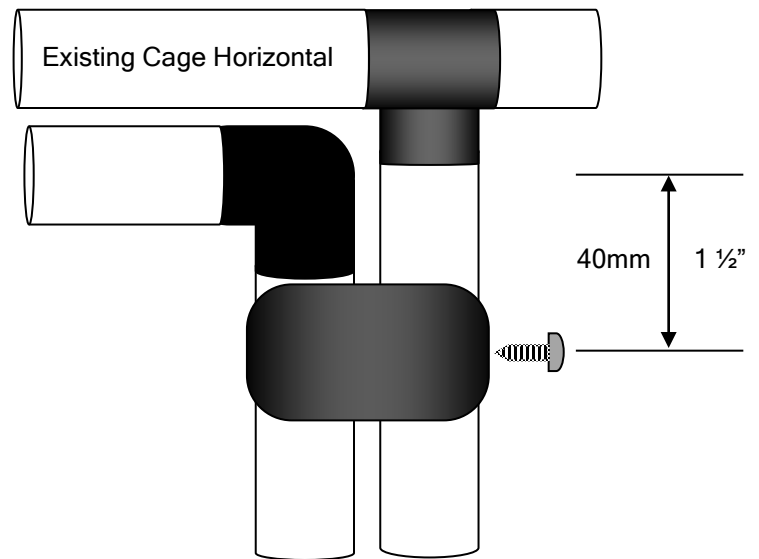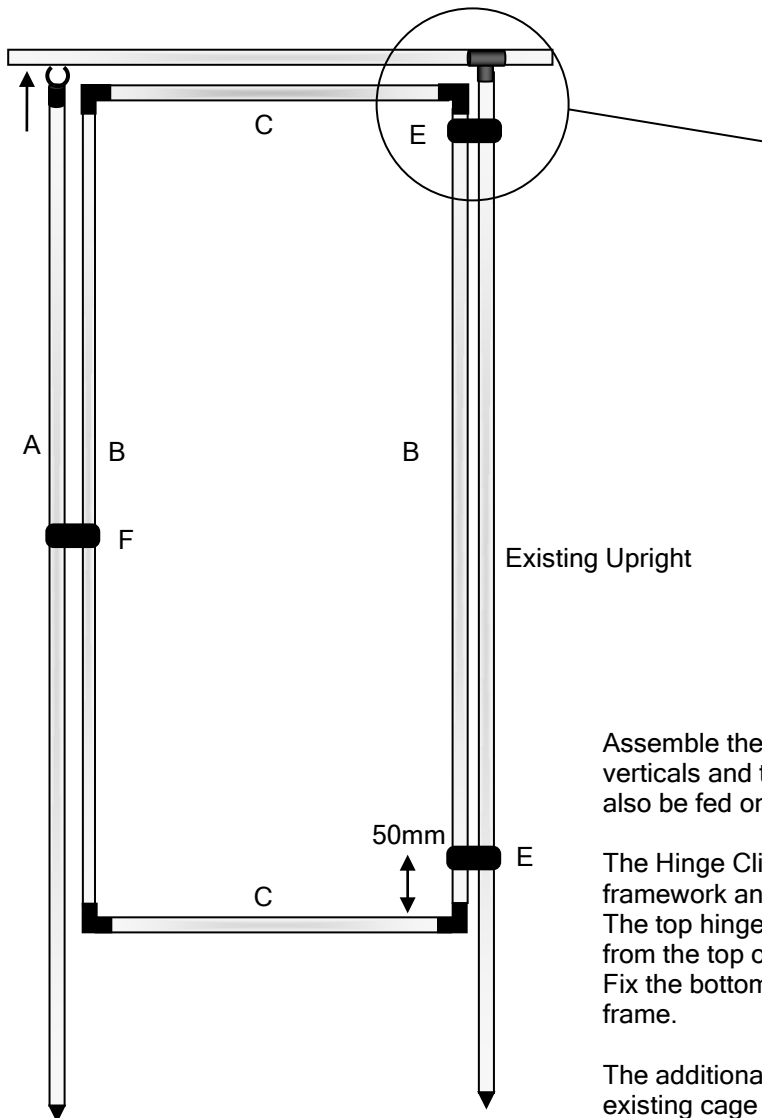

Assemble the main door frame using the two door horizontals, two door verticals and the four corner joints (flat face up). The two Hinge Clips must also be fed onto one of the Door Verticals at this point.

The Hinge Clips can then be fed onto the existing upright on the cage framework and secured using the self tapping screws. The top hinge needs to be fixed onto the existing upright at 40mm (1 1/2") from the top of the tube. This allows it to take the weight of the door. Fix the bottom hinge approximately 50mm (2") for the bottom of the door frame.

The additional 7' upright included with the door, clips to the underside of the existing cage horizontal and provides the stay for the door to close up to when the door is in the closed position. It is then secured by the Double Tube Clip.

TWO WESTS & ELLIOTT LTD

4, Carrwood Road, Chesterfield, Derbyshire, S41 9RH. Tel: (01246) 451077