

ASSEMBLY INSTRUCTIONS


Please DO NOT Fully Tighten Nuts and Bolts until Step 12

BucketBarrow™


Step 1




Step 2

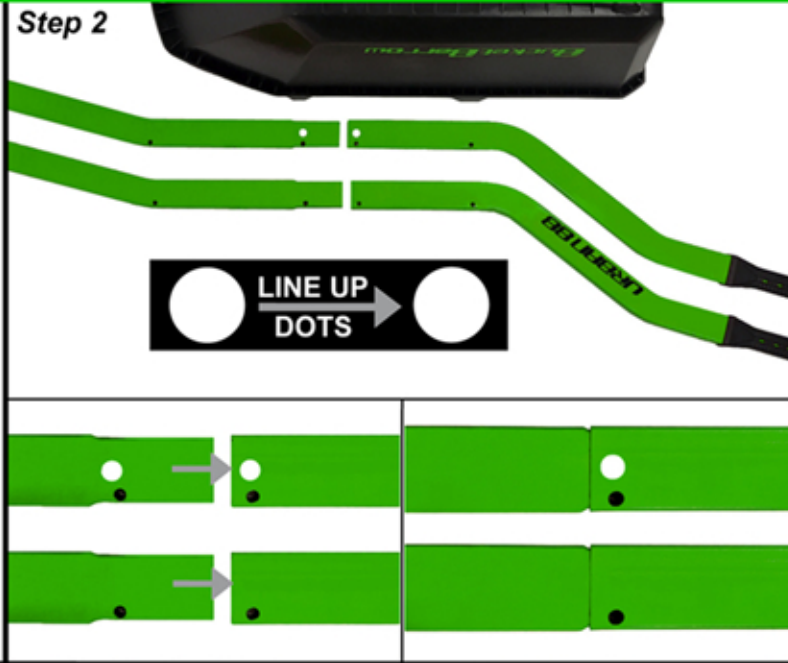


Step 7

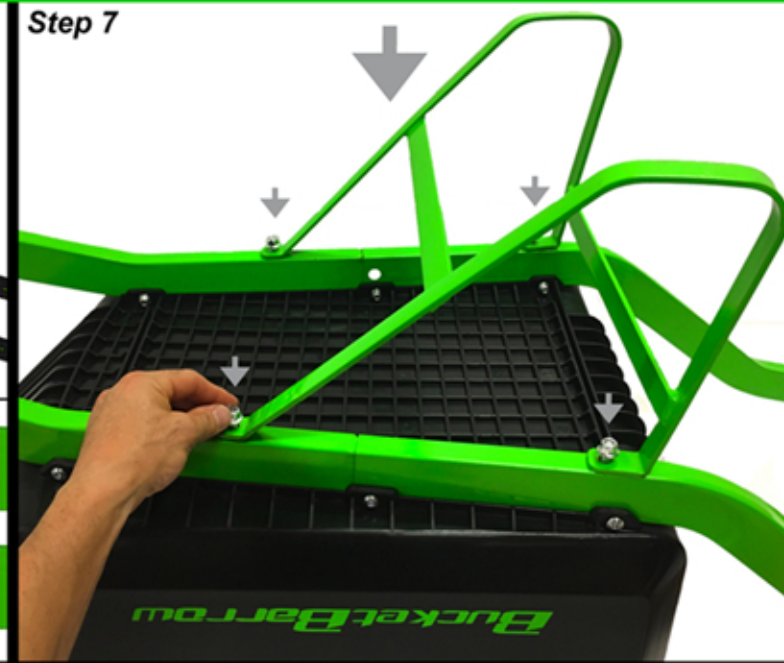


Step 8

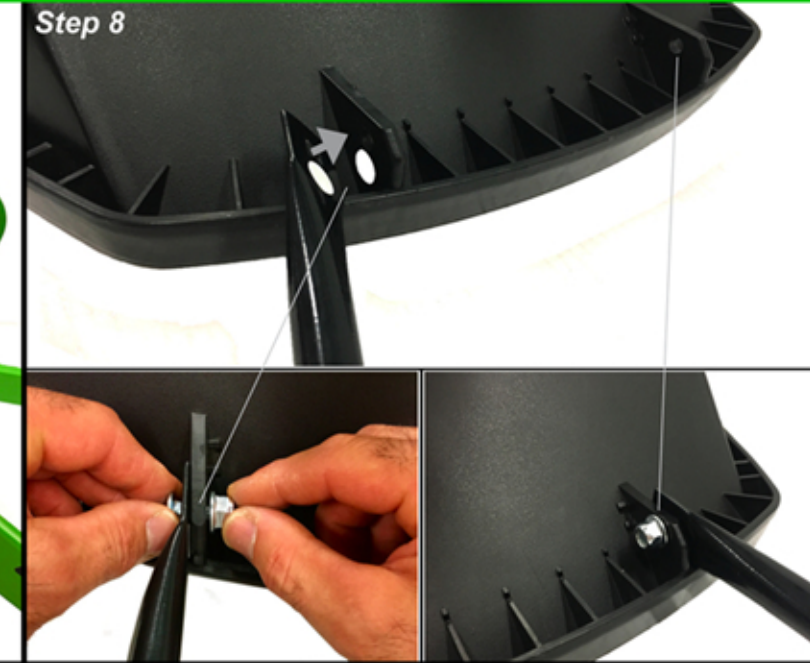


Step 3

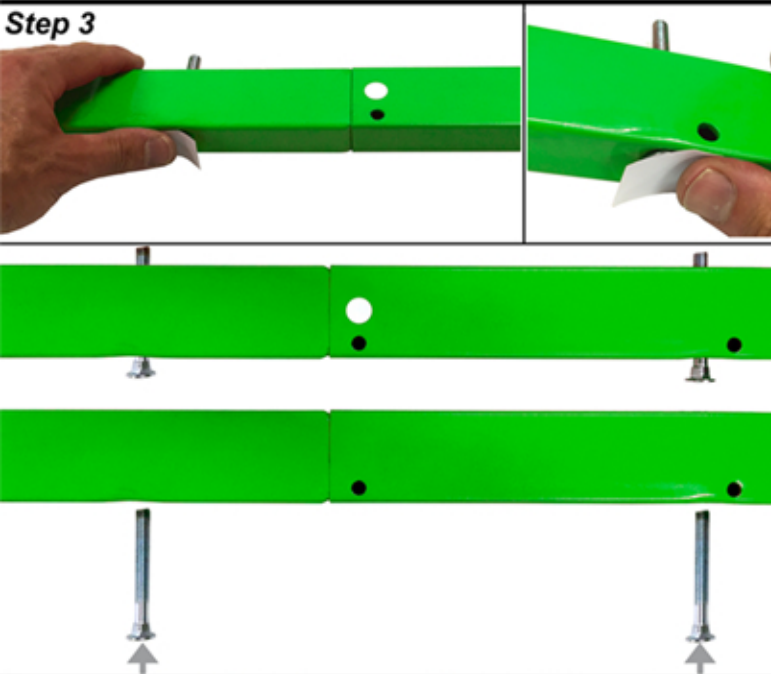

Step 4

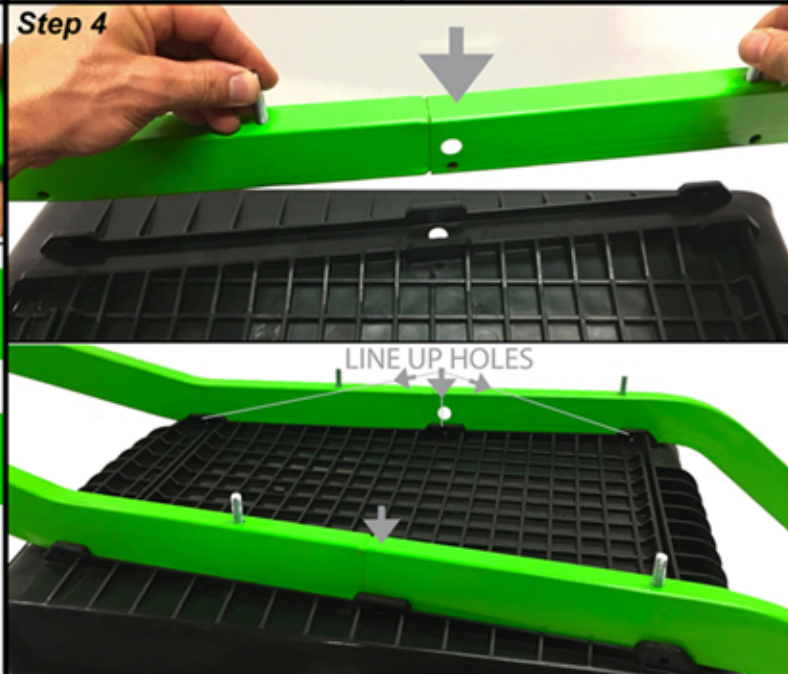


Step 9

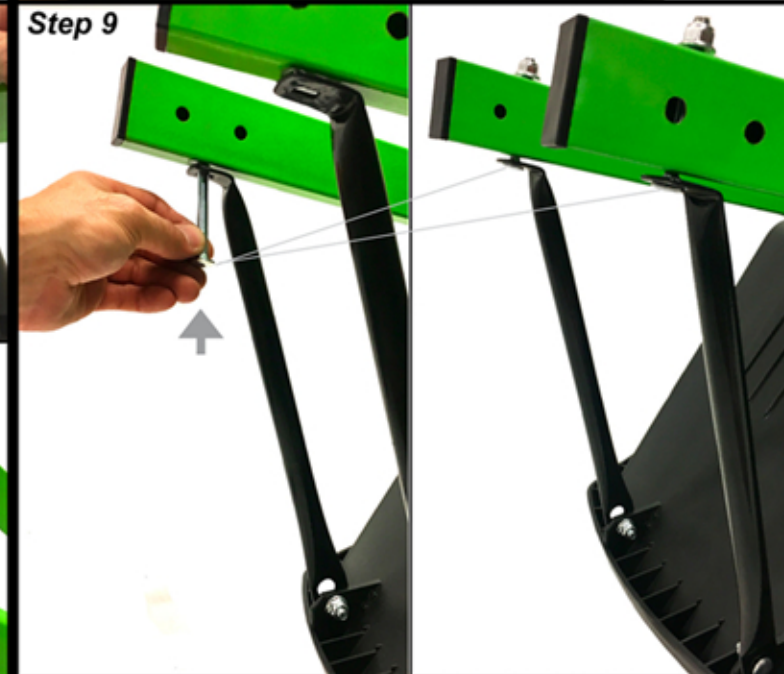


Step 10



Step 5

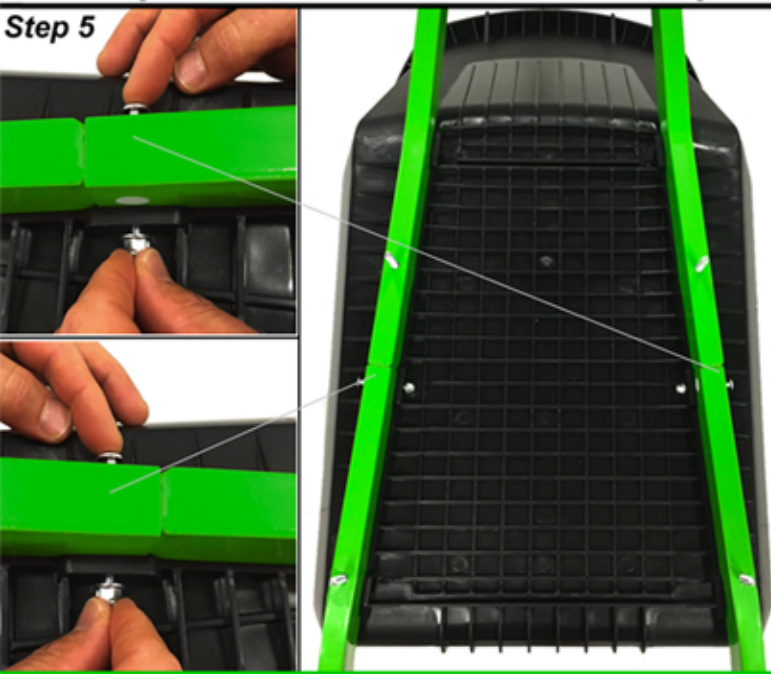


Step 6

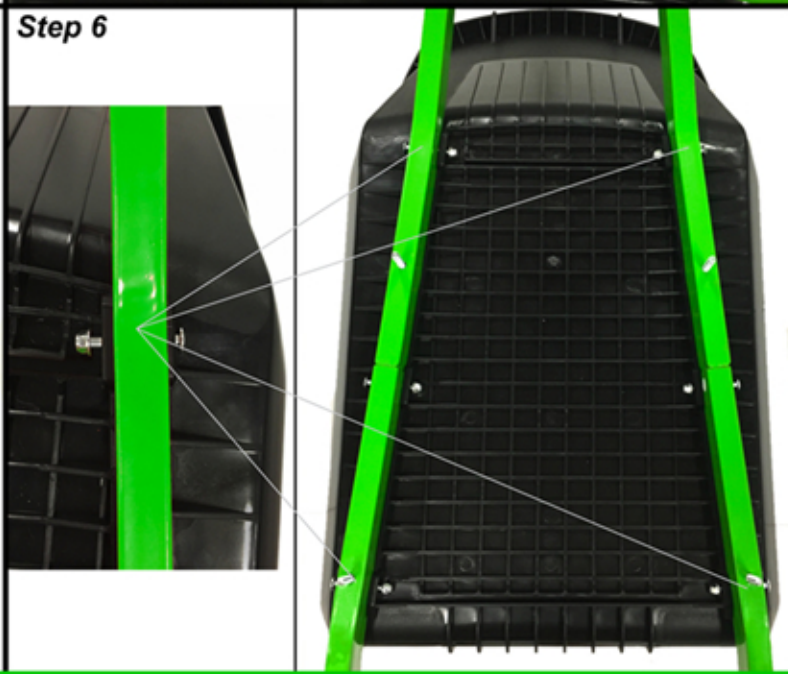

Step 11



Step 12

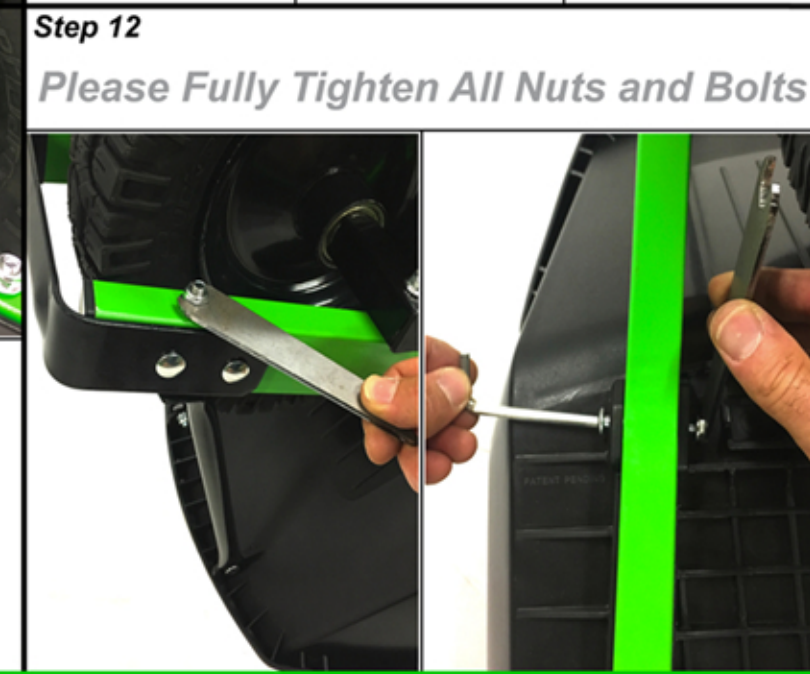

Please Fully Tighten All Nuts and Bolts

ASSEMBLY VIDEO - Visit BucketBarrow.com

URBAN 88™