

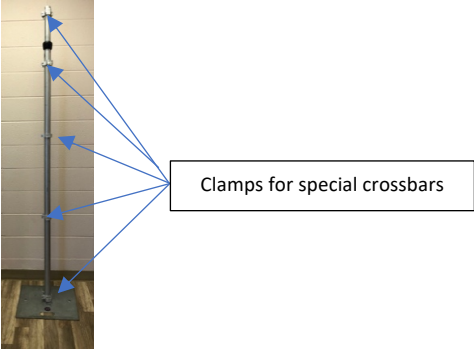
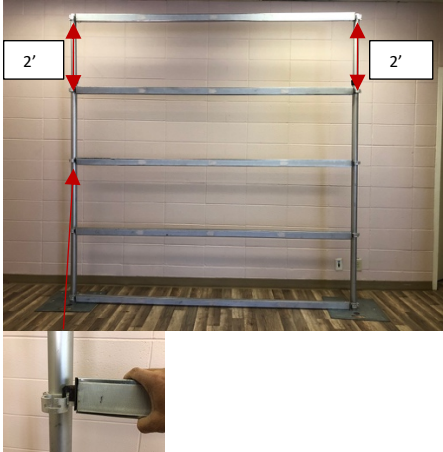


SETUP INSTRUCTIONS

STYLE – FW1, FW2, FW3 and TW1



Backdrop size: 8'wide x 8'H

<p>Step 1</p>		<p>Base plates placement Place the base plates in the desired location at the width of the backdrop. You can use 8' crossbar to measure the width from pin to pin. *If you are making the backdrop on hardwood, laminate or other floor which may get damaged, we suggest using a plate size cardboard underneath the plates.</p>
<p>Step 2</p>		<p>Erecting uprights Check the base plate pin, it should not be wobbly. If needed, turn the pin in the clockwise direction to tighten. These uprights come with 5 clamps attached to each of them. Slide the upright lower section on to the pin.</p>
<p>Step 3</p>		<p>Installing special crossbars Install special crossbars with Velcro on the clamps attached to the uprights. Install total of 5 crossbars as shown. Adjust the height of the top clamp to 2' from the clamp below it by raising the upright. Do the same on other upright. (check our hardware instructions if you need help in operating upright)</p>



SETUP INSTRUCTIONS

STYLE – FW1, FW2, FW3 and TW1

Step 4

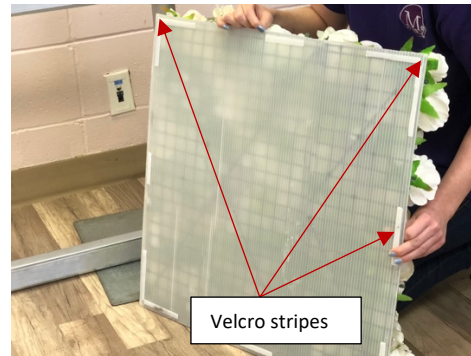


Installing 2'x2' Floral slides

*Floral slides come with Velcro stripes attached to the back.

- i. Start from the bottom left or right end of the backdrop. Stick the slide on bottom 2 crossbars aligning the bottom of the slide to the bottom of the crossbar.
- ii. Stick the second slide in the same row and continue until full width is covered.
- iii. Start sticking the slide in second row and continue sticking the slides until entire area of the backdrop is covered.
- iv. Attach the additional flowers in the gaps if needed.

Enjoy your backdrop



2'x2' Floral Slides