



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE ROCK SLIDERS ◀

SUBARU CROSSTREK 2013-2017

CONGRATULATIONS FOR YOUR NEW LP AVENTURE ROCK SLIDER KIT!

If you have any questions or need assistance during the installation please contact our team. You can find the information on the last page.



IN THE BAG





NECESSARY TOOLS

- We recommend the use of a lift
- Ratchet
- 12mm Socket
- 14mm Socket
- 18mm Socket
- 19mm Socket
- 22mm Socket
- Torque wrench

BEFORE YOU START

-If your model of vehicle came with front molded mud guards, remove them before starting installation.


-If your are installing rock sliders on a lifted vehicle skip to page 13.

****IF YOU PURCHASED A BARE KIT INSTALL THE BUMP STOPS NOW**



1

REMOVE GAS TANK PLASTICS

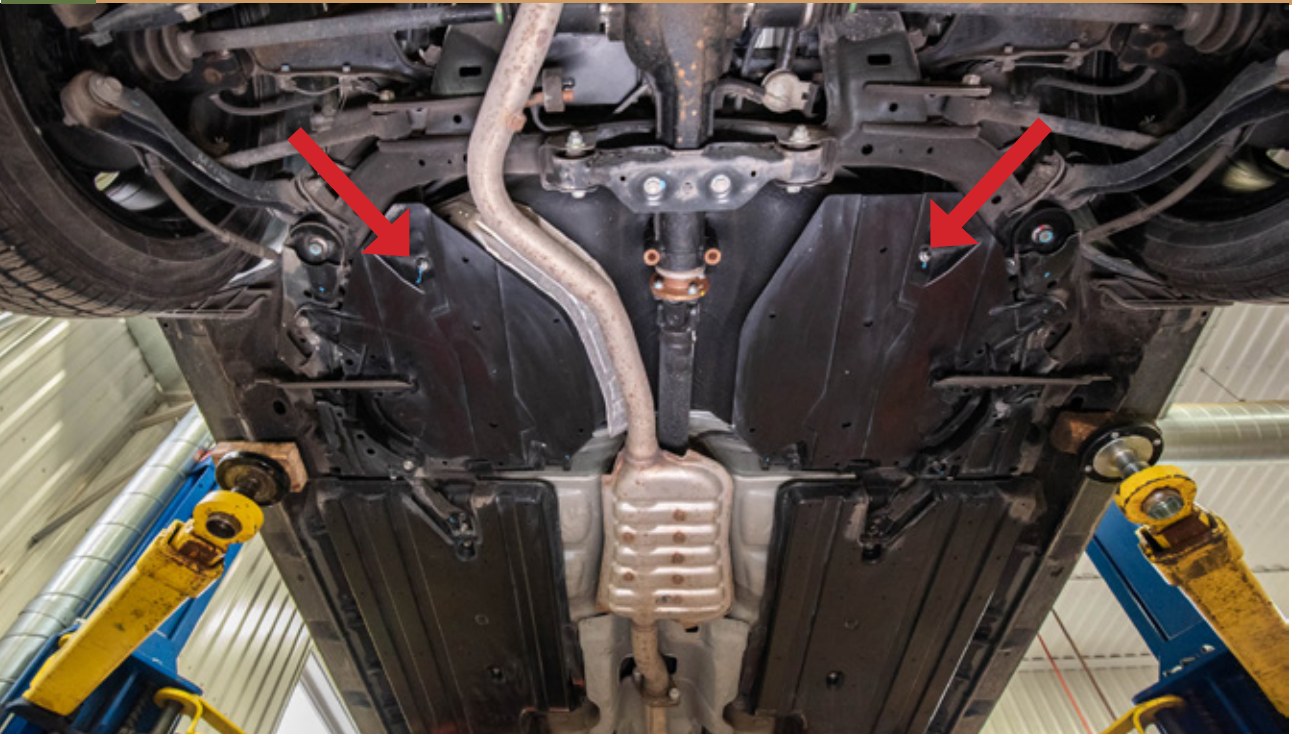



2

REMOVE REAR SUB FRAME SUPPORT BAR





2

REMOVE TWO REAR SUB FRAME BRACKET BOLTS





3

LOOSEN BUT DO NOT REMOVE SUB FRAME BOLT



4

REMOVE FRONT SUSPENSION ARM BOLT





5

RAISE THE ROCK SLIDER INTO PLACE AND THREAD IN THE FRONT BOLT BUT DO NOT TIGHTEN



6

INSTALL REAR MOUNT OF THE ROCK SLIDER BETWEEN THE CARS BODY AND REAR SUB FRAME BRACKET



7

RE INSTALL SUB FRAME BRACKET BOLTS



8

TIGHTEN BACK UP THE REAR SUB FRAME BOLT



9


RE-INSTALL REAR SUB FRAME SUPPORT ROD/ GAS TANK PLASTICS
INSTALLATION COMPLETE!



****Installation for lifted vehicles****


1

REMOVE GAS TANK PLASTICS

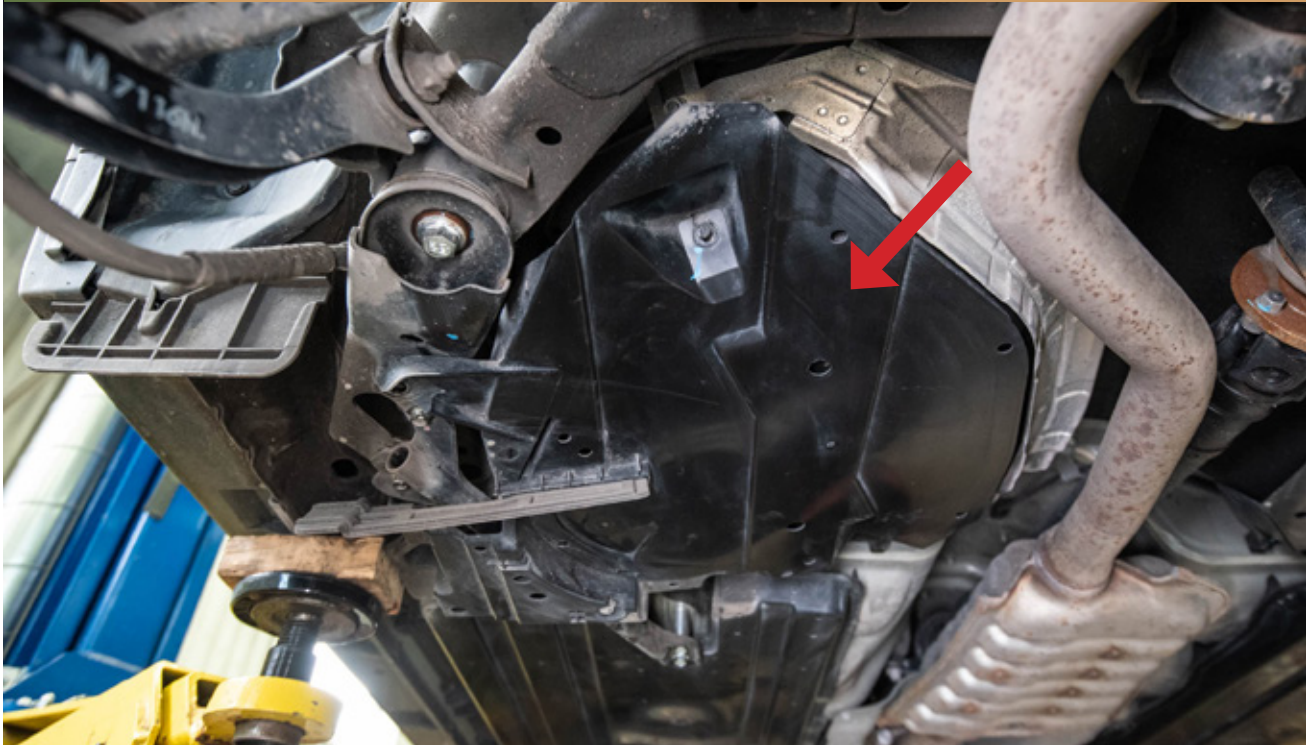

2

REMOVE REAR SUB FRAME SUPPORT BAR

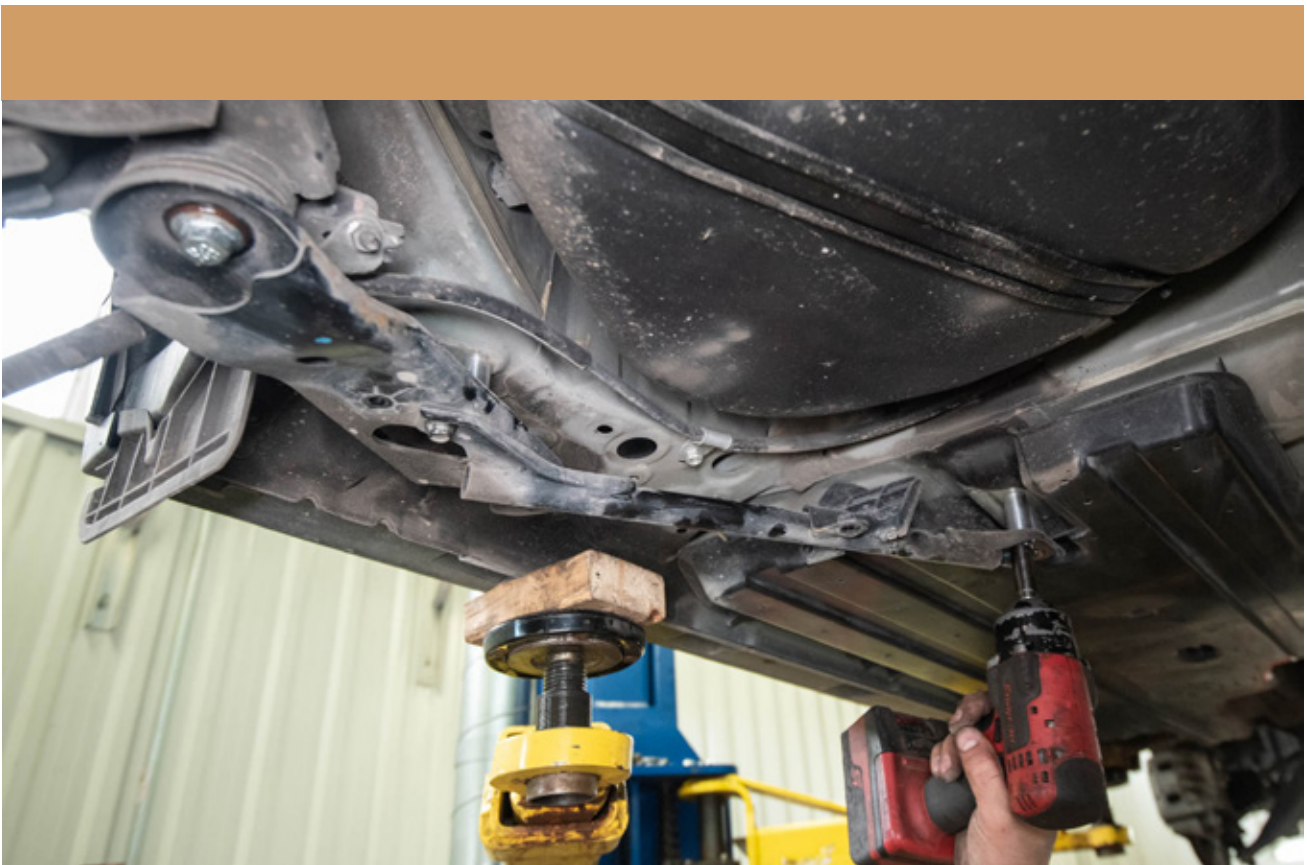

3

REMOVE SUB FRAME SUPPORT BAR SPACERS



4

REMOVE REAR SUB FRAME BRACKET BOLTS



5

LOOSEN BUT DO NOT REMOVE SUB FRAME BOLT



6

REMOVE REAR SUB FRAME BRACKET SPACERS



7

REMOVE FRONT SUSPENSION ARM BOLT





8

RAISE THE ROCK SLIDER INTO PLACE AND PLACE THE REAR MOUNTING POINT IN BETWEEN THE BODY AND THE REAR SUB FRAME BRACKET



8

RE INSTALL THE SUB FRAME BRACKET SPACERS



9

TIGHTEN REAR SUB FRAME BOLT



10

SECURE FRONT OF THE ROCK SLIDER



11

RE ATTACH SUB FRAME SUPPORT BAR WITH THE SPACERS





12

RE INSTALL GAS TANK PLASTICS



INSTALLATION COMPLETE !





NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-product-warranty>**



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!