

SUBARU OUTBACK 2015-2019

CONGRATULATIONS FOR YOUR NEW LP AVENTURE SKID PLATE!

If you have any questions or need assistance during the installation please contact our team. You can find the infomation on the last page.



IN THE BOX

IN THE BAGS




NECESSARY TOOLS


- We recommend the use of a lift
- Transmission jack (or regular jack if not on a lift)
- Ratchet
- 19mm Wrench
- 17mm Socket
- 18mm Socket
- 19mm Socket
- Trim removal tool


1 IF YOU DO NOT HAVE OUR BUMPER GUARD THEN REMOVE FACTORY PLASTIC UNDERTRAY





2 REMOVE BOLTS

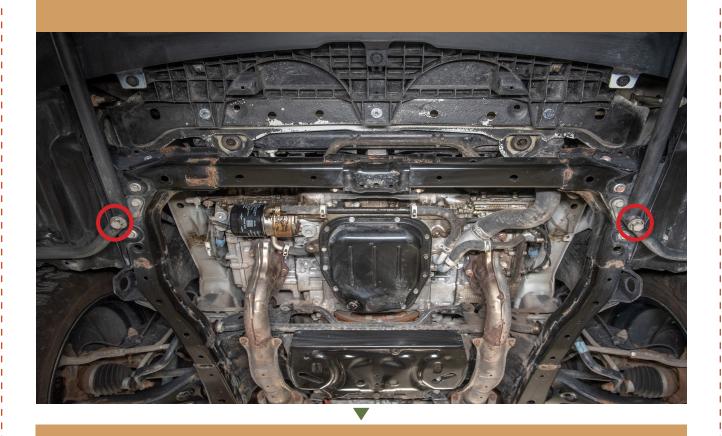

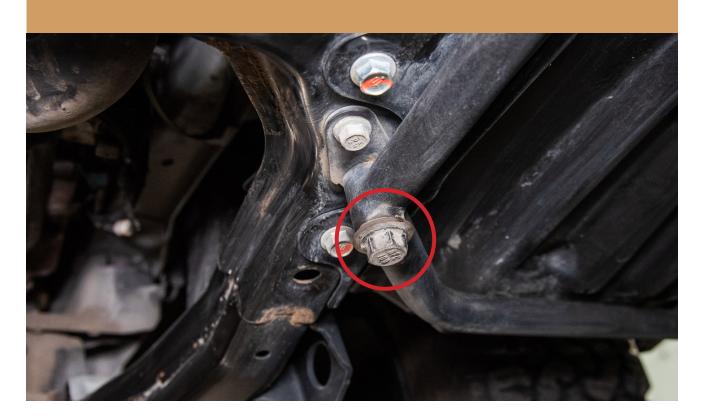


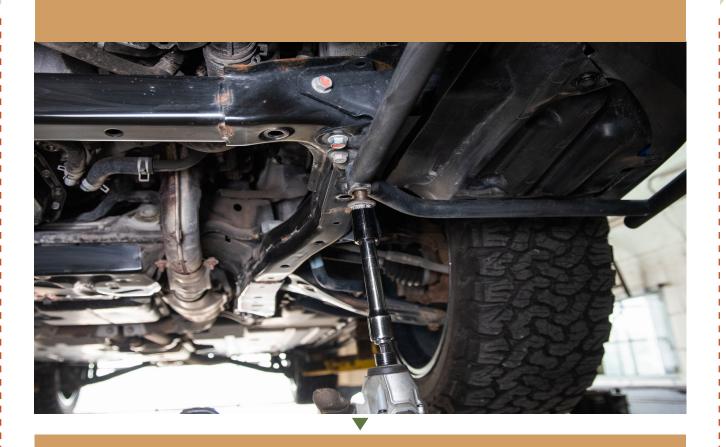


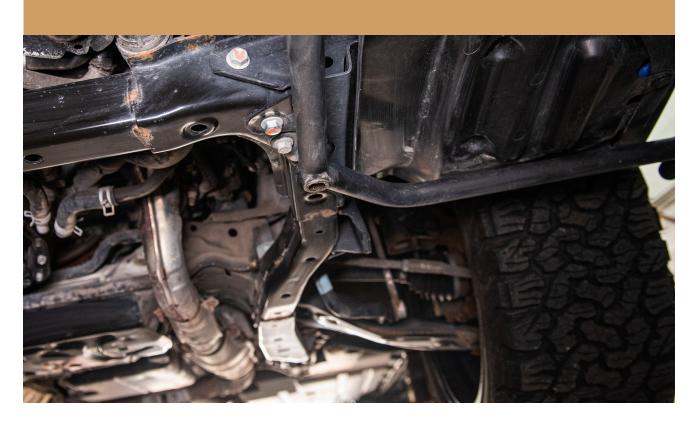


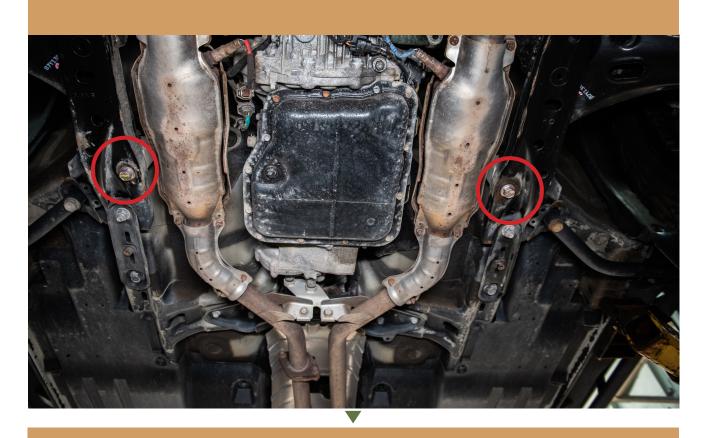


USE A WRENCH ON THE NUT ON TOP OF THE BOLT

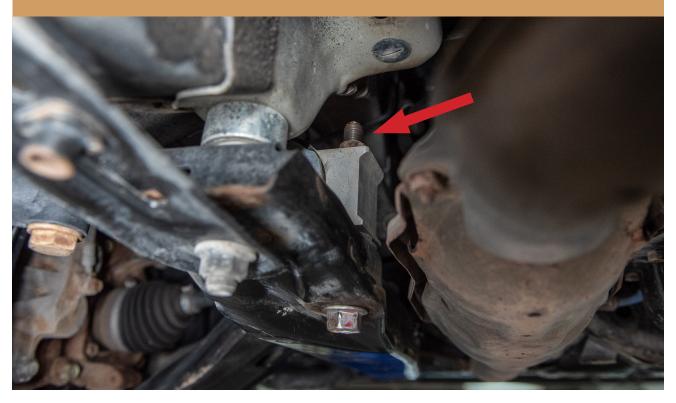


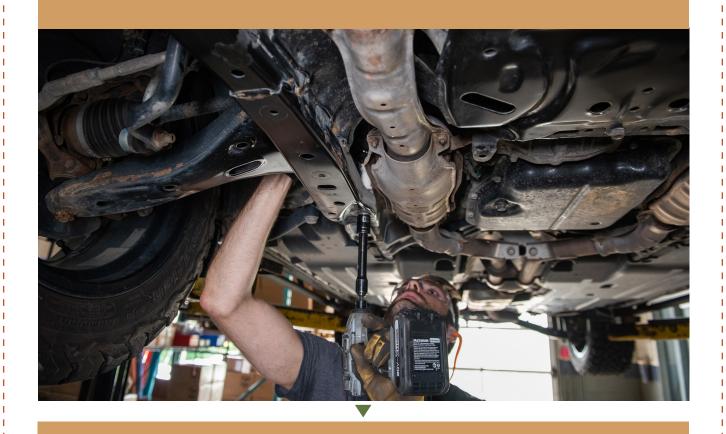

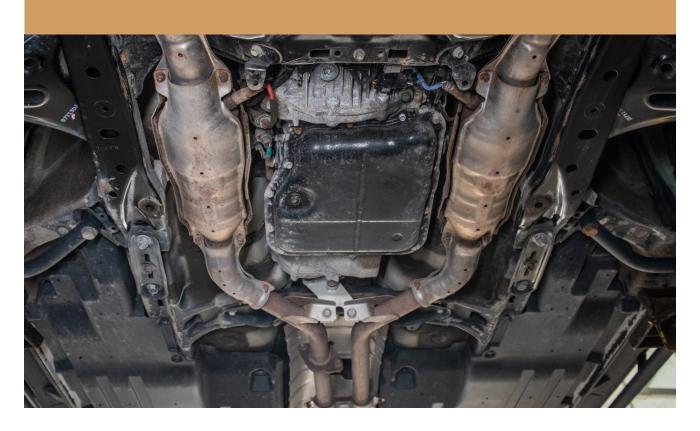


3 USE A JACK TO HELP SUPPORT THE SKID PLATE DURING INSTALLATION

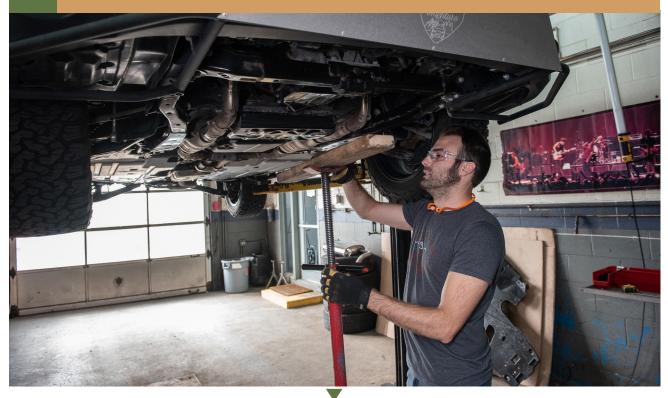

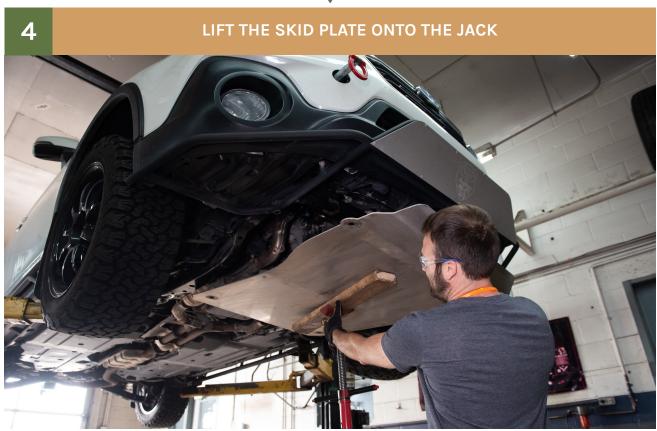

5 RAISE THE SKIDPLATE INTO PLACE

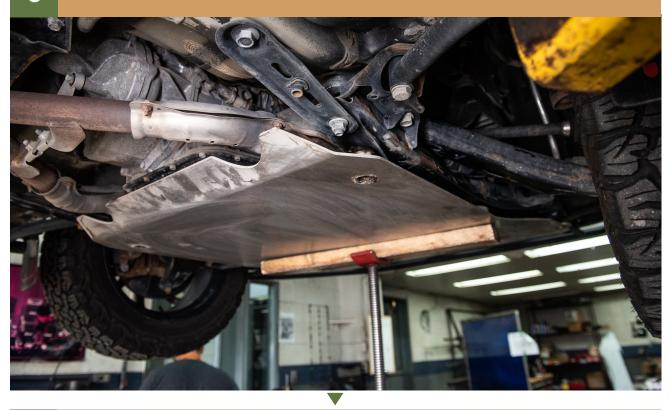

SECURE THE REAR OF THE SKIDPLATE USING THE INCLUDED BOLTS WITH THE FACTORY NUT

*IF YOU HAVE OUR OPTIONAL RALLY WASHERS NOW IS THE TIME TO INSTALL




7 IF YOU DO NOT HAVE OUR BUMPER GUARD THEN INSTALL THE INCLUDED SPACERS




SECURE THE FRONT OF THE SKIDPLATE USING THE INCLUDED BOLTS


*IF YOU HAVE OUR OPTIONAL RALLY WASHERS NOW IS THE TIME TO INSTALL

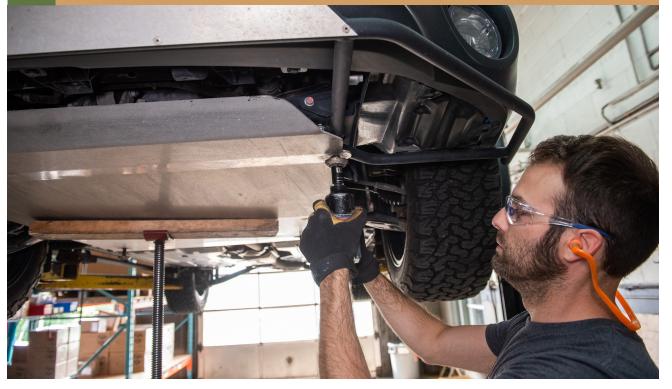

9 DOUBLE CHECK THAT ALL HARDWARE IS TIGHT

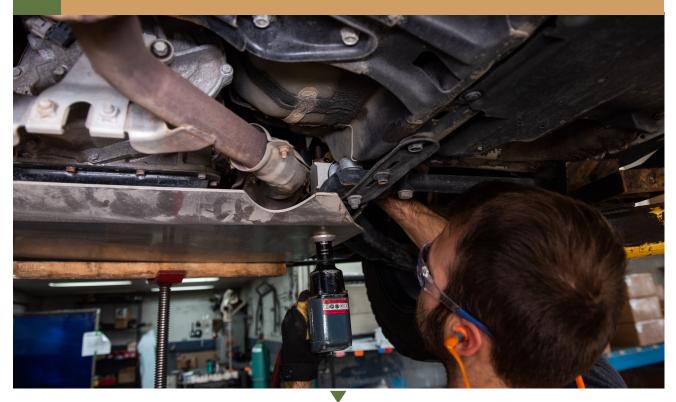

INSTALLATION COMPLETE!

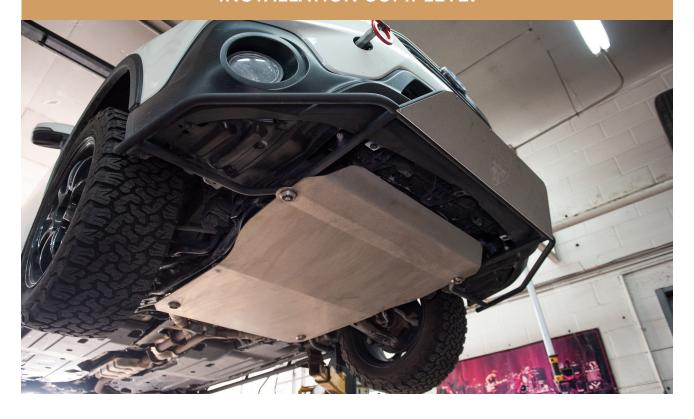

NOTES:

Tighten all the bolts to the manufacturer's specifications with a Torque Wrench

Double check your work.

and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-product-warranty



You have completed the installation.

Thank you for your interest

in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at: SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!