

2022+ MAZDA CX-50

CONGRATULATIONS ON YOUR NEW LP AVENTURE HOOD LIGHT BRACKETS!

If you have any questions or need assistance during the installation please contact our team. You can find the infomation on the last page.




IN THE BOX

NECESSARY TOOLS


- Ratchet
- 12mm Socket

1 REMOVE LOWER HOOD HINGE NUTS



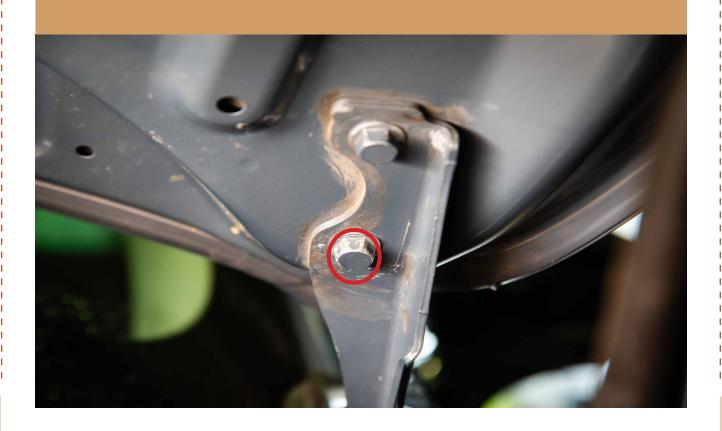



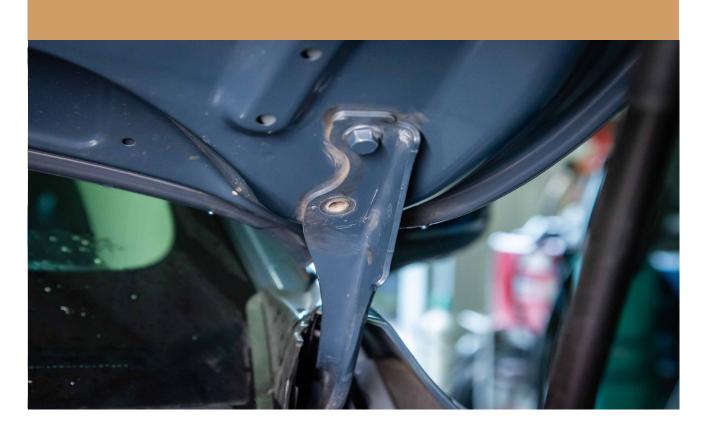

2 INSTALL HOOD LIGHT BRACKETS OVER HOOD HINGE




3 USE FACTORY BOLT TO SECURE HOOD LIGHT BRACKET, SNUG UP THE BOLT BUT DO NO FULLY TIGHTEN YET.




4 MAKE SURE THE BRACKET IS CENTERED AND NOT TOUCHING THE HOOD



5 NOW FULLY TGHTEN THE HARDWARE

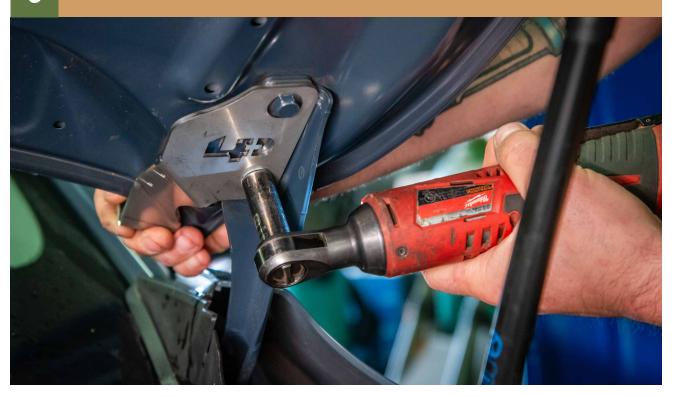

SPECIAL TIP: WHEN INSTALLING YOUR FOG LIGHTS ONTO YOUR NEW HOOD LIGHT BRACKETS. USE THE PROVIDED HOLES TO HELP SECURE THE CABLE

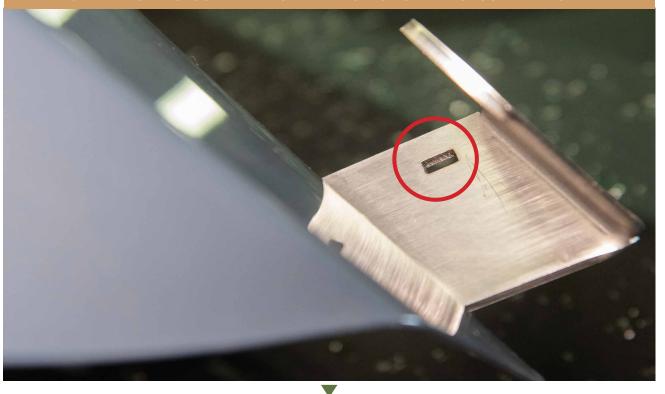



YOU CAN NOW INSTALL YOUR FOG LIGHTS INTO THE BRACKETS



INSTALLATION COMPLETE!



NOTES:

Tighten all the bolts to the manufacturer's specifications with a Torque Wrench

Double check your work.

and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-prod-



You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at : SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!