



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE FULL ARMOR OPTION ◀

MAZDA CX-50 2023+

CONGRATULATIONS FOR YOUR NEW LP AVENTURE FULL ARMOR!

If you have any questions or need assistance
during the installation please
contact our team. You
can find the information
on the last
page.



IN THE BAG





NECESSARY TOOLS

- We recommend the use of a lift
- Ratchet
- 17mm Socket

****YOU HAVE TO HAVE AN LP AVENTURE BUMPER GUARD
INTALLED PRIOR TO INSTALLING THE FULL ARMOR****



1



IF YOU HAVE AN LP AVENTURE MAIN SKID PLATE ALREADY INSTALLED REMOVE THE FRONT TWO BOLTS. IF NOT THEN SKID TO STEP #2



2

**RAISE THE FULL ARMOR PLATE INTO PLACE AND THREAD IN THE FRONT BOLTS
*IF YOU HAVE THE OPTIONAL RALLY WASHERS, NOW IS THE TIME TO INSTALL**



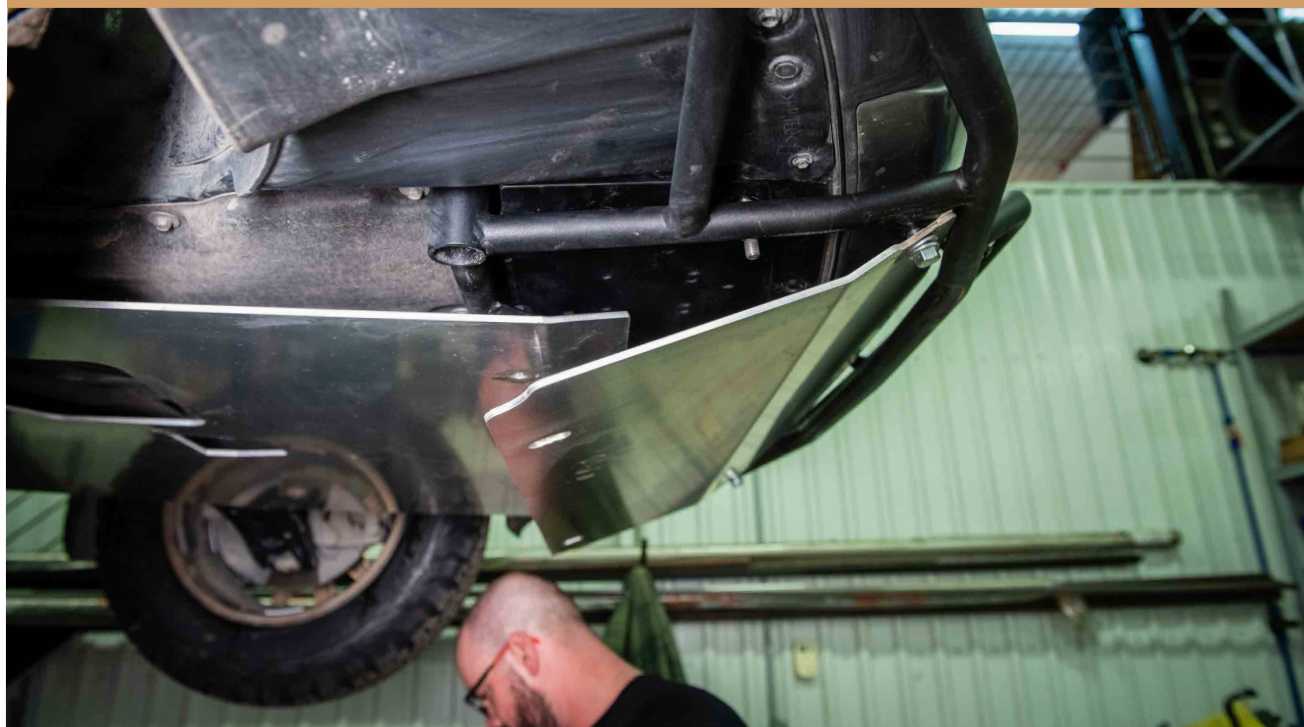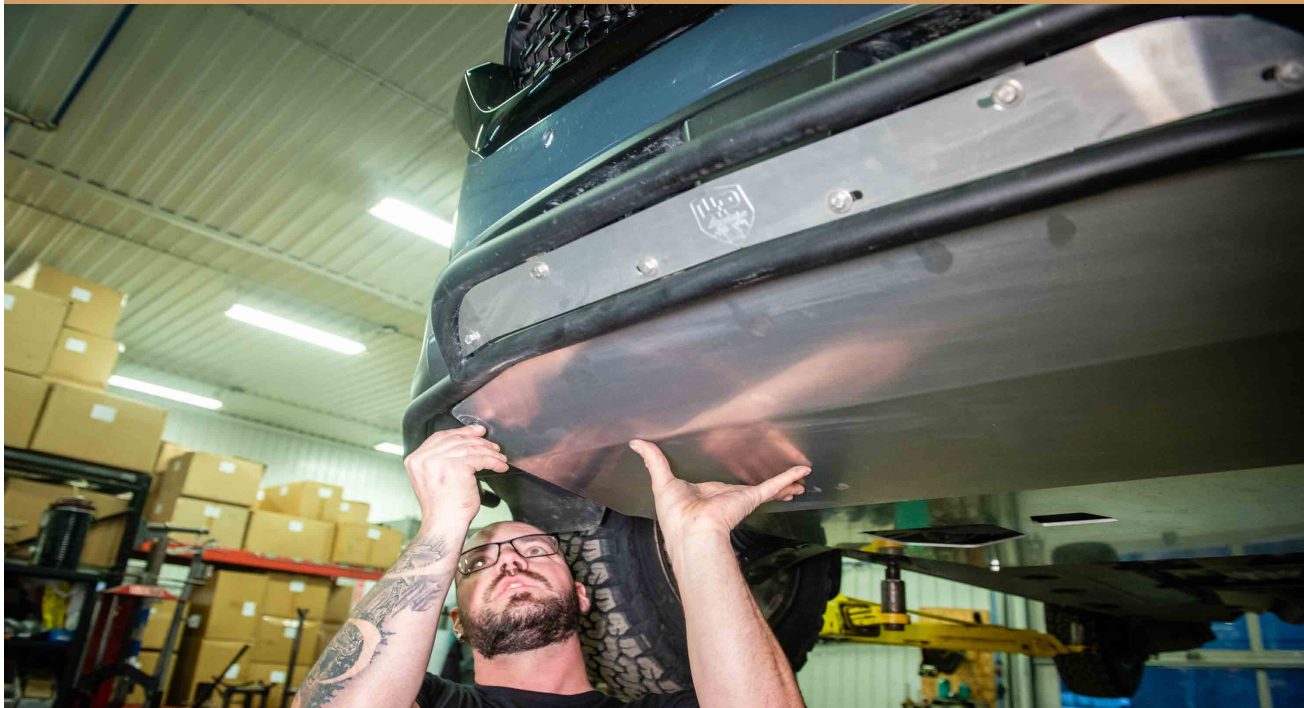

2

THREAD IN THE REAR BOLTS

*IF YOU HAVE THE OPTIONAL RALLY WASHERS, NOW IS THE TIME TO INSTALL



4

TIGHTEN EVERYTHING UP



INSTALLATION COMPLETE!





NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-product-warranty>**



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!