



# -INSTALLATION- INSTRUCTIONS



LP ADVENTURE BUMPER GUARD




MAZDA CX-50 2023+

# CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any questions or need assistance  
during the installation please  
contact our team. You  
can find the information  
on the last  
page.



IN THE BAG

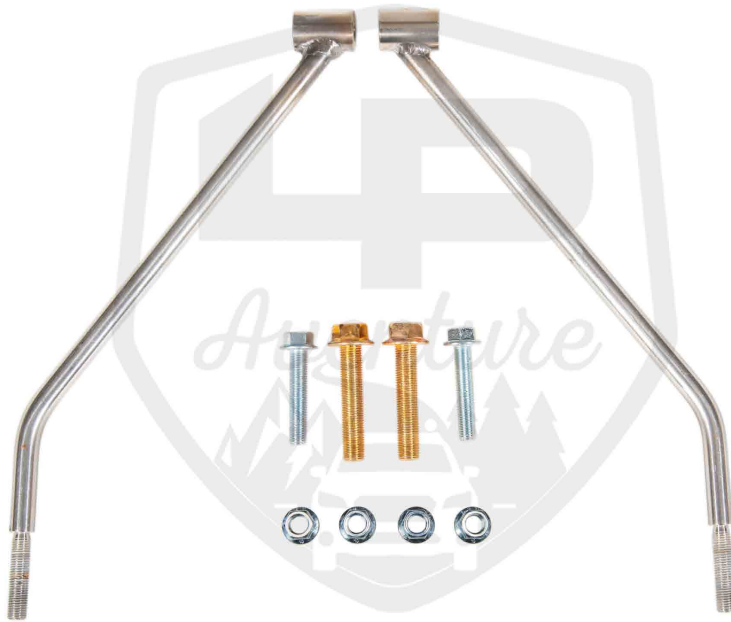

BARE BUMPER GUARD SHIPS WITH FRONT PLATE UNINSTALLED





## NECESSARY TOOLS

- 1/2" ratchet or Impact
- 3/8" ratchet or Impact
- 17mm 1/2" drive socket
- 1/2" drive 12" extension
- 14mm socket
- 14mm wrench
- 10mm socket
- 8mm socket
- Push pin removal tool
- Drill
- 1" hole saw
- 2" hole saw
- Utility knife




1


## REMOVE BOTH FACTORY SPLASH GUARDS








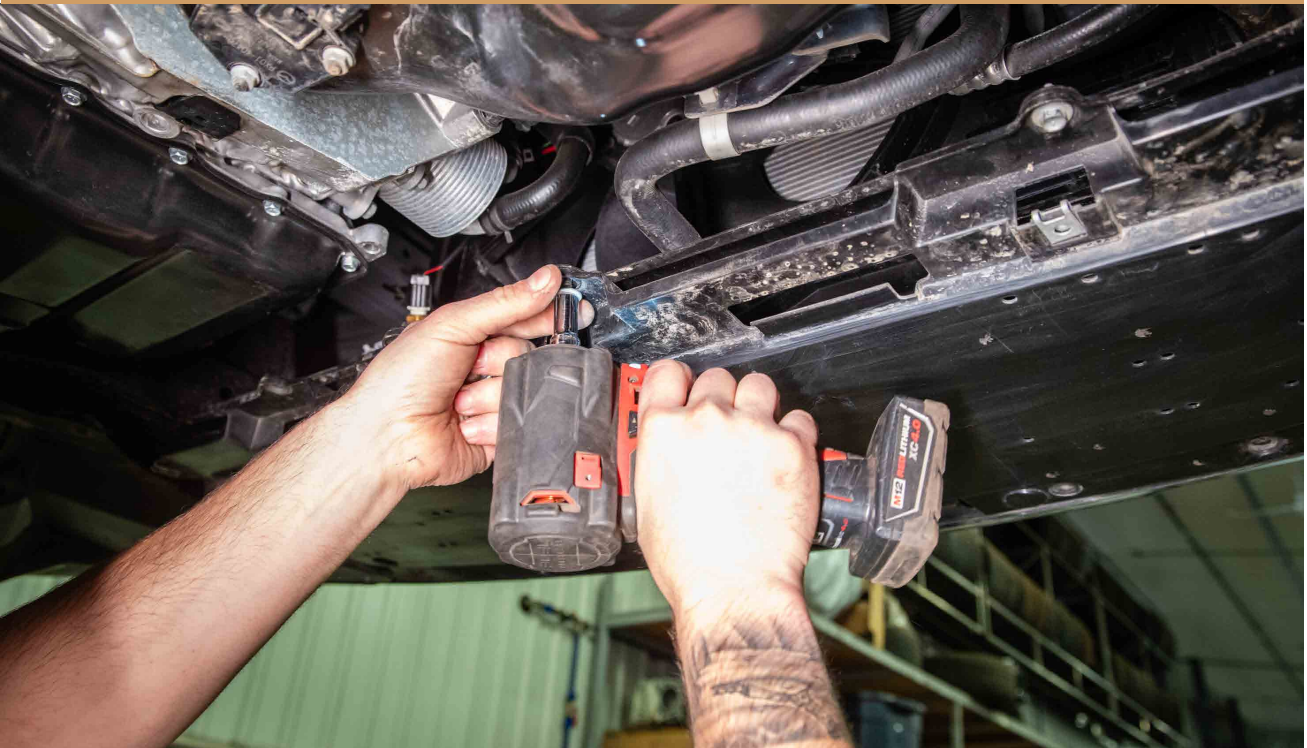


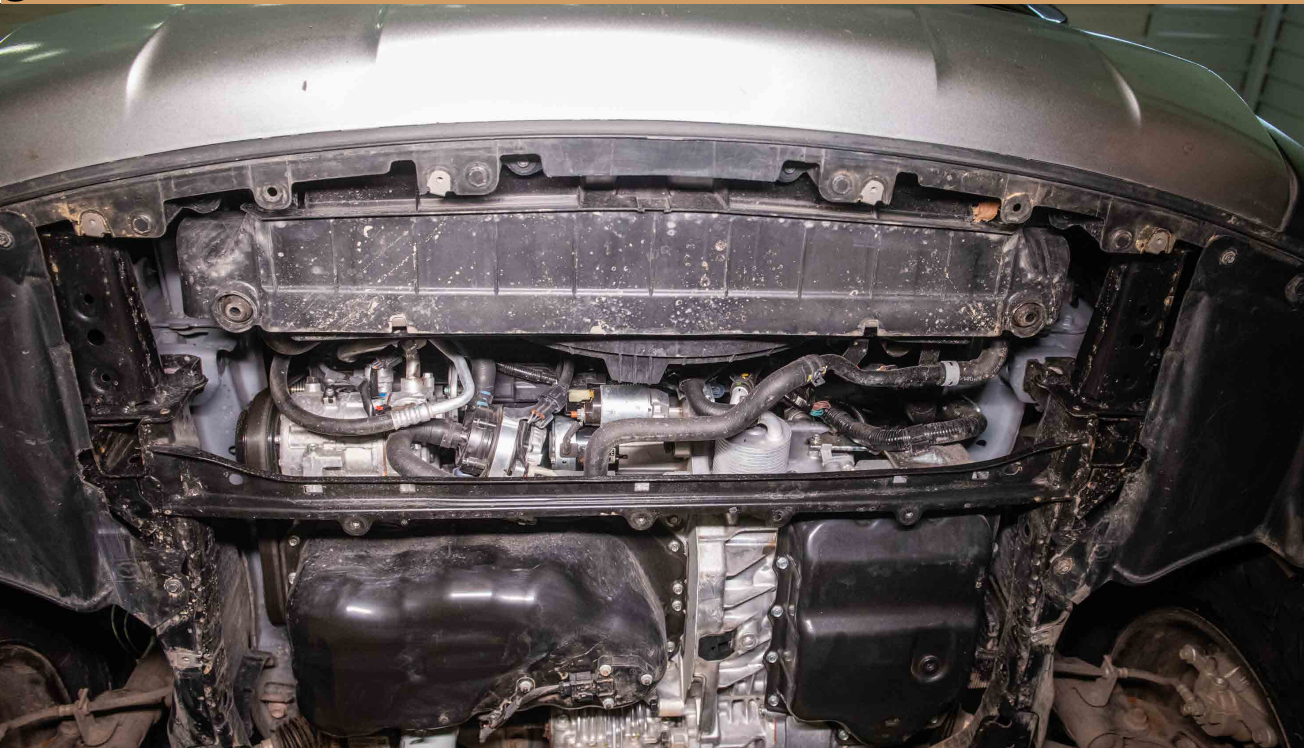




2


USING A FILE OR A KNIFE, NOTCH THE PLASTIC GUARDS UNDER WHERE THE SQUARE OPENING IS

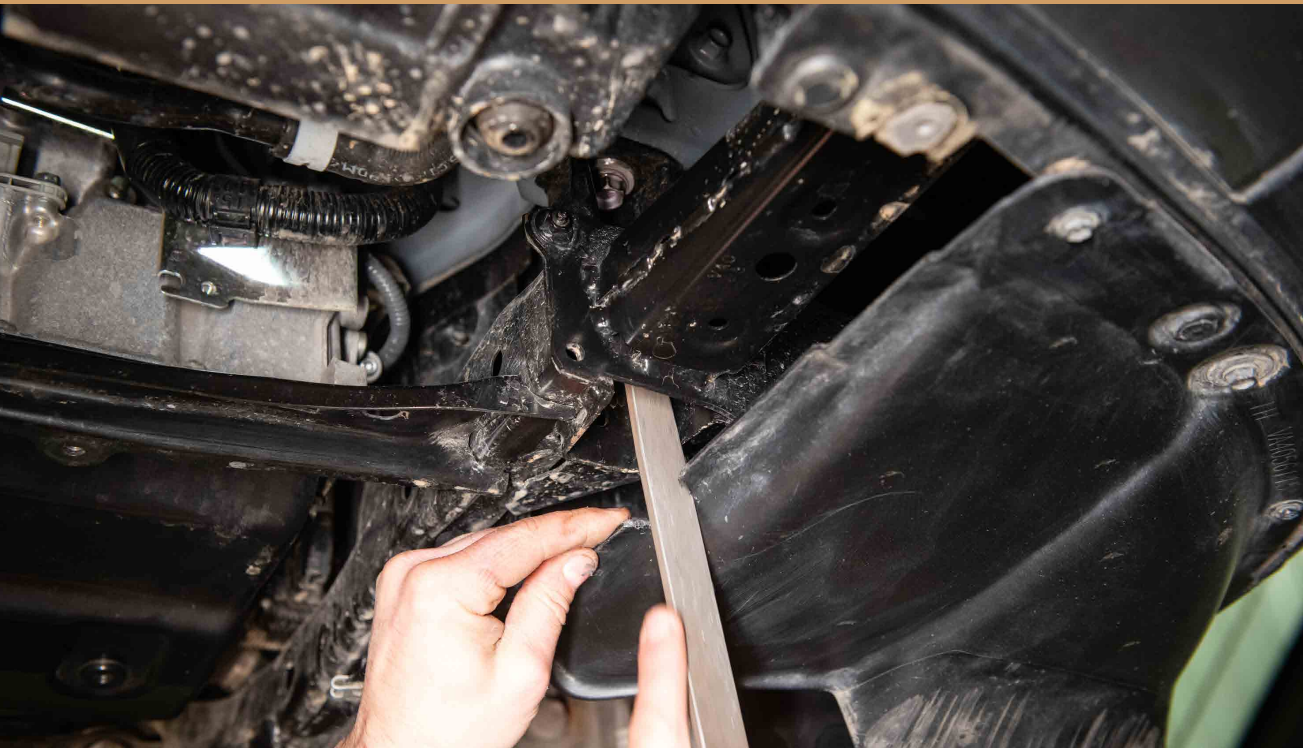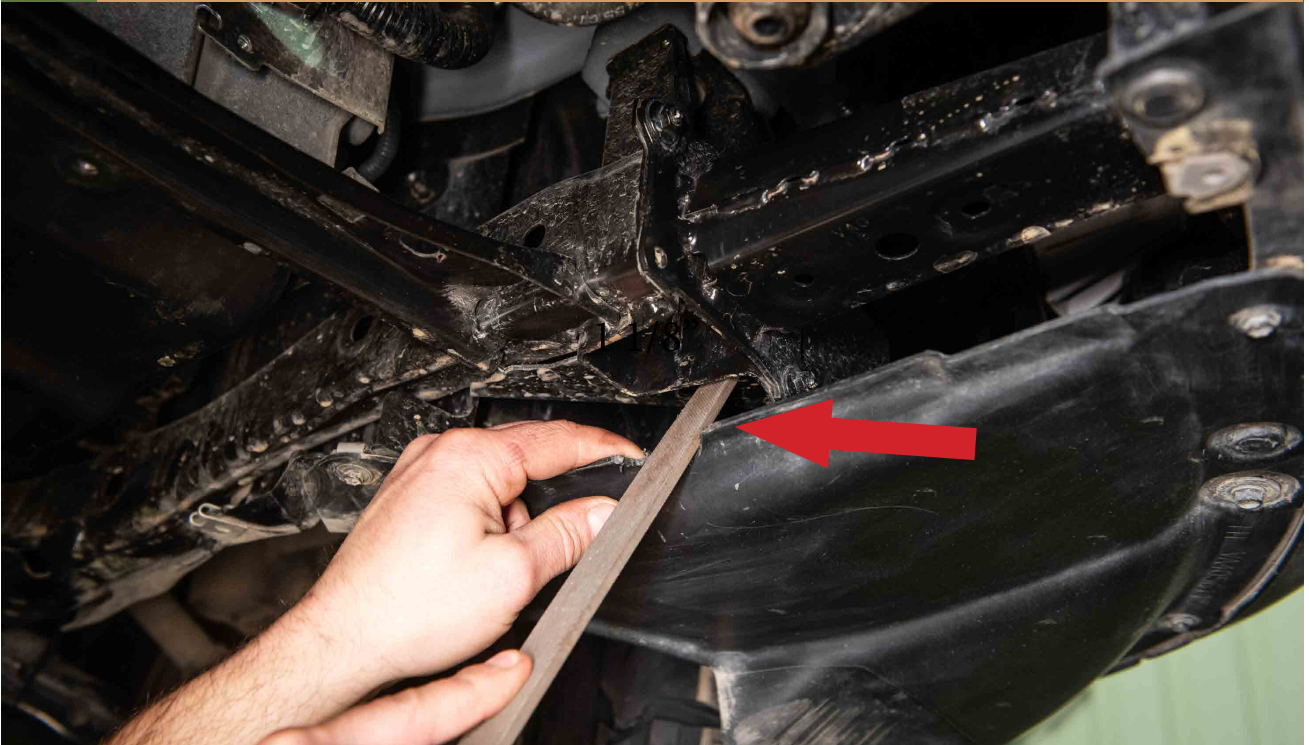

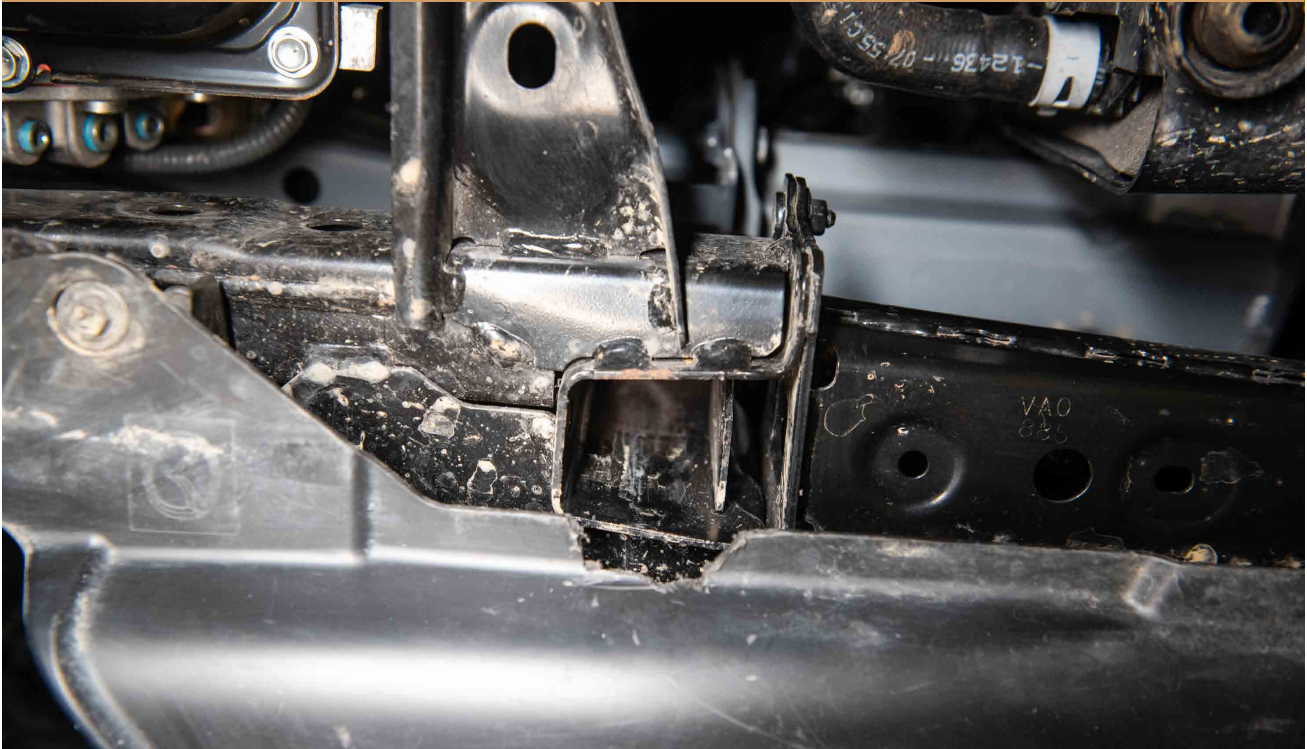

3

REMOVE BOLT. YOU CAN DO BOTH SIDES AT ONCE

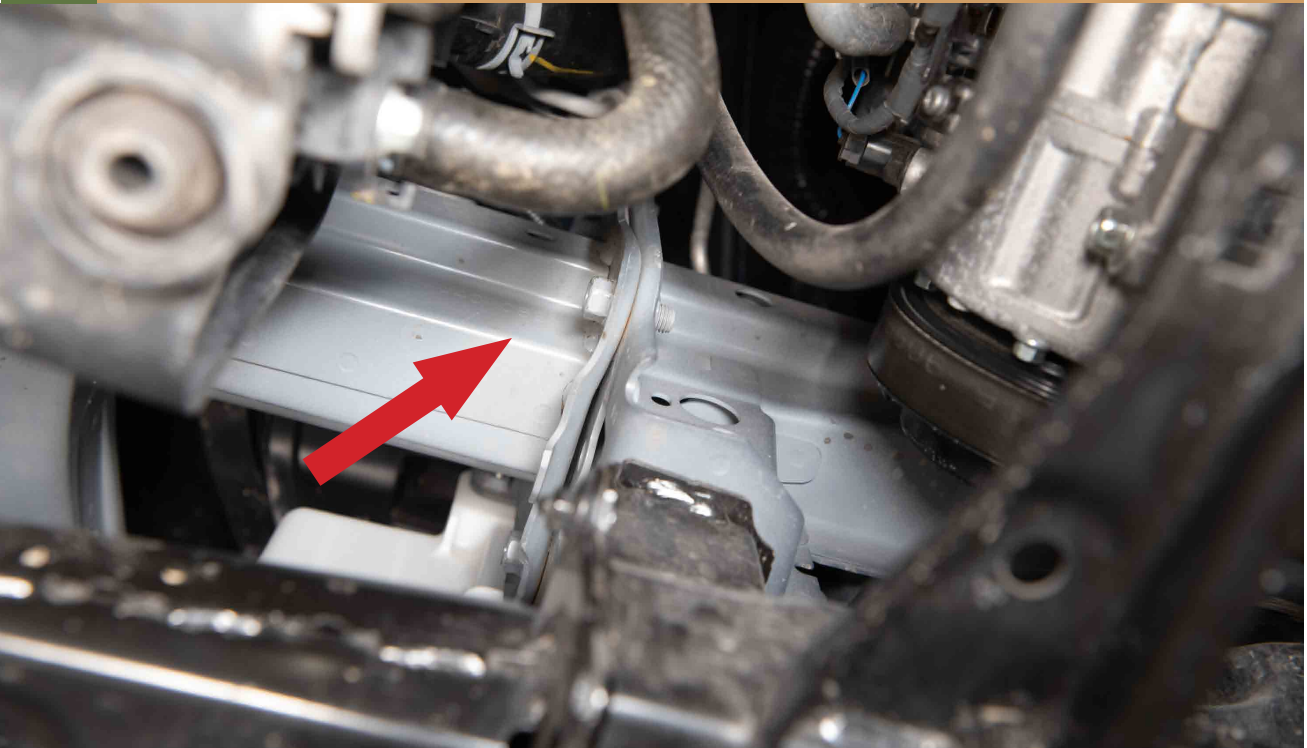








4

INSTALL BUMPER GUARD SUPPORT RODS.

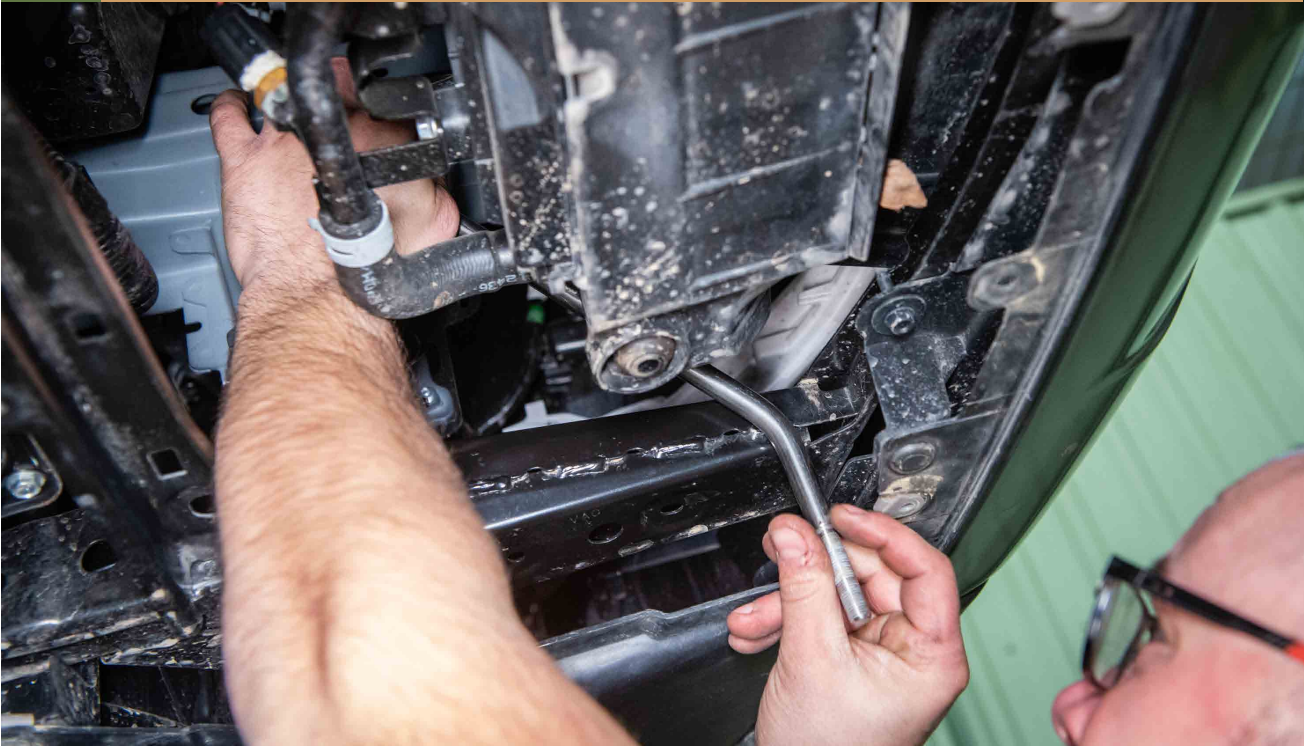


MAKE SURE THE RODS ARE AT ABOUT 1/8" FROM THE METAL BEAM AND THEN TIGHTEN THE RODS




5

USING A LONG EXTENSION, REMOVE BOLTS

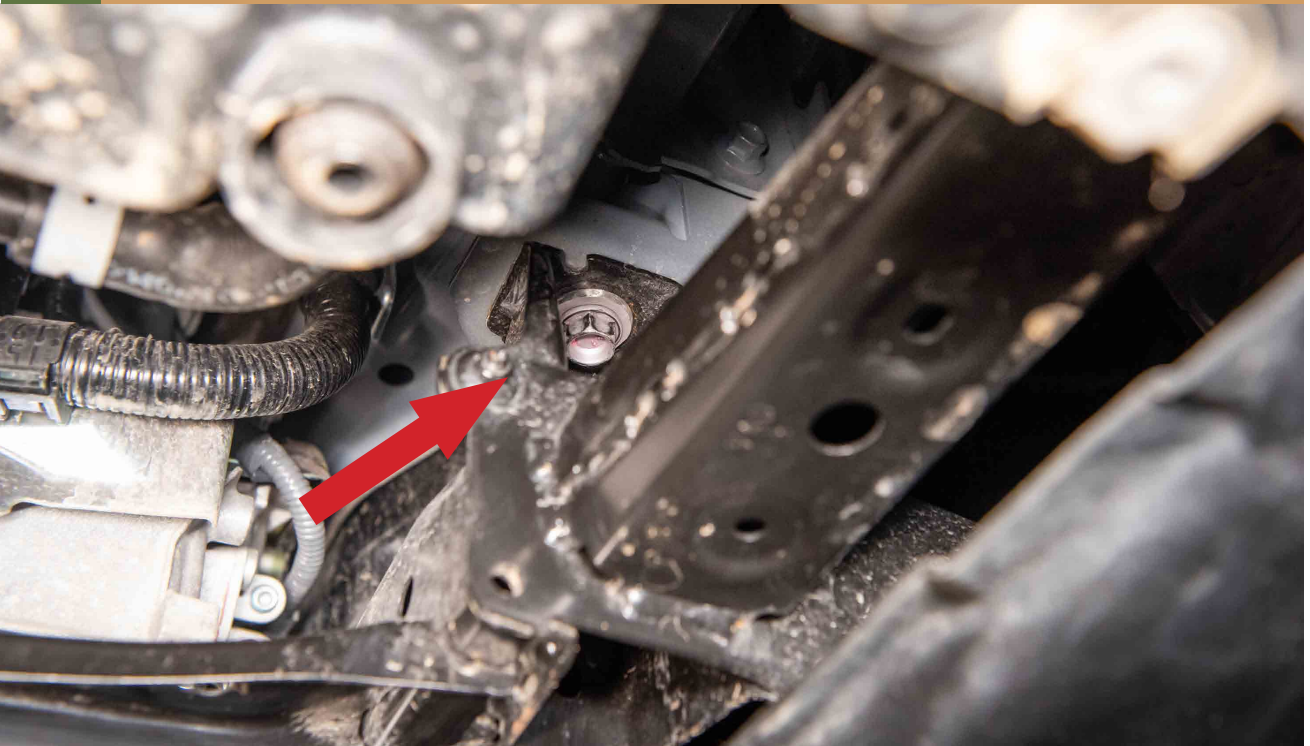



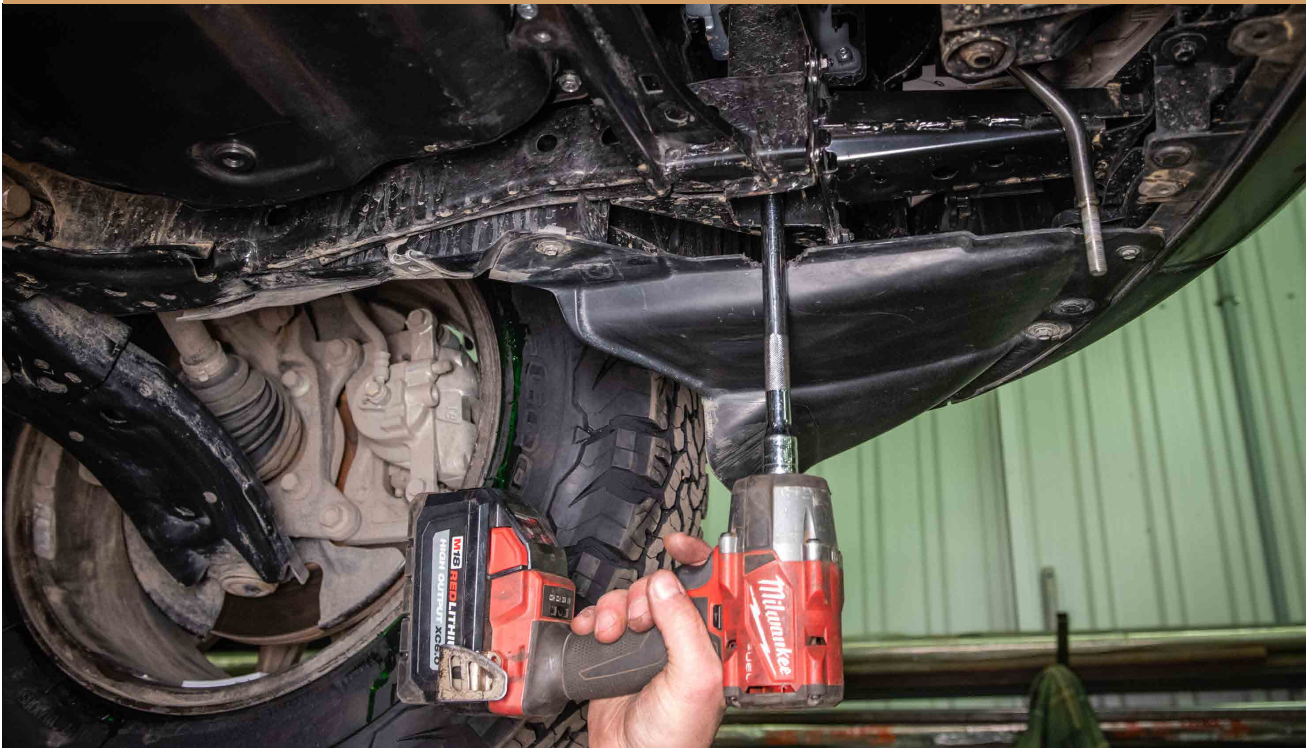





6

MAKE THE HOLES IN THE PLASTIC SPLASH GUARD USING THE INCLUDED TEMPLATE



\*WE HAD PREVIOUSLY MADE THE HOLES IN OURS DURING THE DEVELOPMENT STAGES

ALIGN THE EDGES OF THE DIAGRAM ON THE SPLASH GUARD




WITH THE TEMPLATES IN PLACE, MARK THE CENTER OF THE HOLE.  
\*THE 2" HOLES NEED TO BE OPENED RIGHT TO THE EDGE USING A KNIFE






7

WITH BOTH HOLES MADE, YOU CAN NOW RE INSTALL THE SPLASH GUARD

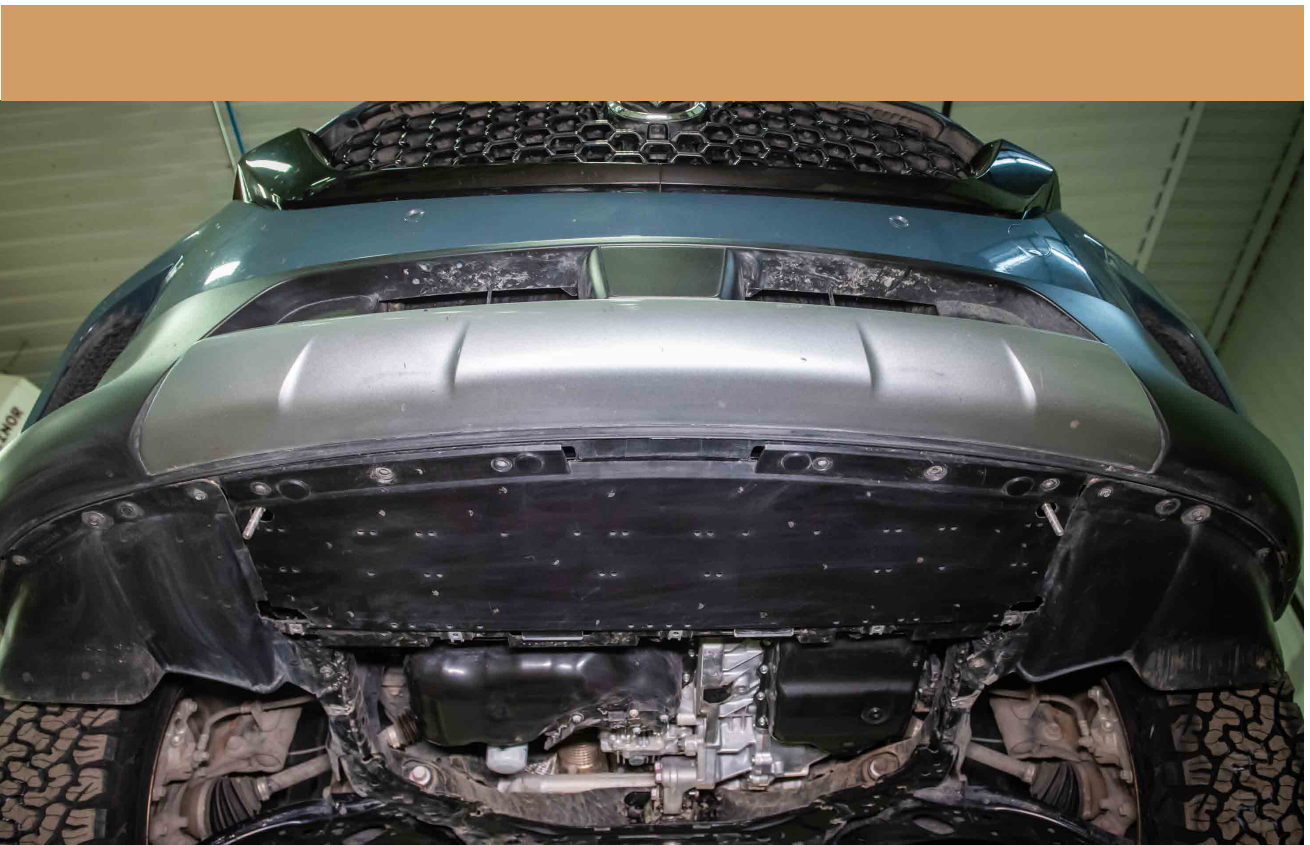




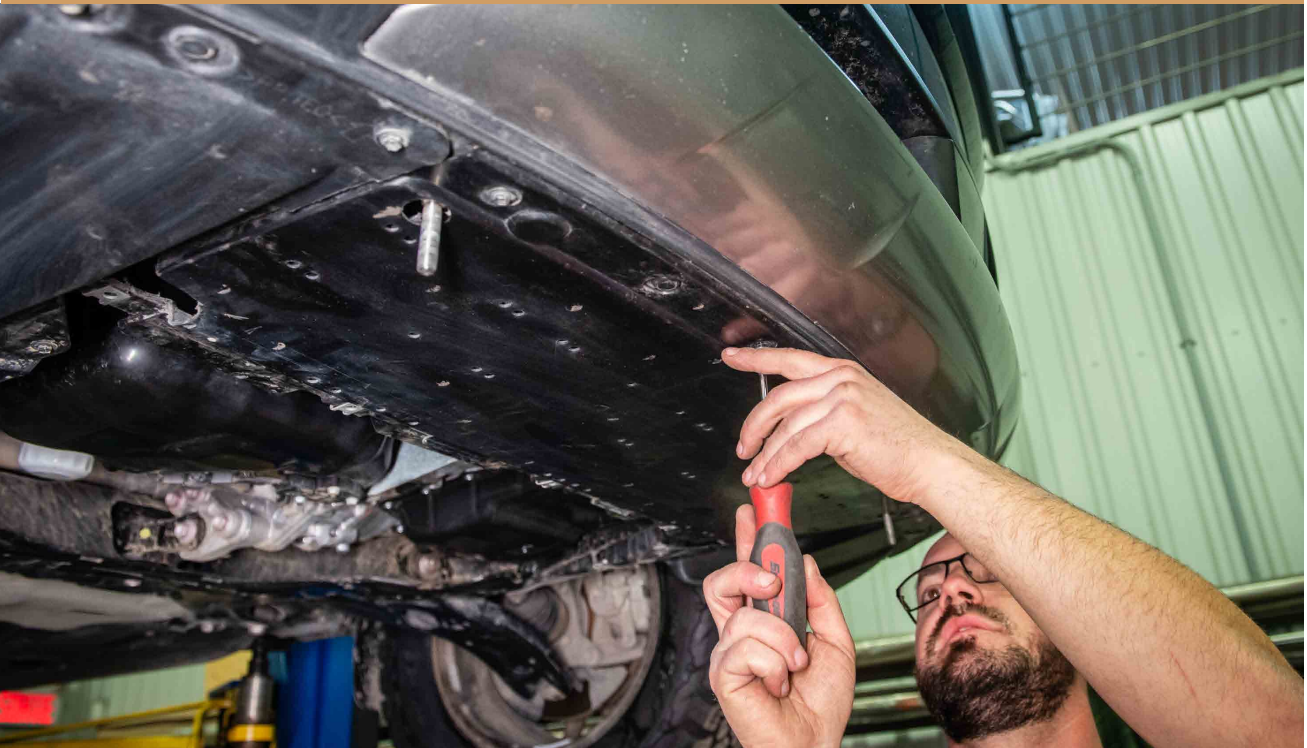

8

## RE INSTALL THE SECOND ONE

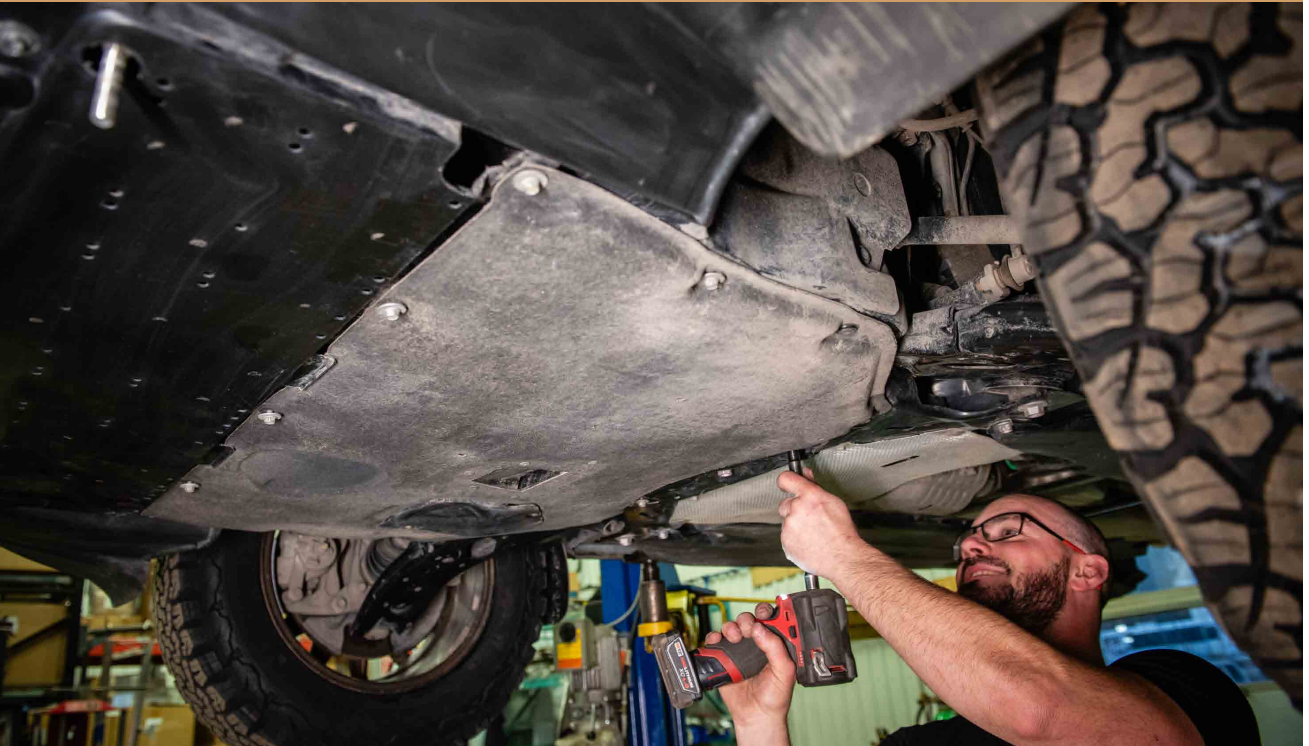



9

THREAD NUT ONTO THE END OF THE SUPPORT ROD



THE NUT SHOULD BE ABOUT 7/8" FROM THE END




10

WITH A FRIEND LIFT THE BUMPER GUARD INTO PLACE



11

THREAD THE NUT ONTO THE ROD TO SNUG EVERYTHING UP BUT DONT FULLY TIGHTEN YET

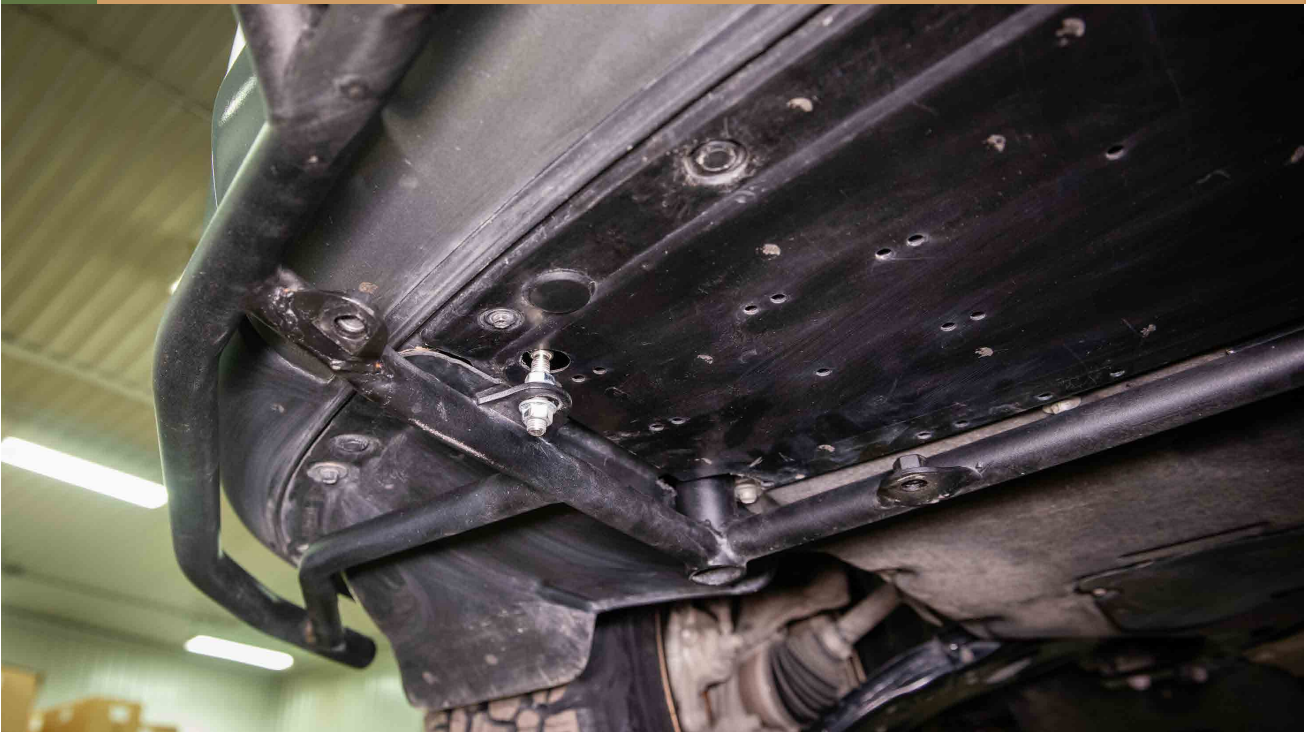



12

TIGHTEN THE REAR OF THE BUMPER GUARD



13

MAKE SURE ALL THE GAPS ARE EQUAL THEN TIGHTEN THE NUTS ON THE SUPPORT RODS.





INSTALLATION COMPLETE!







**NOTES:**

**Double check your work.  
Reinstall the wheels and be sure to tighten  
the nuts with a torque wrench.**

-----  
**Products warnings:  
<https://lpaventure.com/pages/products-warnings>**  
-----

**Limited product warranty:  
<https://lpaventure.com/pages/limited-product-warranty>**  
-----



**You have completed the installation.  
Thank you for your interest  
in our products.**

**For all requests, information or  
assistance: Contact our team  
by phone at  
**1 (866) 562-1316****

**We are available Monday to Friday  
Between 8AM and 5PM (EST).**

**Or by email at :  
**SALES@LPAVENTURE.COM**  
**WWW.LPAVENTURE.COM****

**NOW, ENJOY THE RIDE!**