



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE BUMPER GUARD ◀

SUBARU FORESTER WILDERNESS

2022+

CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any questions or need assistance
during the installation please
contact our team. You
can find the information
on the last
page.



IN THE BAG



BARE BUMPER GUARD SHIPS WITH FRONT PLATE UNINSTALLED





NECESSARY TOOLS

- We recommend the use of a lift
- Car Jack or a Friend
- Screw driver or pick
- Ratchet Wrench or Impact
- 12 mm Socket
- 13 mm Socket
- 14 mm Socket
- 19 mm Socket
- 22 mm Wrench
- Push Pin Pliers
- Drill
- 2" hole saw

**** A BIG BUMPER GUARD WAS USED FOR THIS GUIDE
BUT THE STEPS FOR A SMALL BUMPER GUARD ARE THE SAME**

1

UNFOLD THE BUMPER GUARD




▼
SNUG UP THE BOLTS BUT DO NOT TIGHTEN YET




▼
2

REMOVE FACTORY SKID PLATE

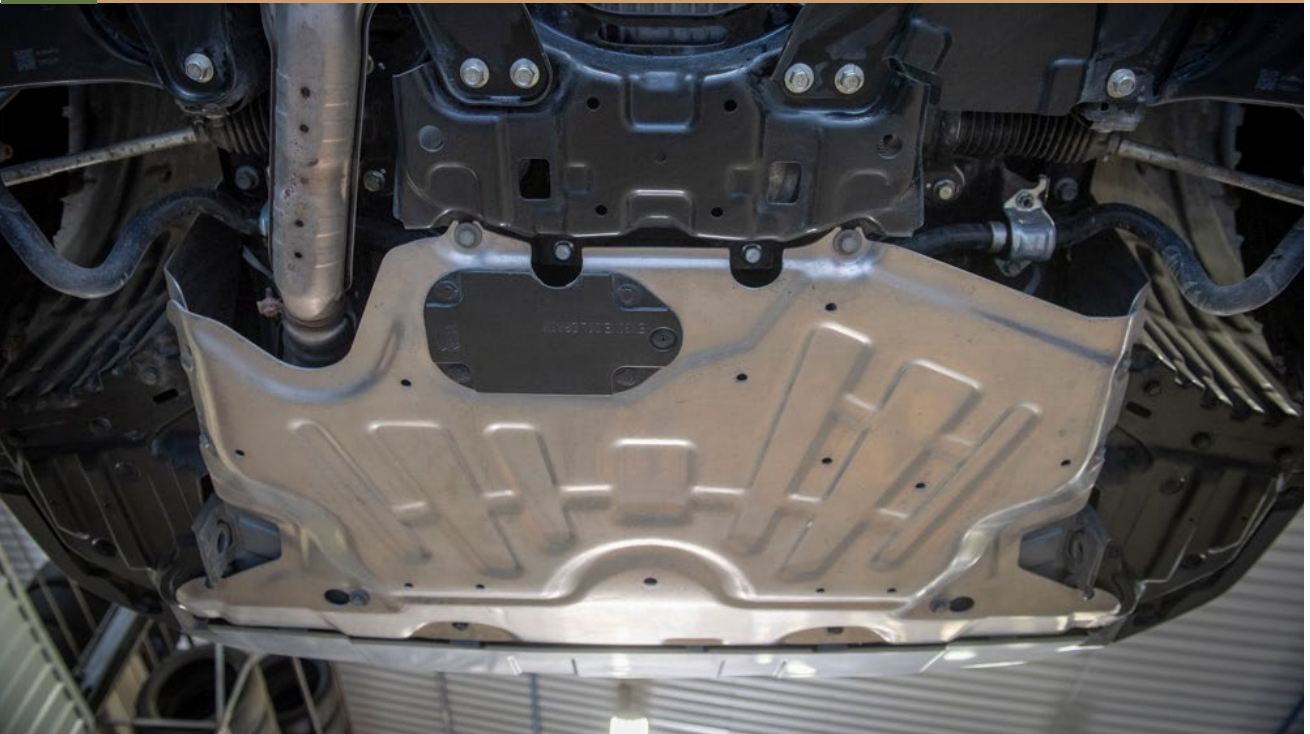

LOOSEN BUT DO NOT REMOVE
THESE TWO BOLTS

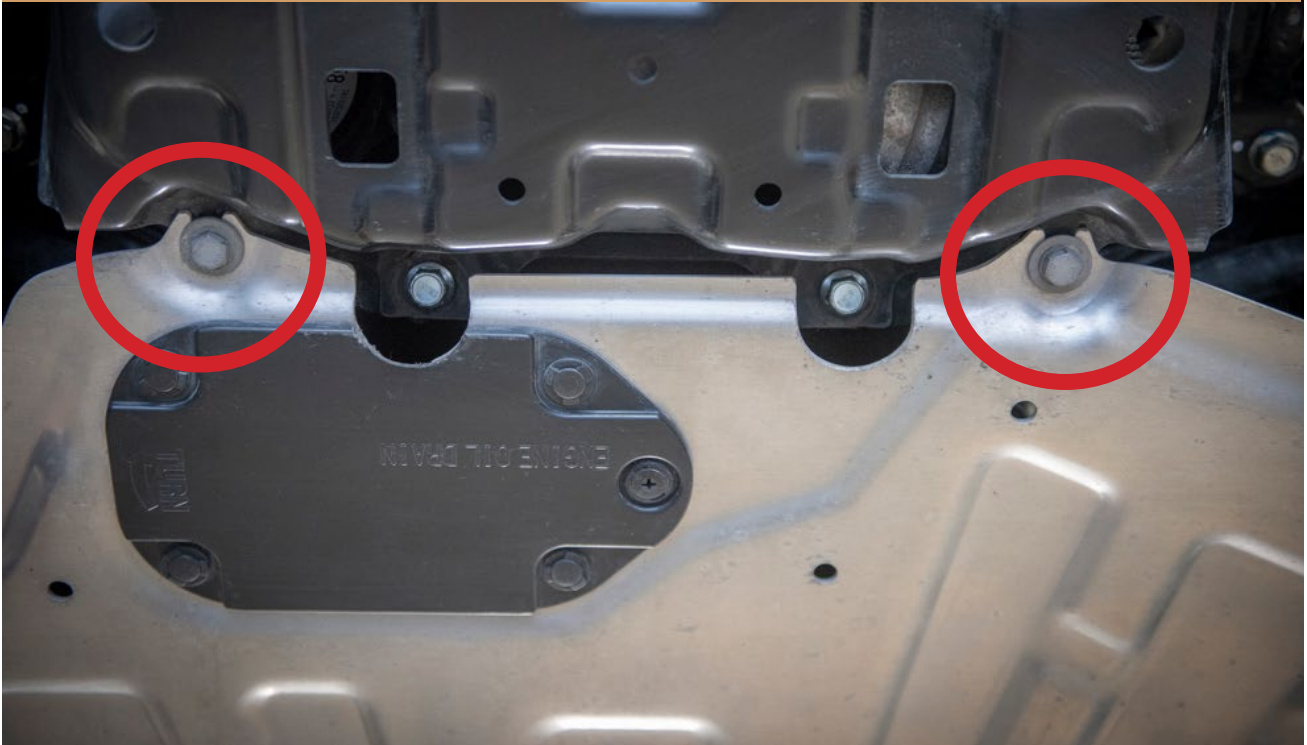


USING A SCREW DRIVER (OR ANYTHING POINTY)
REMOVE THE FACTORY SKID PLATE SPACER





3

REMOVE THESE TWO BOLTS

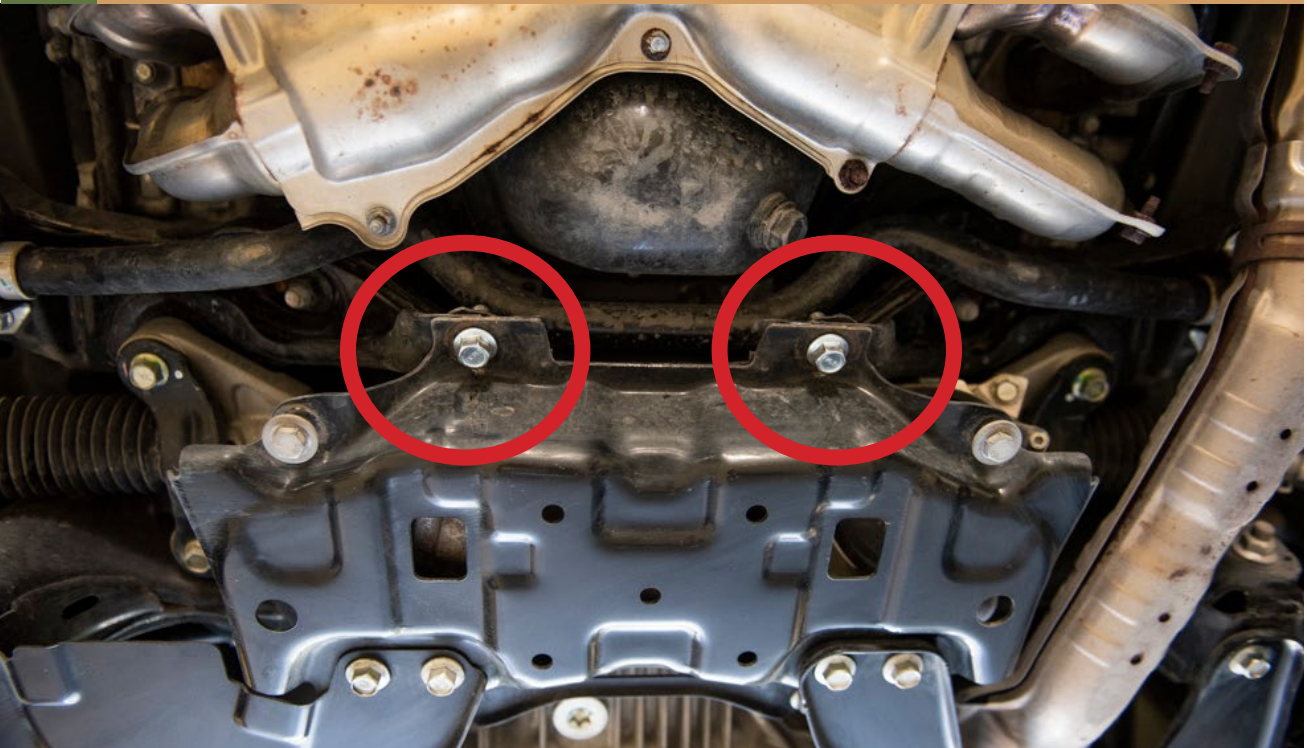





4

YOU WILL NEED TO NOTCH THE FACTORY SKID PLATE TO ALLOW ACCESS TO INSTALL THE BUMPER GUARD



*WE HAD PREVIOUSLY NOTCHED OURS DURING THE DEVELOPMENT STAGES

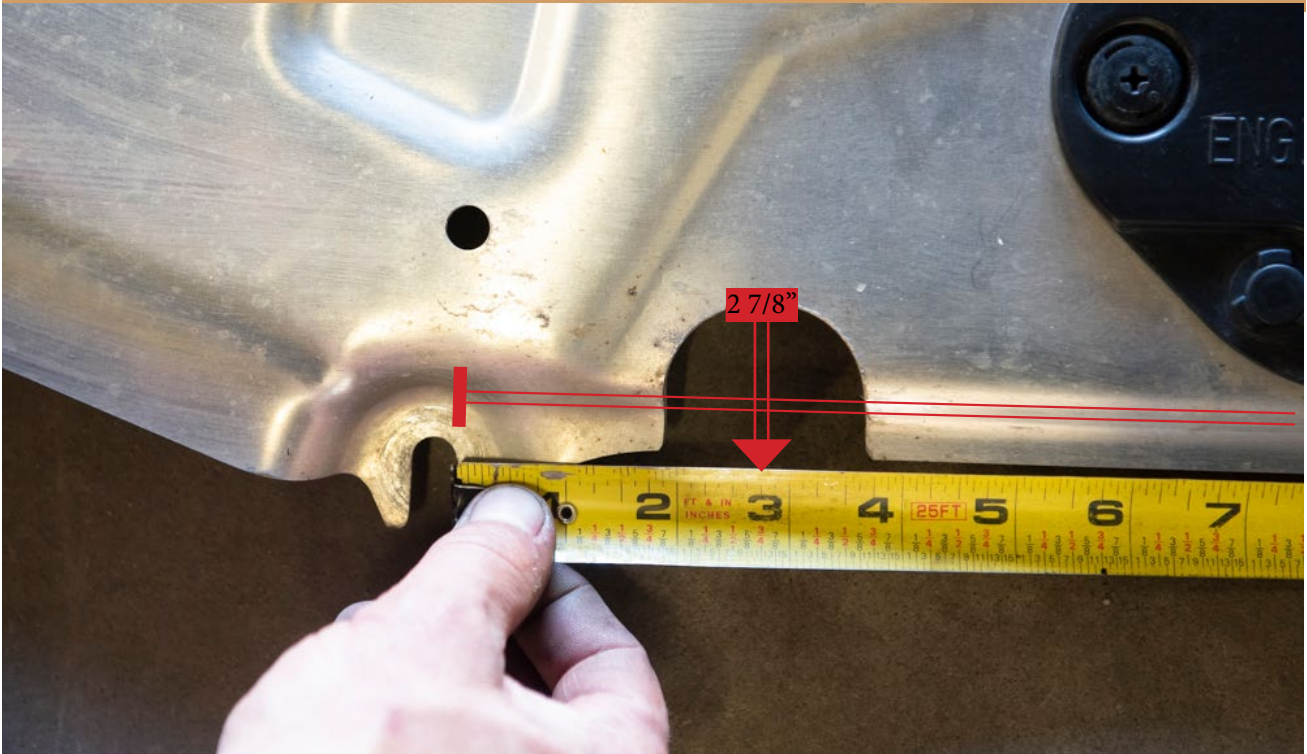

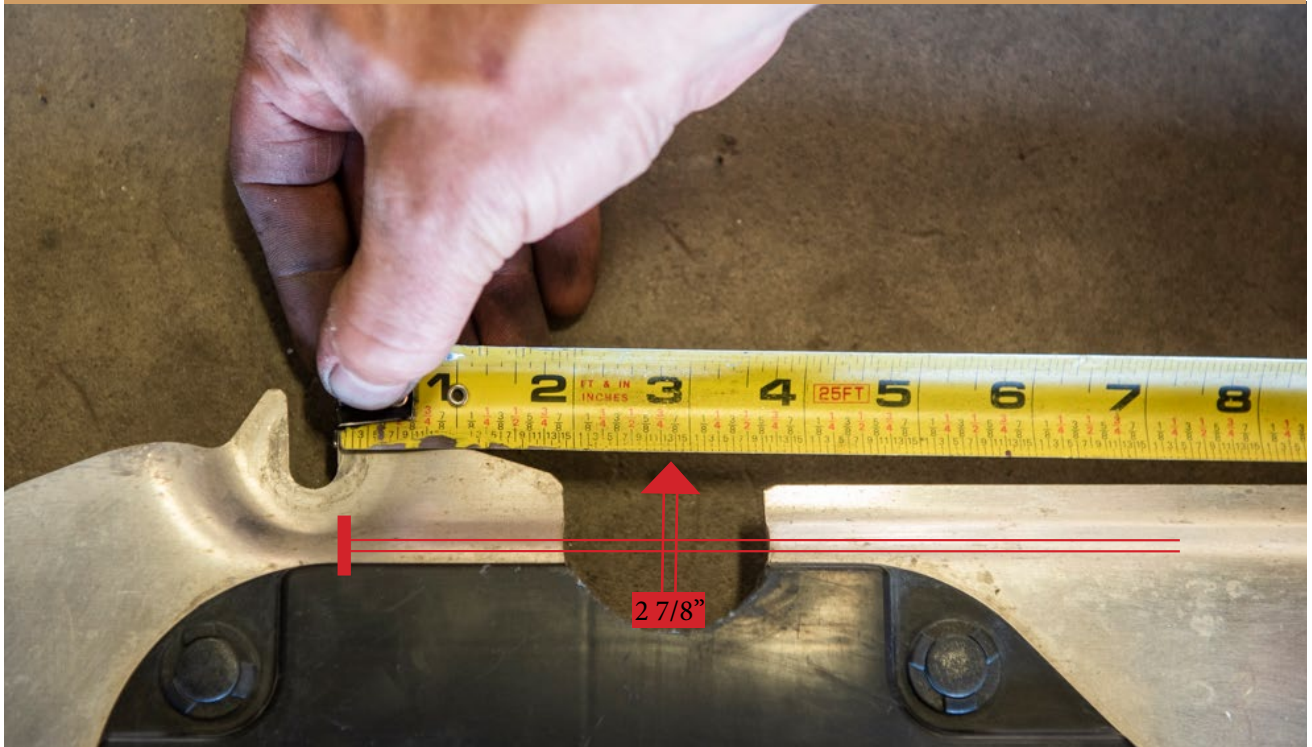

YOU CAN TRIM OFF THE CORNERS TO MAKE THE CUT CLEANER



5

RE INSTALL SKID PLATE



DONT FORGET THE SKID PLATE SPACER





IF YOU ARE PLANNING ON INSTALLING A LIGHT BAR WE SUGGEST YOU INSTALL IT BEFORE MOUNTING THE BUMPER GUARD




6

WITH THE HELP OF A FRIEND OR THE USE OF A JACK, LIFT THE BUMPER GAURD INTO PLACE



7

PLACE THE INCLUDED WASHER IN BETWEEN THE BUMPER GUARD MOUNTING BRACKET AND THE VEHICLES LOWER TOW HOOK

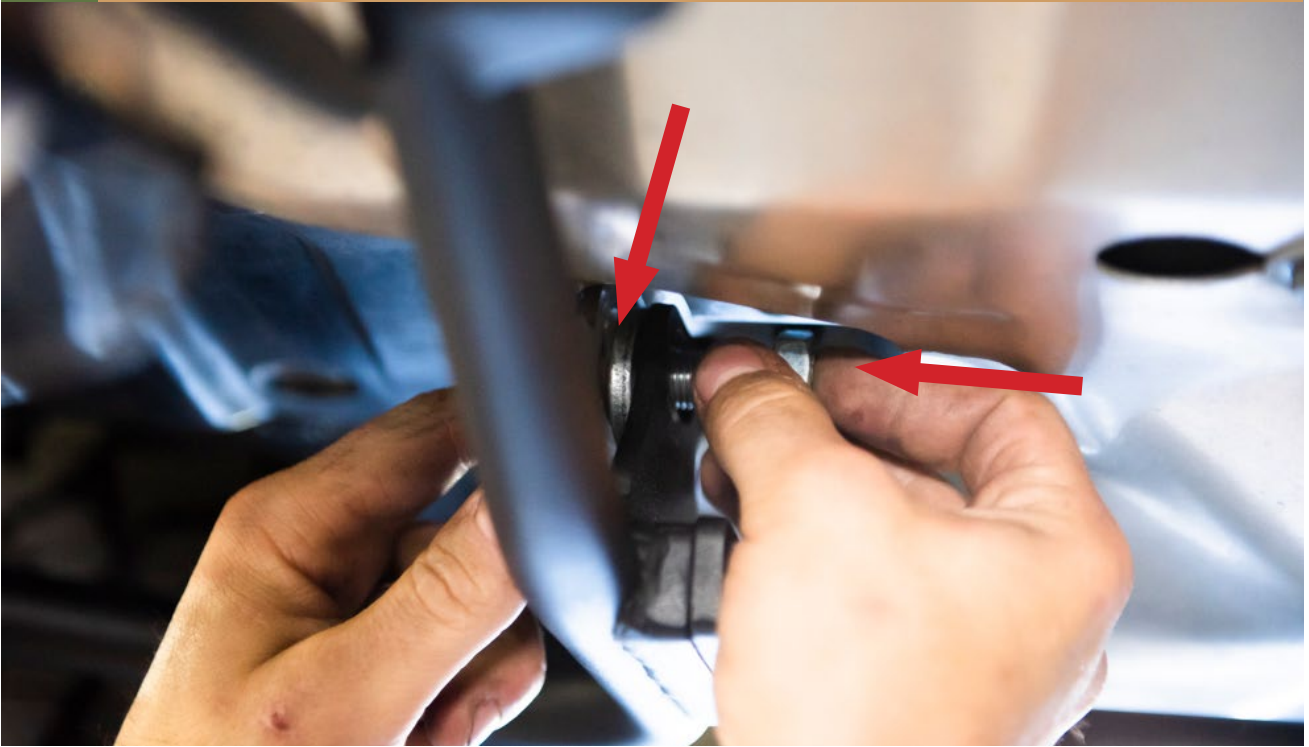

DO NOT TIGHTEN HARDWARE YET




8

BOLT UP THE REAR OF THE BUMPER GUARD



DO NOT TIGHTEN YET

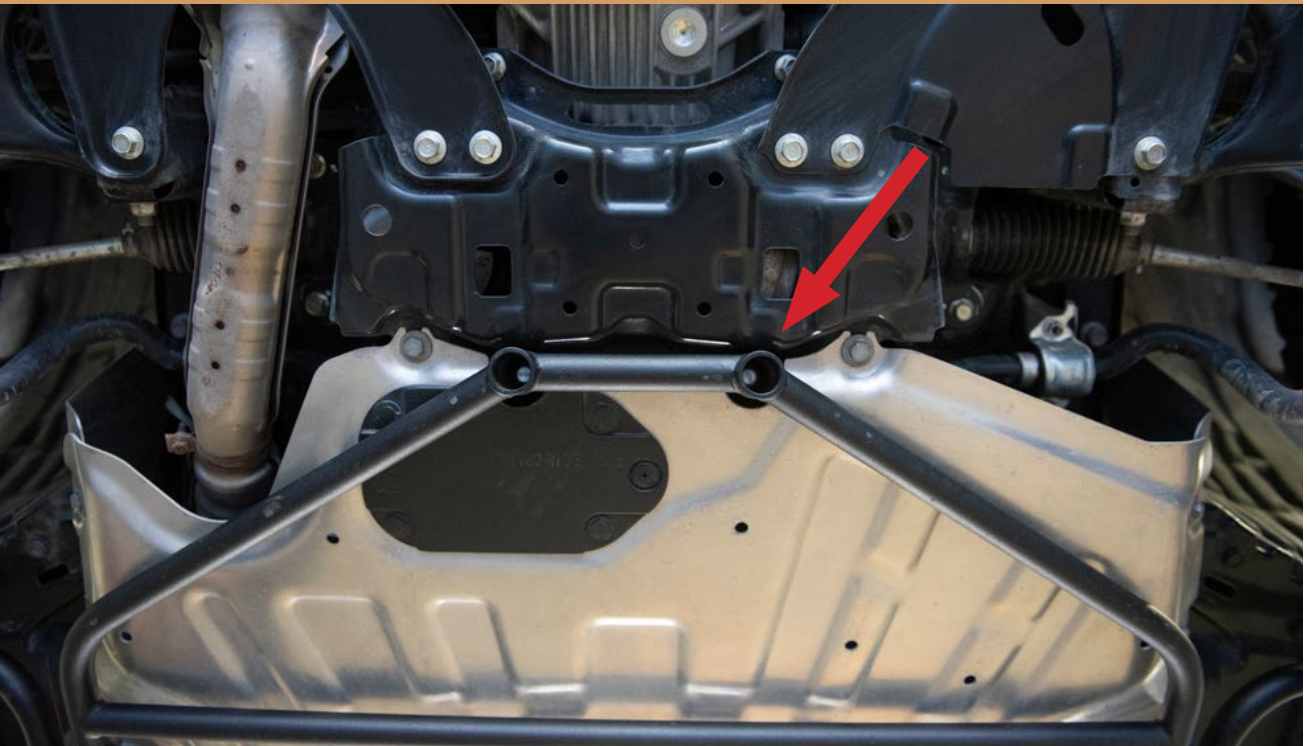

9

CHECK AND MAKE SURE ALL THE GAPS ARE EQUAL



10

TIGHTEN CENTER HARDWARE FIRST



11

TIGHTEN MAIN SUPPORT BOLT



12

TIGHTEN REAR OF THE BUMPER GAURD



INSTALLATION COMPLETE!





NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-product-warranty>**



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!