



# -INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE MAIN SKID PLATE ◀

SUBARU OUTBACK WILDERNESS 2022 +

# CONGRATULATIONS FOR YOUR NEW LP AVENTURE SKID PLATE!


If you have any questions or need assistance  
during the installation please  
contact our team. You  
can find the information  
on the last  
page.



IN  
THE  
BOX



IN THE BAG

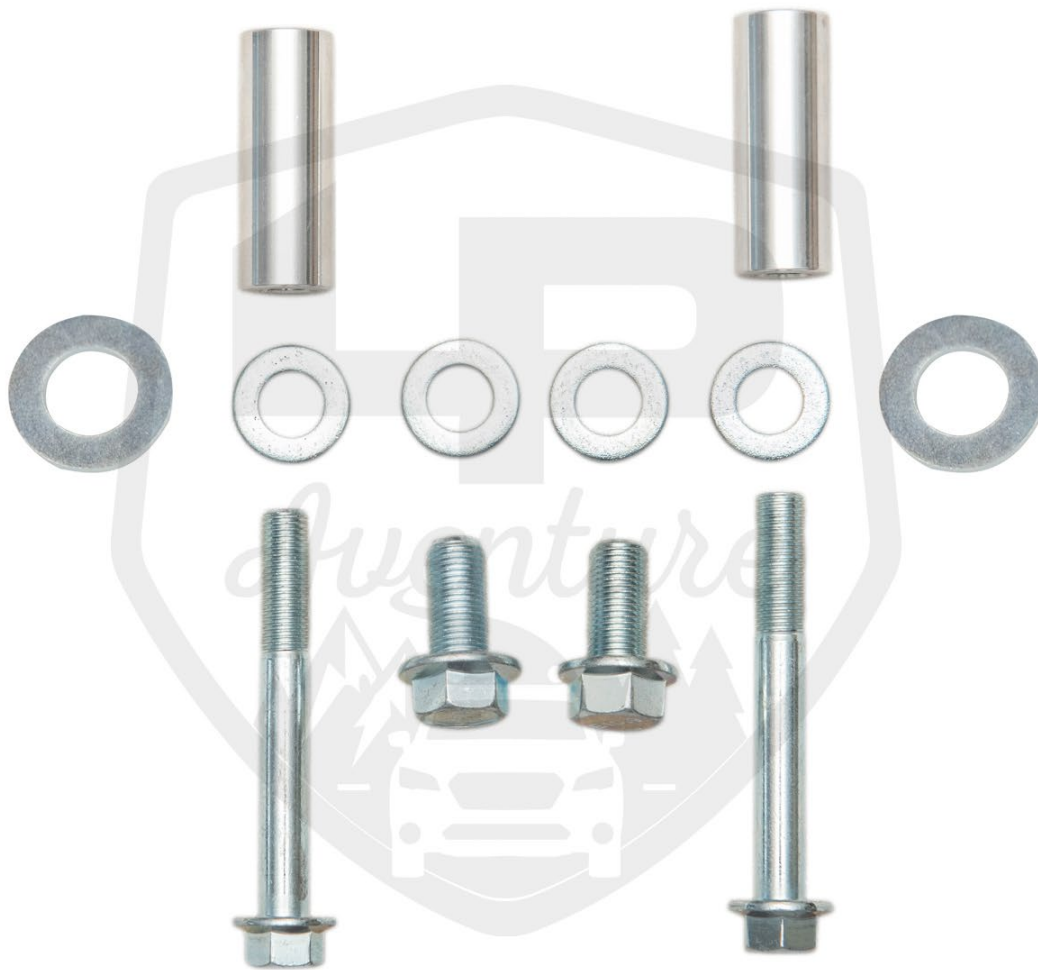




## NECESSARY TOOLS

- **We recommend the use of a lift**
- **Transmission jack** ( or regular jack if not on a lift )
- **Ratchet**
- **14mm Socket**
- **17mm Socket**

1

WITH A LP AVENTURE BUMPER GUARD INSTALLED, REMOVE THESE TWO BOLTS FOR THE REAR OF THE SKID PLATE

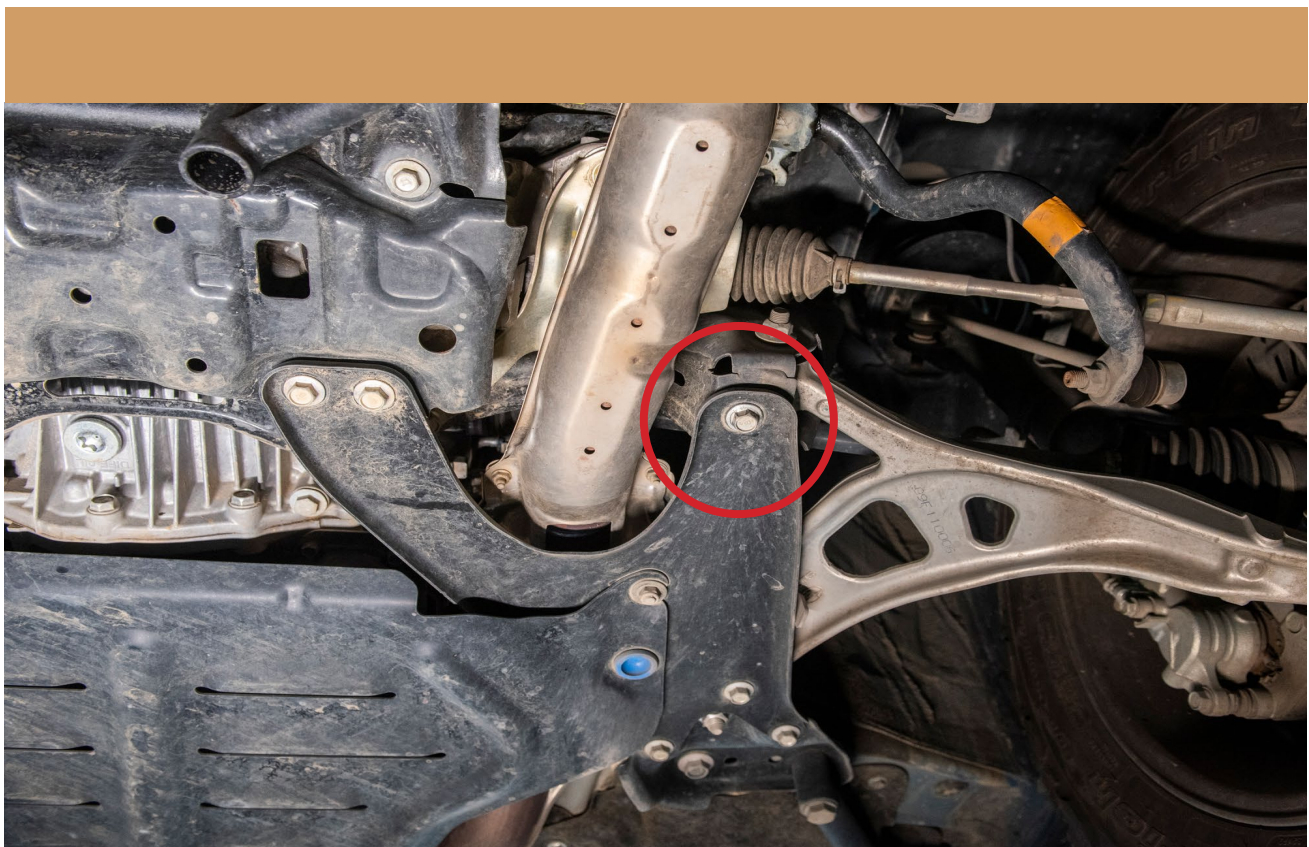



2

WITH THE HELP OF A FRIEND OR THE USE OF A JACK, LIFT THE SKID PLATE INTO PLACE



IF YOU HAVE THE OPTIONAL RALLY WASHERS, NOW IS THE TIME TO INSTALL THEM



3

FASTEN THE FRONT OF THE SKID PLATE



\*VDO NOT FULLY TIGHTEN YET





4

PLACE THE INCLUDED WASHER ON TOP OF THE SKID PLATE



5

NOW USE THE BOLT WITH THE SKID PLATE SPACER TO SECURE THE REAR OF THE SKID PLATE





6

YOU CAN NOW REMOVE THE PROTECTIVE FILM



7

## TIGHTEN ALL BOLTS



8

INSTALLATION COMPLETE!





**NOTES:**

**\*\*Tighten all the bolts to the manufacturer's specifications with a Torque Wrench\*\***

-----

**Double check your work.  
and be sure to tighten  
the nuts with a torque wrench.**

-----

**Products warnings:  
<https://lpaventure.com/pages/products-warnings>**

-----

**Limited product warranty:  
<https://lpaventure.com/pages/limited-product-warranty>**

-----



**You have completed the installation.  
Thank you for your interest  
in our products.**

**For all requests, information or  
assistance: Contact our team  
by phone at  
**1 (866) 562-1316****

**We are available Monday to Friday  
Between 8AM and 5PM (EST).**

**Or by email at :  
**SALES@LPAVENTURE.COM**  
**WWW.LPAVENTURE.COM****

**NOW, ENJOY THE RIDE!**