Description: Physical Properties:	Magnetically receptive dry-erase surface FLEXIBILITY: Can be coiled to 1/2" radius without cracking at 68°F. HARDNESS: Shore D45 MACHINABILITY: Diecutting, Knife-cutting etc., cleanly & with ease. SPECIFIC GRAVITY: 3.6

Material should be stored in a Dry Place at a temperature range of 15C to 25C and 50% rela-

Delivery: Adhesive:

Storage:

Express 24 Hours

Ways FlexiSheet Can Be Installed



Install using a heavy duty water-based ready mix vinyl-over-vinyl adhesive

tive humidity with rolls stored horizontally in original packaging

The Following Tools Are Good To Have:



General Guide

1. Preparation



- Remove all old backing paper from wall surface. Ensure hanging surface is smooth, clean, dry in depth, of a uniform colour and in a sound condition.
- Surface should be free from contaminants such as dirt, dust, grease, mildew, ink stains; etc any of these can prevent adhesion taking place.
- Wash with detergent solution, rinse and allow to dry.
- Fill cracks and holes with a proprietary filler in accordance with the manufacturer's instructions.
- Treat any areas showing mould growth.
- Ensure floors are swept clean to avoid dirt gathering at skirting level.
- Ensure that you are installing under adequate lighting conditions.
- Site temperature should not be below 12°C (55°F). Avoid excessive heat until adhesive is fully dried

Surfaces

Emulsion Paint:


If the wall is sound and in good condition, the adhesive can be applied straight on to emulsion paint. If there is any damage, flakiness it is best to prime the surface. Abrade surface to provide a good key. Wash and dry thoroughly, apply one coat of water based primer we recommend zinsser bulls eye 1-2-3.


Non-porous surface (glass, gloss paint etc): Abrade surface to provide a good key. Wash and dry thoroughly.


Porous Surface (plaster, cement render etc): Ensure old plaster stable and free of mould. Ensure new plaster dry in depth. Seal with a water based primer


- Depending on what type of surface you are installing this product onto, the adhesive used will vary
- If applying directly onto a wall use the water based adhesive
- If applying onto a substrate such as MDF or Foamex first, use the Solvent based adhesive


Hanging Instructions

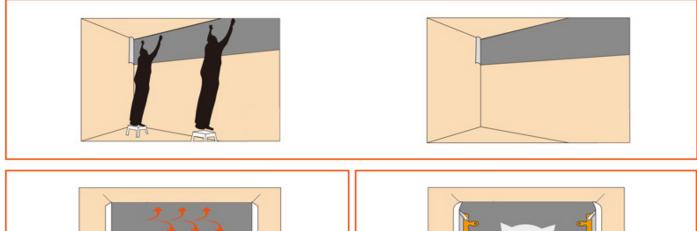

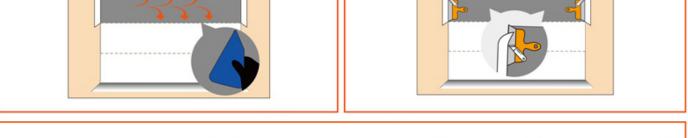

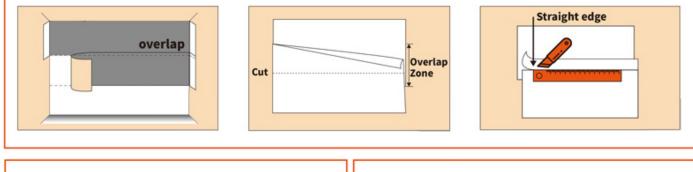

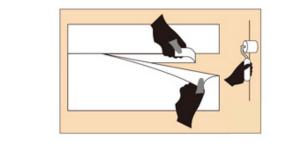

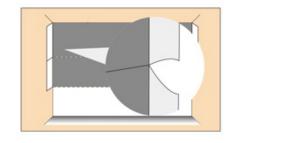

- Cut the FlexiSheet to required length
- Pour paste into paste tray
- Paste the wall with roller
- Apply the FlexiSheet lengths edge to edge (vertically or horizontally)
- The roll edges of the FlexiSheet do not always achieve a tight edge to the edge joint when fixed to walls. To obtain a tight edge tot edge joint the edges of adjacent rolls must be overlapped on the wall by approx. 10-15mm and then cut down the centre of the overlap. The cut off edges should then be discarded and the roll edges joined along the new clean edge line.
- Use a soft wallpaper brush to remove bubbles and creases
- Use a straight edge and trimming knife or scissors at any corners
- Remove any excess paste with a damp sponge
- Leave to dry thoroughly (24 hrs)
- The wall is now ready to hold magnets and write on with dry erase pens

Care of surface:

- For writing use only DRY ERASE whiteboard pens
- For increased magnetic pull use strong magnets
- For best results clean regularly with a whiteboard cleaner and conditioner <u>Do not</u> use abrasive cleaners.