

## MATS LE-STICK TAP


If you don't frame in your mats with wood borders or similar, our double sided tape is a great and easy way to keep your mats snugly fit together. www.FUJIMATS.com

Mop & Vacuum your floor. Your subfloor should be VERY clean before you lay mats.

Lay mats in the pattern of your choice. Make sure all mats are butted tightly together!

Tip: Make cuts last, and put the cut edge against the wall where possible.

Tip: Use small pieces of tape to help secure the mats as you work.

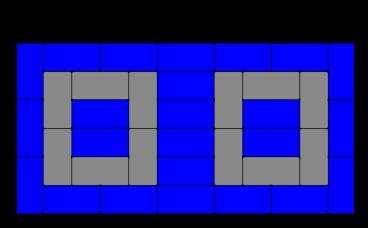

Lift the border mats and apply Fuji Double Stick Tape around the perimeter (www.fujimats.com)

Be sure to keep your layout intact as you move mats

> 1 or 2 runs around the perimeter of the layout should suffice.

Re-lay the border mats & start training!!

If you get any gapping, be sure to re-clean your space, and re-apply tape as needed.

Your layout should be super tight!

